


ARTICLE.

VERSION 1.0

Assembly Instructions

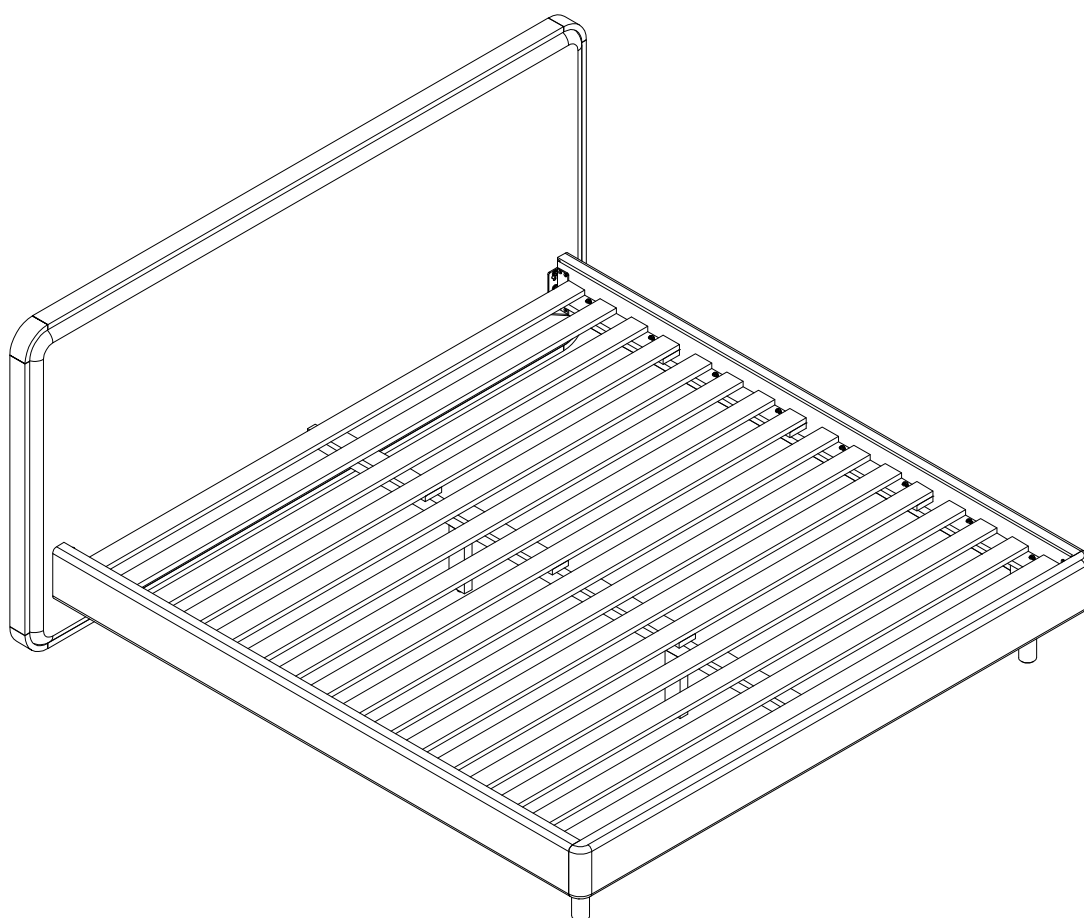

BJORN

BED

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

!


Structural integrity is only guaranteed if all bolts are installed and properly tightened.



TIME







OF PEOPLE

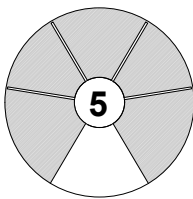



DIFFICULTY



!

DO NOT DRAG BED, ALWAYS LIFT WITH AT LEAST TWO PEOPLE BEFORE MOVING


ID	DESCRIPTION	QTY
1	HEADBOARD 	1
2	FOOTBOARD 	1
3	RIGHT RAIL 	1
4	LEFT RAIL 	1
5	SUPPORT RAIL 	1
6	CENTER LEG 	2
7	WOOD CORNER 	2
8	LEGS 	2
9	SLATS 	4
10	METAL 	2

ID	DESCRIPTION	QTY
A	M8 × 25MM BOLT 	12
B	M6 × 20MM BOLT 	6
C	M6 × 60MM BOLT 	4
D	M6 × 40MM BOLT 	24
E	8.5 LOCK WASHER 	12
F	8.5 WASHER 	12
G	6.5 LOCK WASHER 	30
H	6.5 WASHER 	30
I	ALLEN KEY 	1

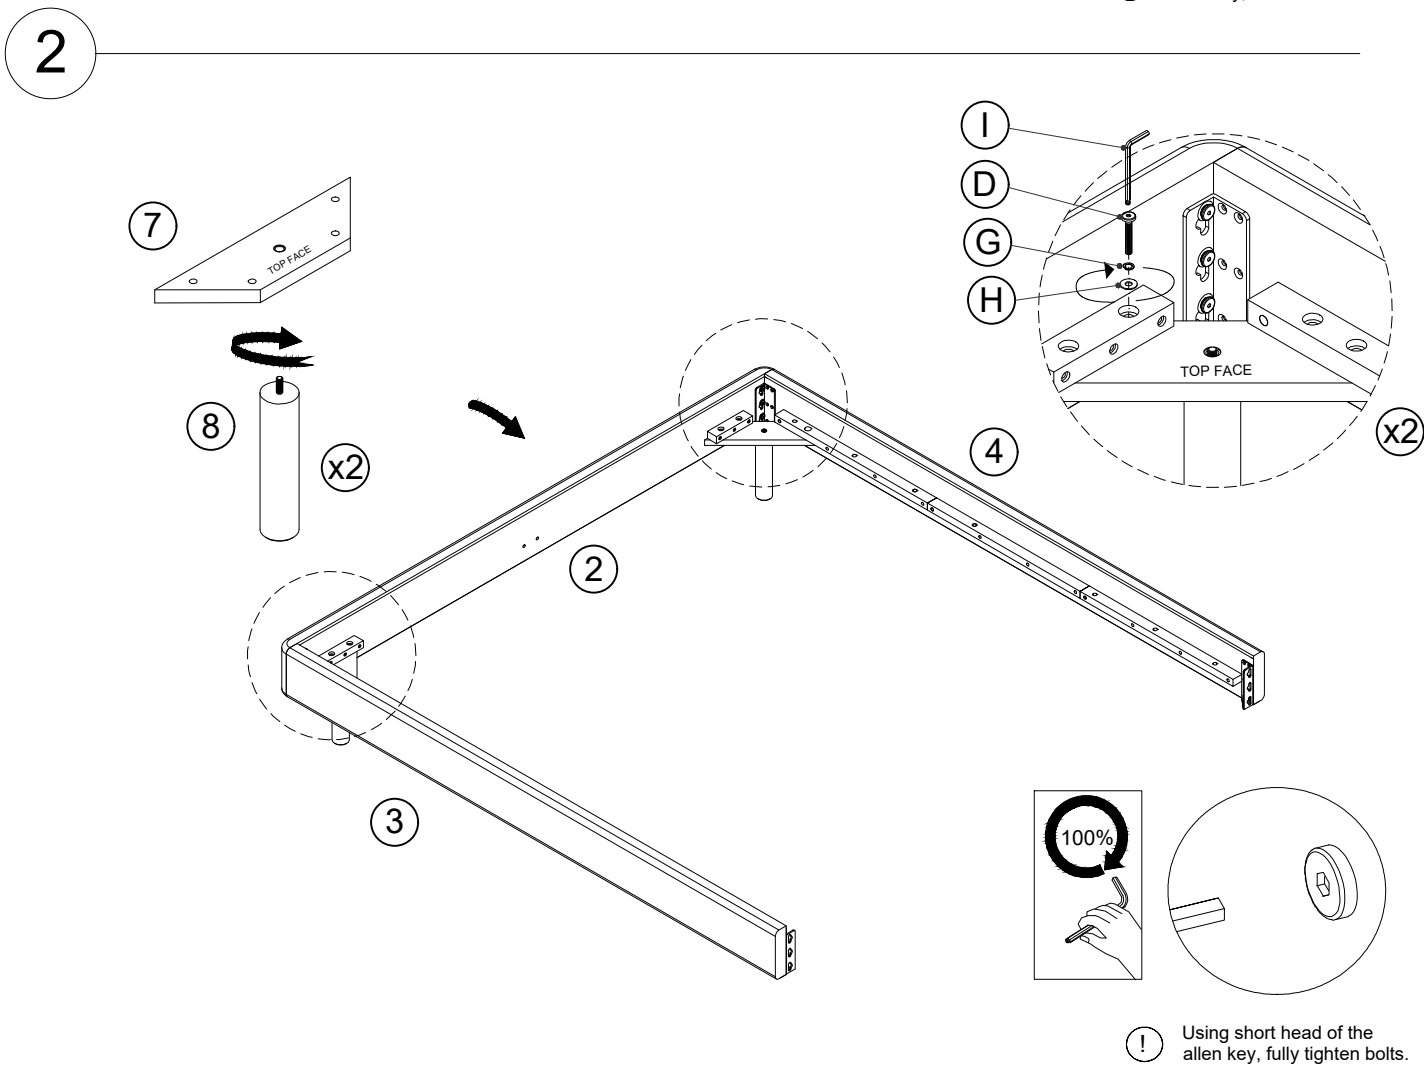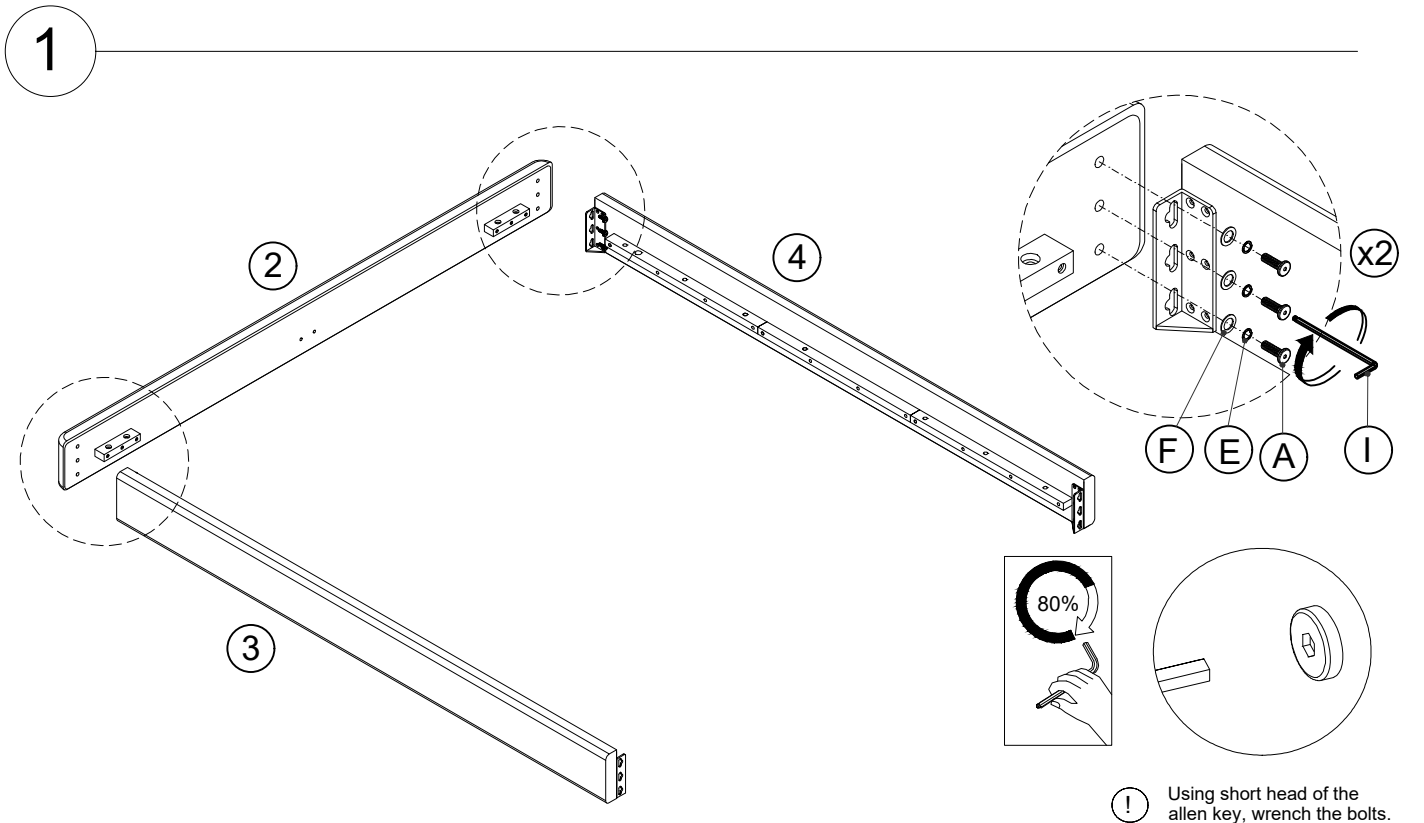

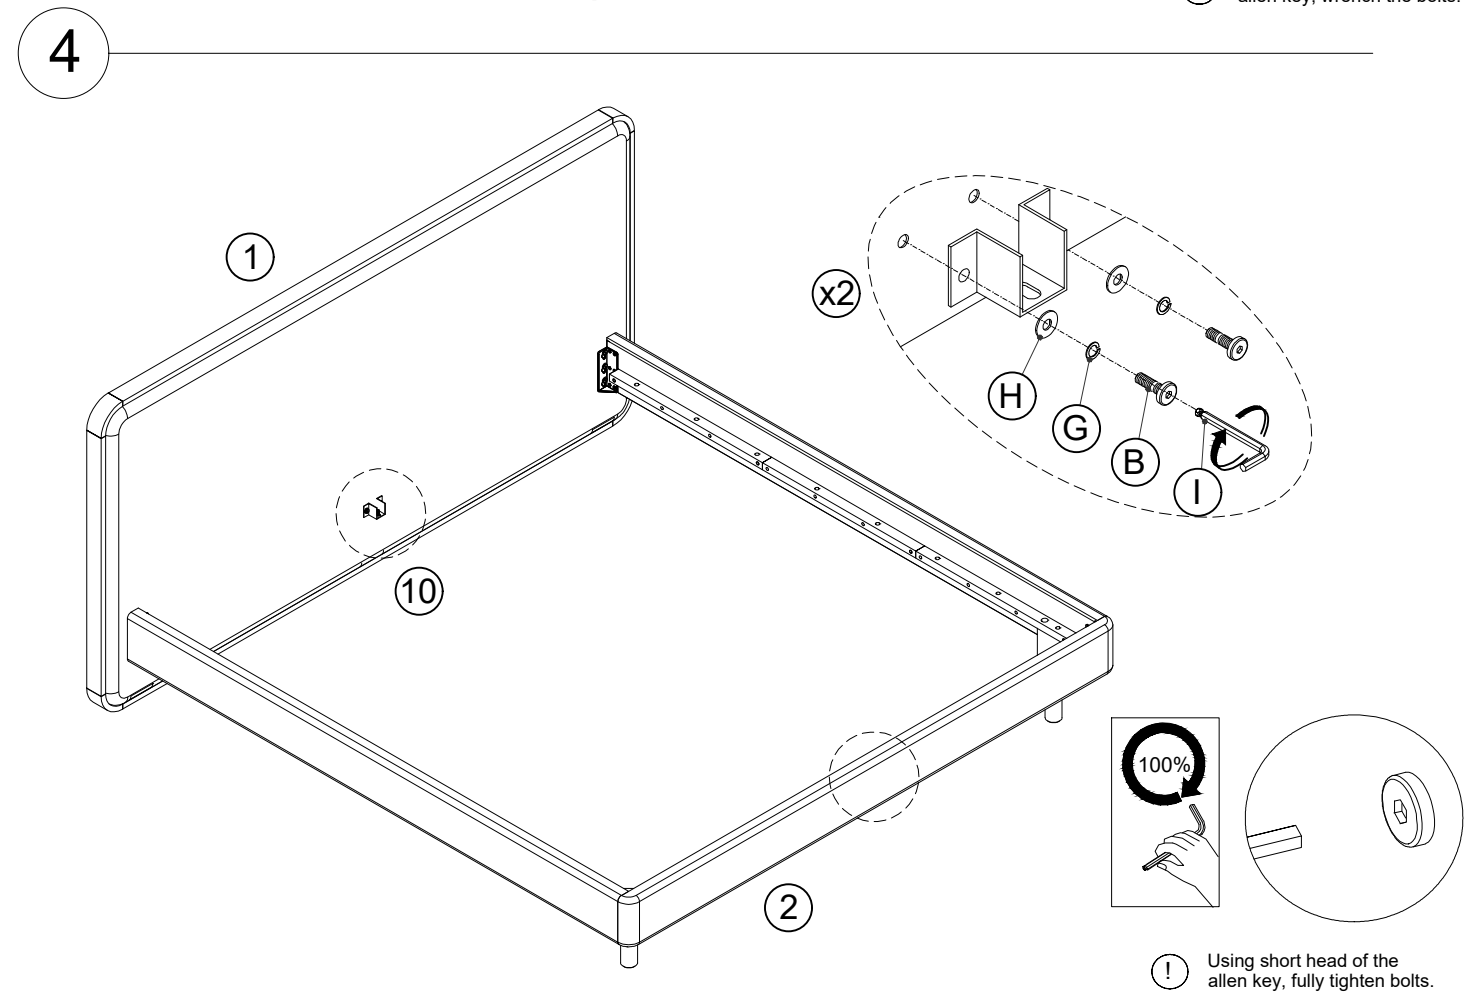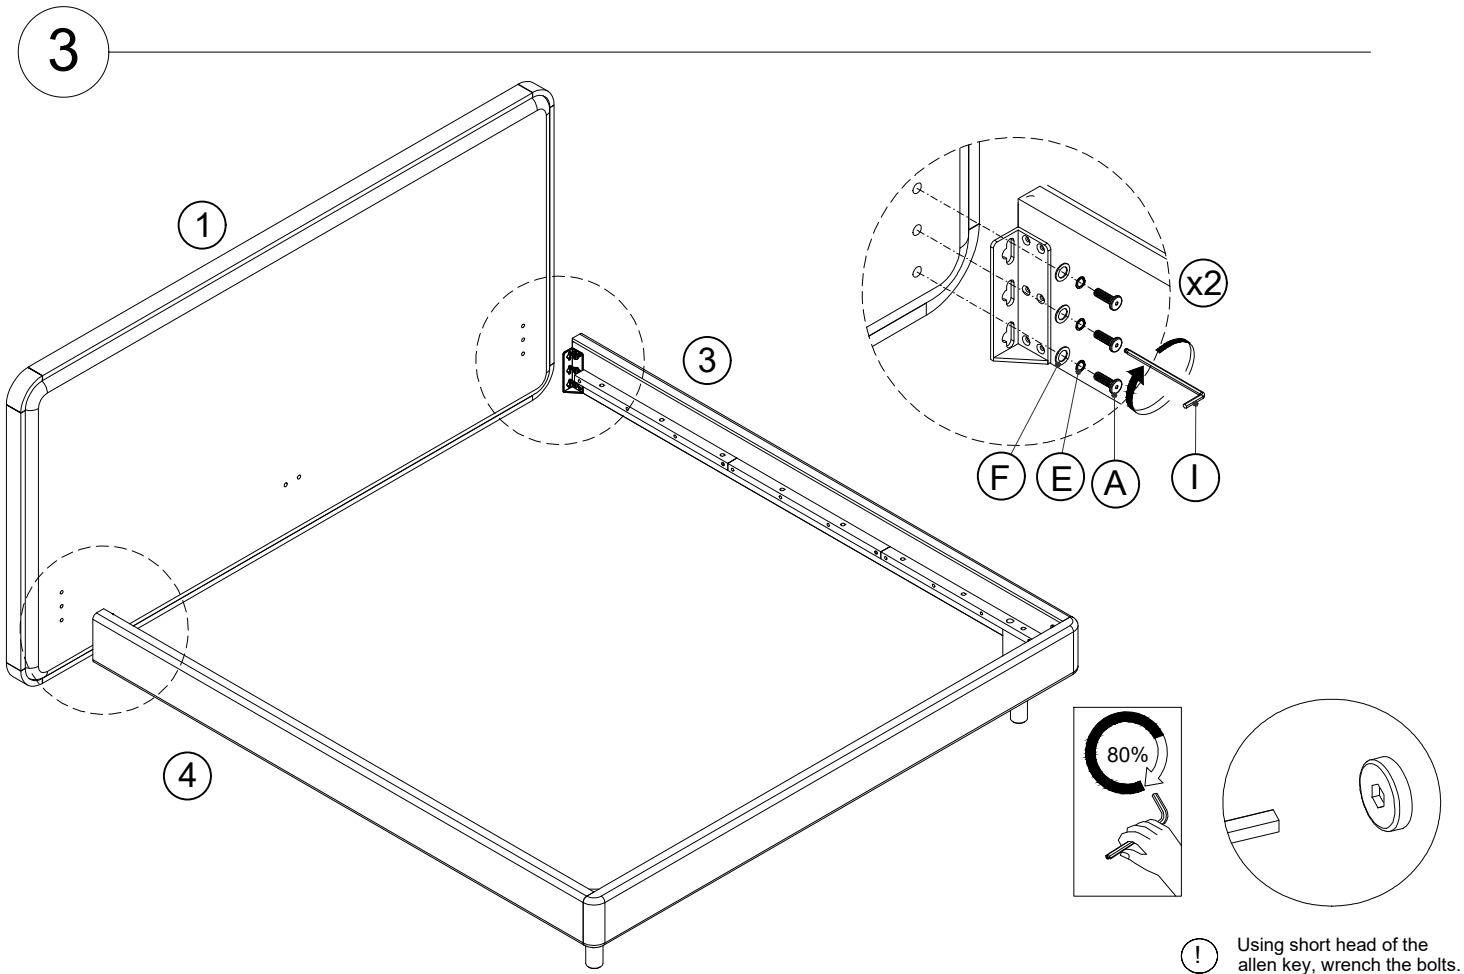


5

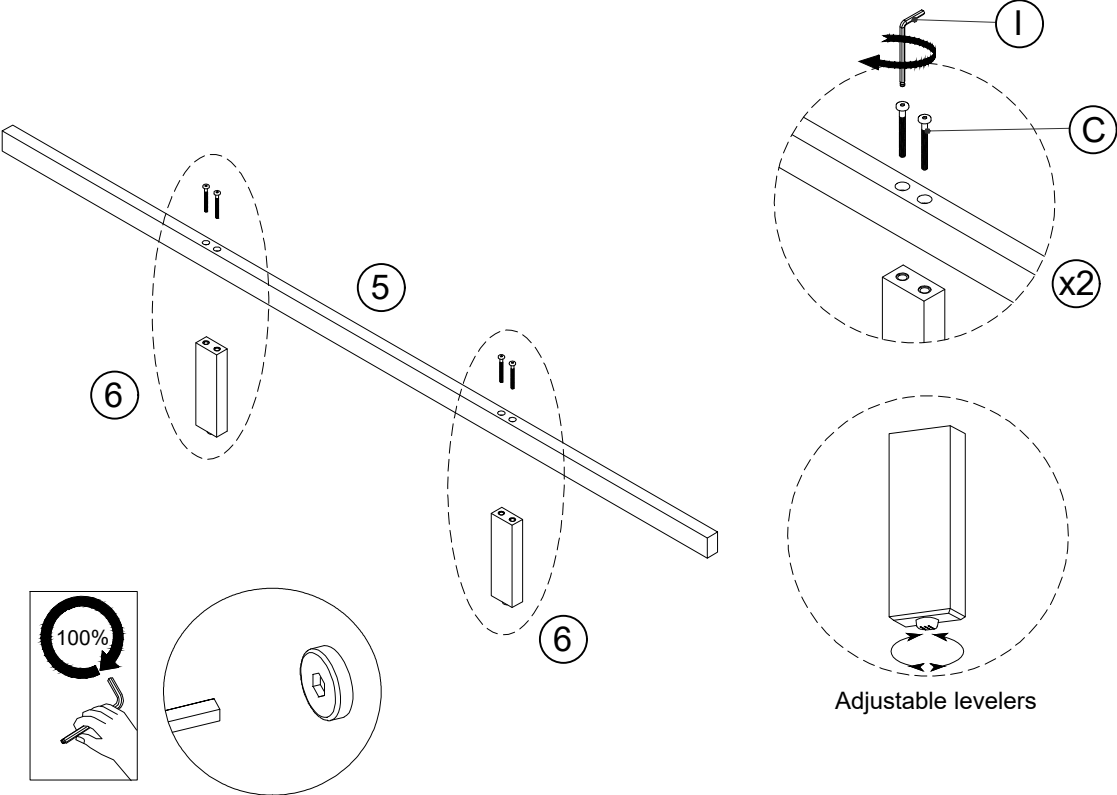

! Using short head of the allen key, fully tighten bolts.

6

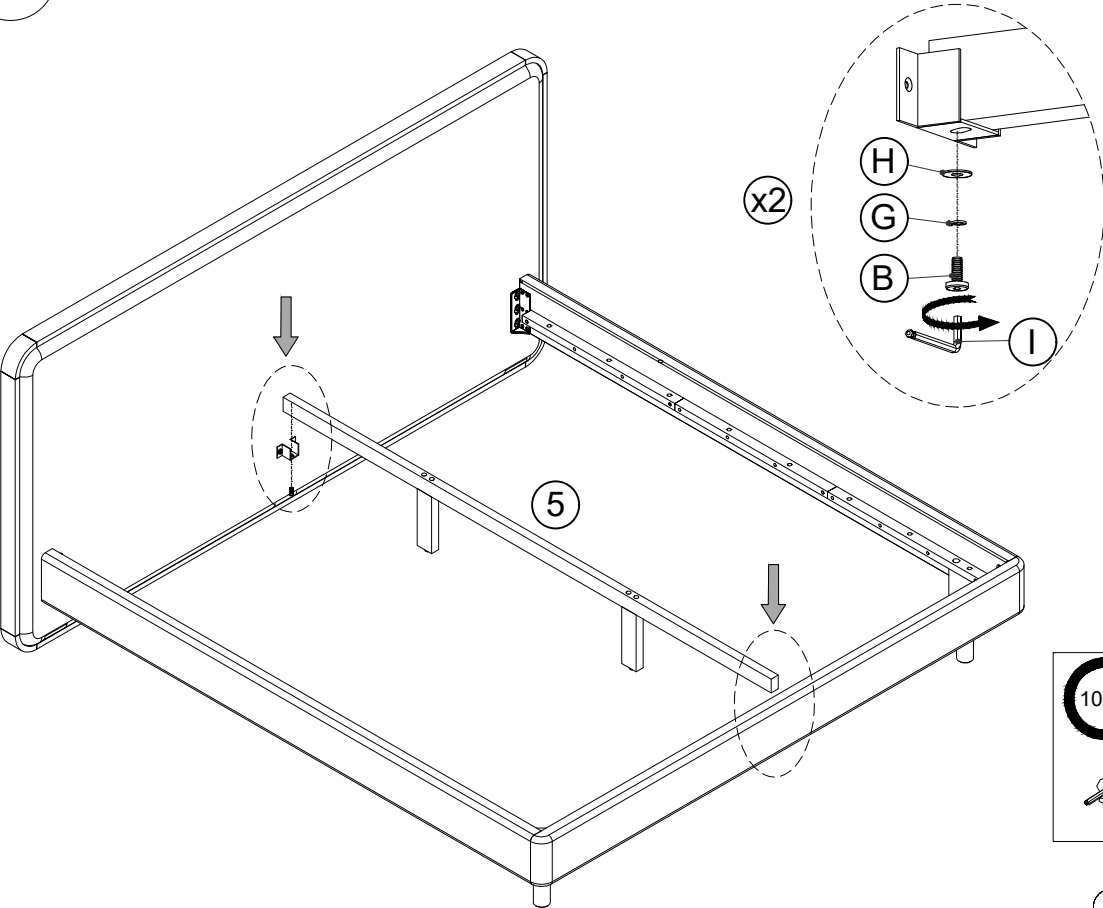

! Using short head of the allen key, fully tighten bolts.

