


ARTICLE.

VERSION 1.0

Assembly Instructions

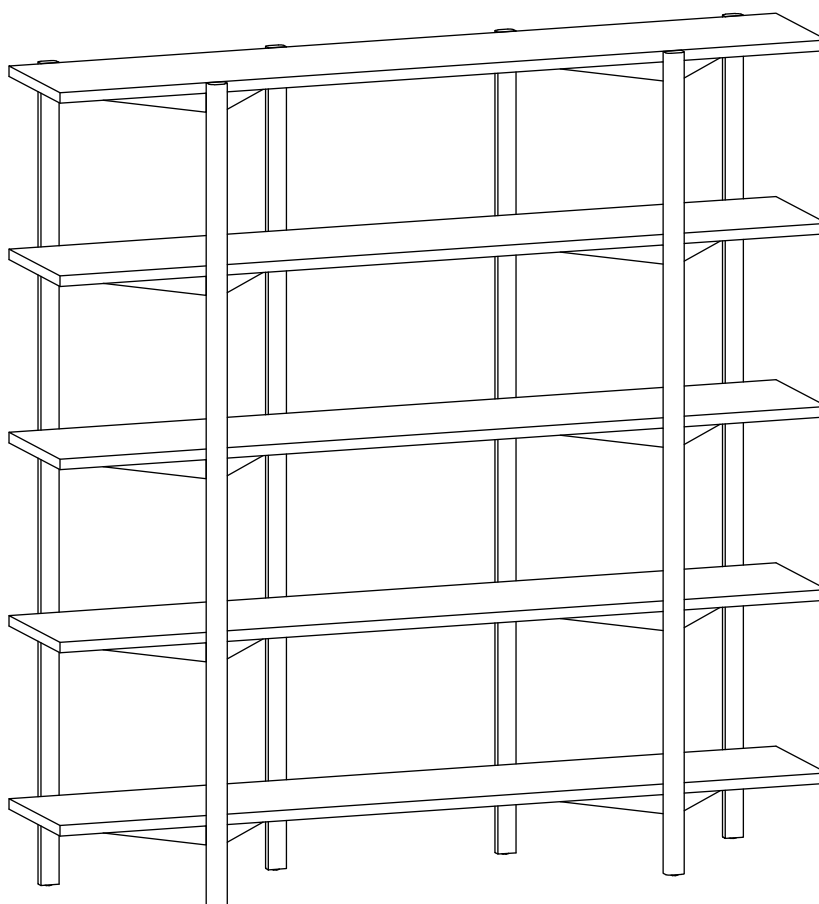

ZANDER

75" Bookcase

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.



TIME




OF PEOPLE

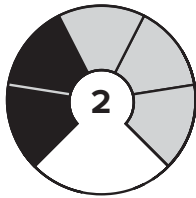

DIFFICULTY



PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	SHELVES	5
B	LEG FRAME	2

HARDWARE / TOOLS INVENTORY		
ID	DESCRIPTION	QTY
C	M6x50MM BOLT 	30
D	M6 WASHER 	30
E	M6 LOCK WASHER 	30
F	ALLEN KEY 	1

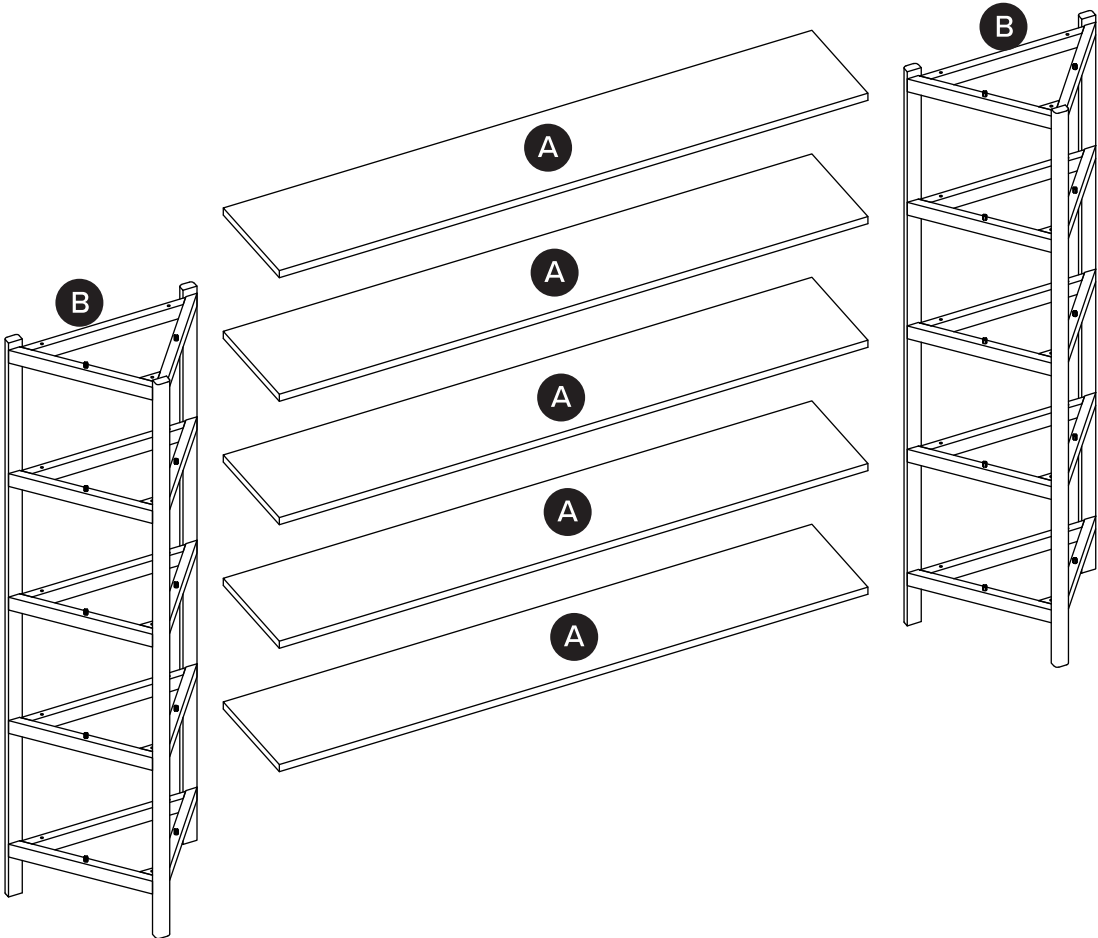


1

Place the top and bottom shelves first

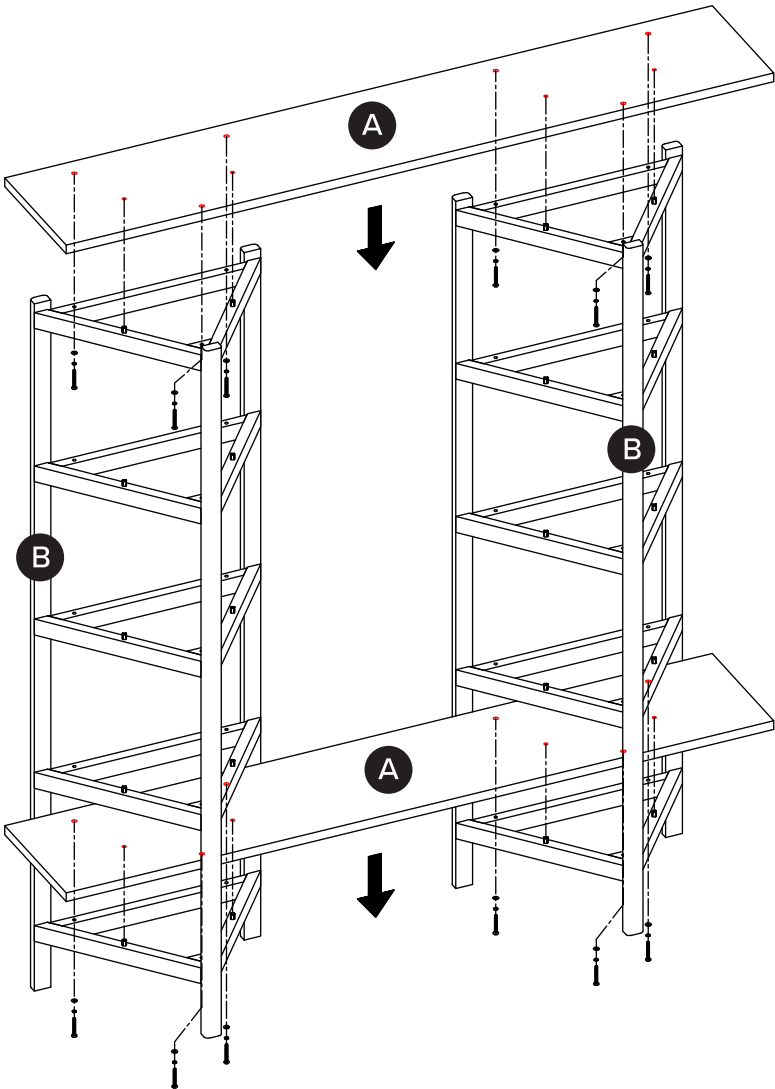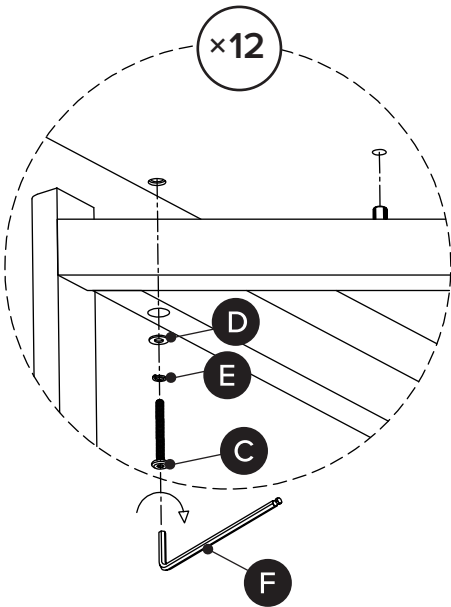


2


Then place 3 shelves in the middle.

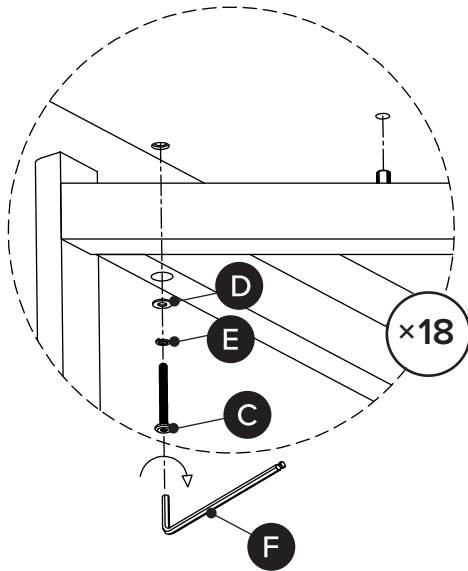

Tighten all bolts fully (100%),
including the ones from the previous step.

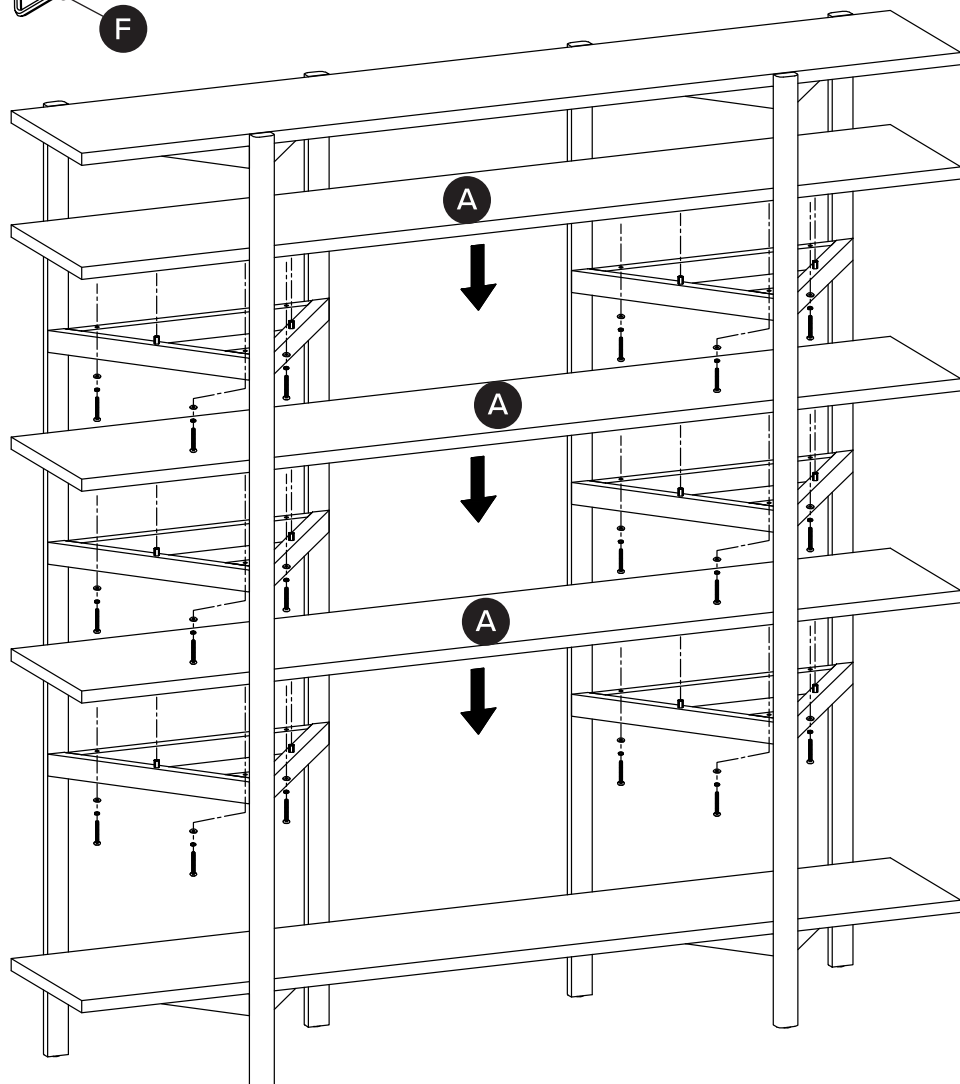

3

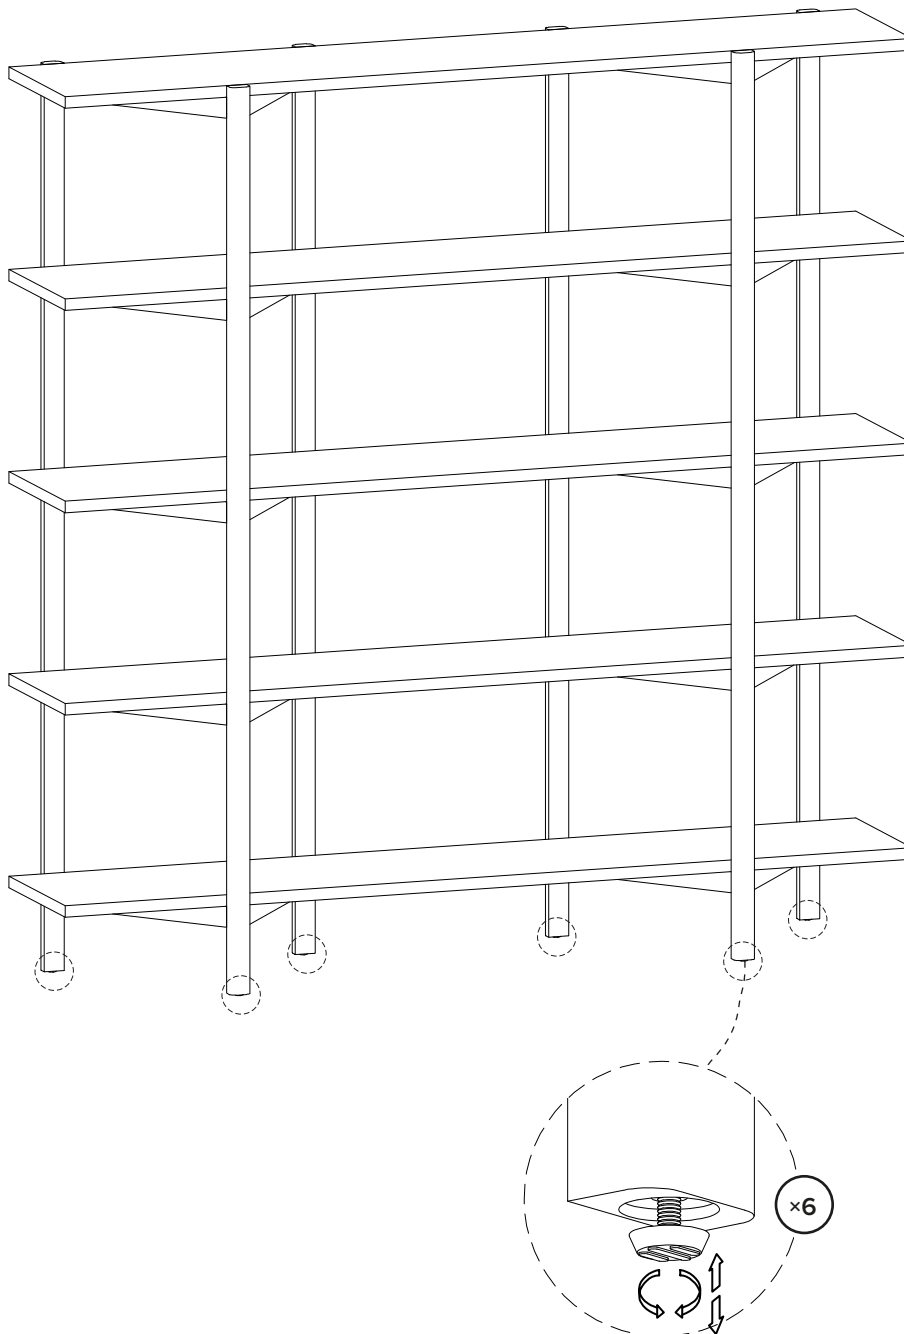

Adjust the leveller to stabilize the furniture if it is unbalanced.



ANTI-TIP RESTRAINT INSTALLATION

 WARNING!


Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.



20 min



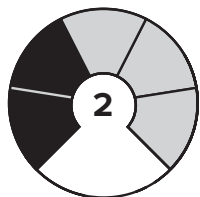



2

TIME

OF PEOPLE

DIFFICULTY

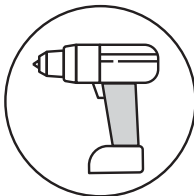

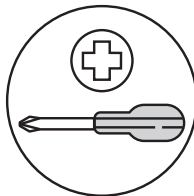

REQUIRED TOOL


REQUIRED TOOL

8MM / 5/16" DRILL BIT

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW		4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW		4
E	STRAP		2


 Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

1

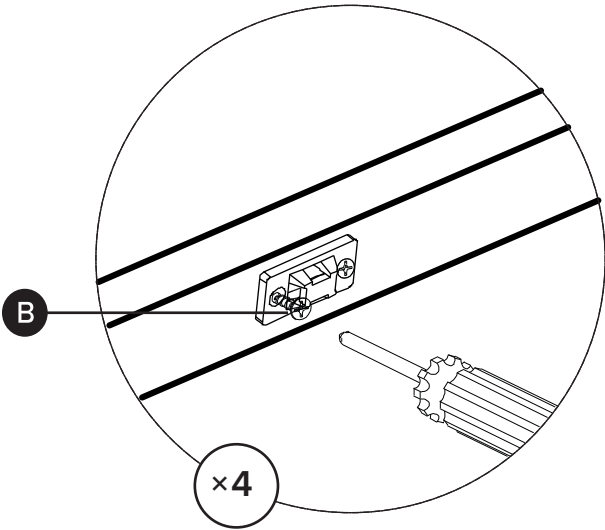


Attach pair of brackets to the back of the unit.

2


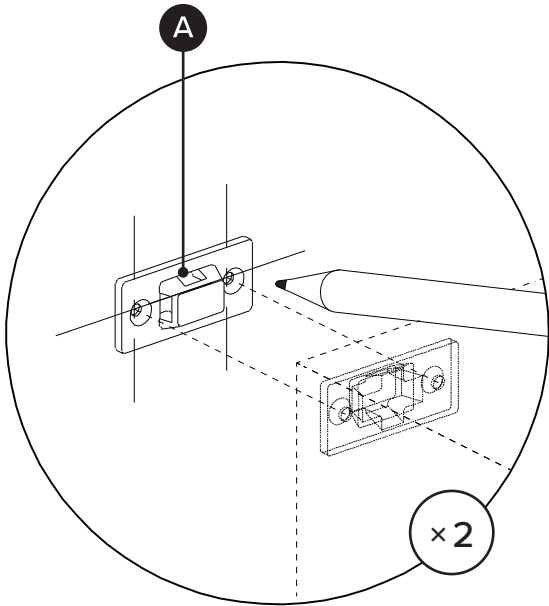


Mark on wall where second pair of brackets should be placed.

3

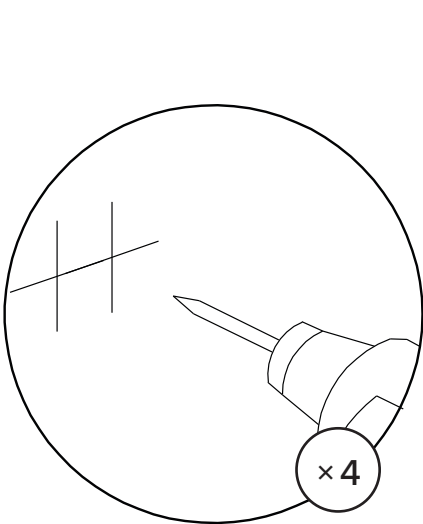

Drill holes in wall using
8mm / 5/16" drill bit.

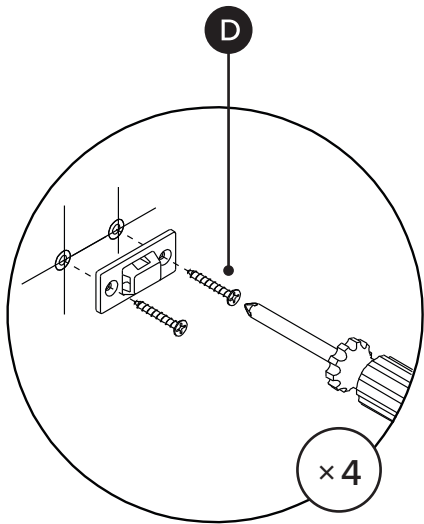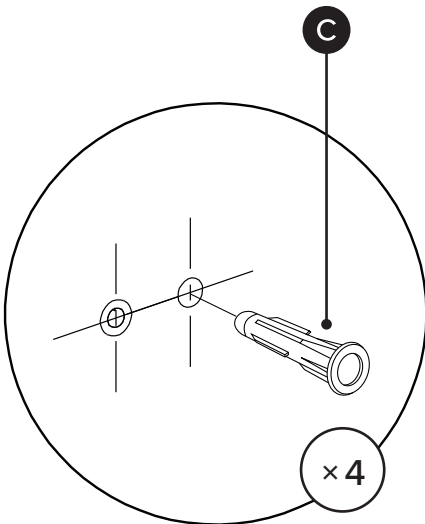

4

