


# ARTICLE.

VERSION 1.7

## Assembly Instructions

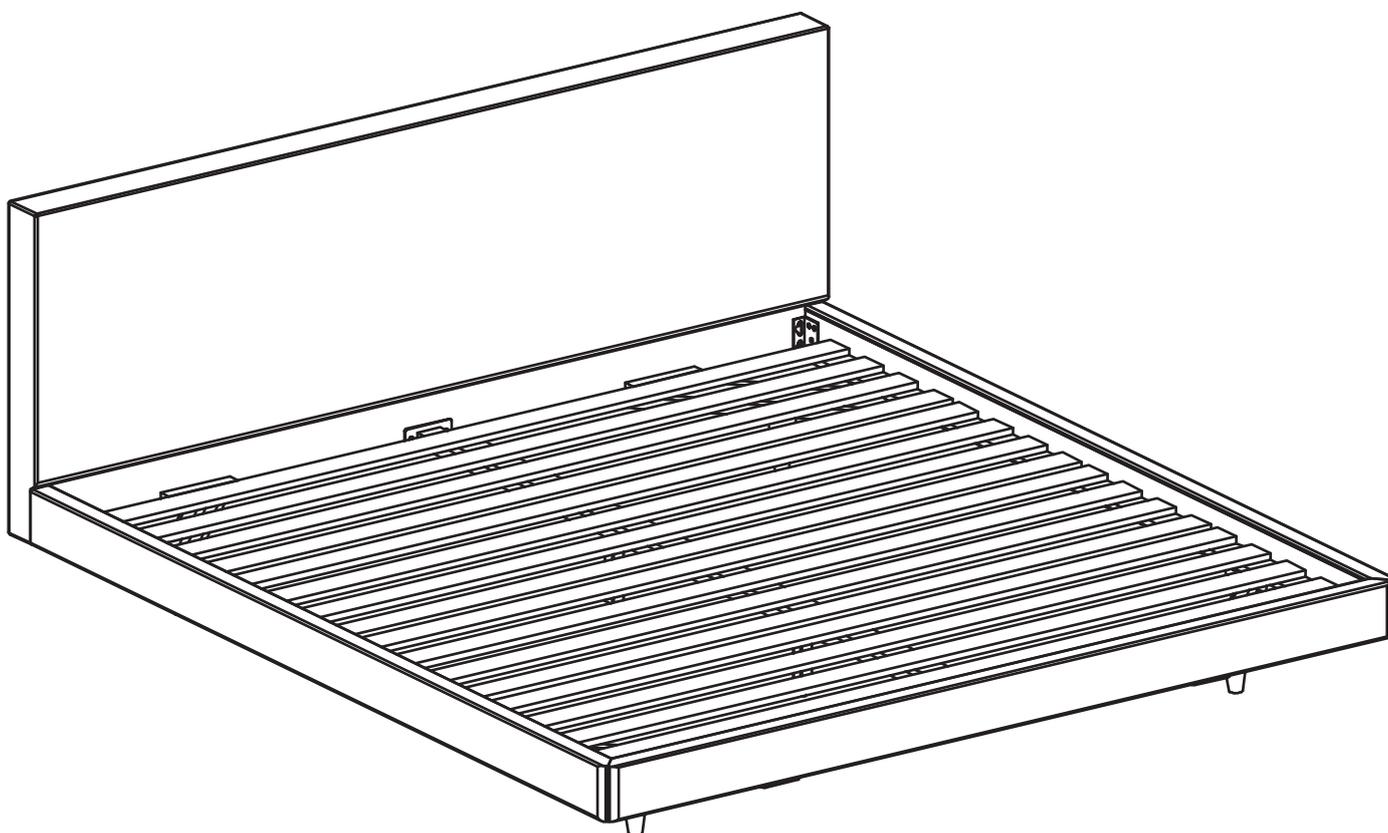

# TESSU

Bed

## ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email [service@article.com](mailto:service@article.com) or chat live at [article.com](https://www.article.com).



TIME

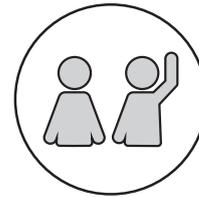

# OF PEOPLE





DIFFICULTY

PARTS INVENTORY		
ID	DESCRIPTION	QTY
<b>A</b>	FOOTBOARD	1
<b>B</b>	RIGHT SIDE FRAME	1
<b>C</b>	LEFT SIDE FRAME	1
<b>D</b>	HEADBOARD	1
<b>E</b>	CORNER LEG 	4
<b>F</b>	CORNER LEG FRAME	4
<b>G</b>	CENTER FLOATING LEG 	2
<b>H</b>	CENTER FRAME	1
<b>I</b>	SLATS	4

PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
<b>J</b>	M8 WASHER 	28
<b>K</b>	M8 LOCK WASHER 	28
<b>L</b>	M8 × 40MM BOLT 	28
<b>M</b>	ALLEN KEY 	1
<b>N</b>	M6 × 40MM BOLT 	16
<b>O</b>	M6 LOCK WASHER 	16
<b>P</b>	M6 WASHER 	16




1

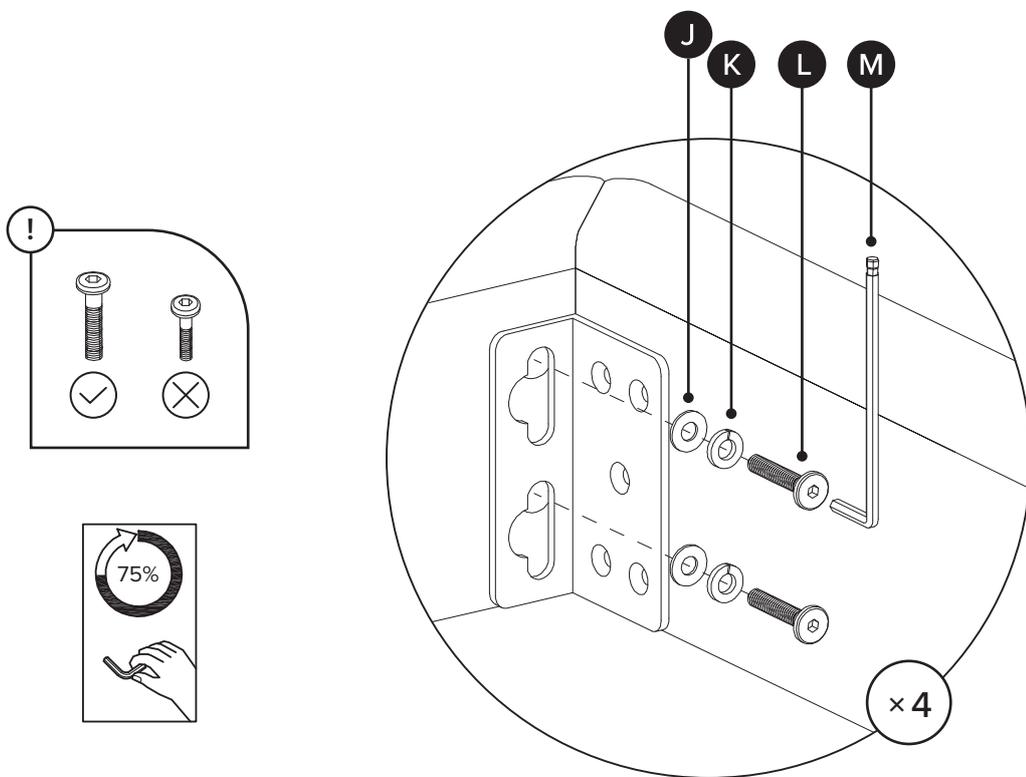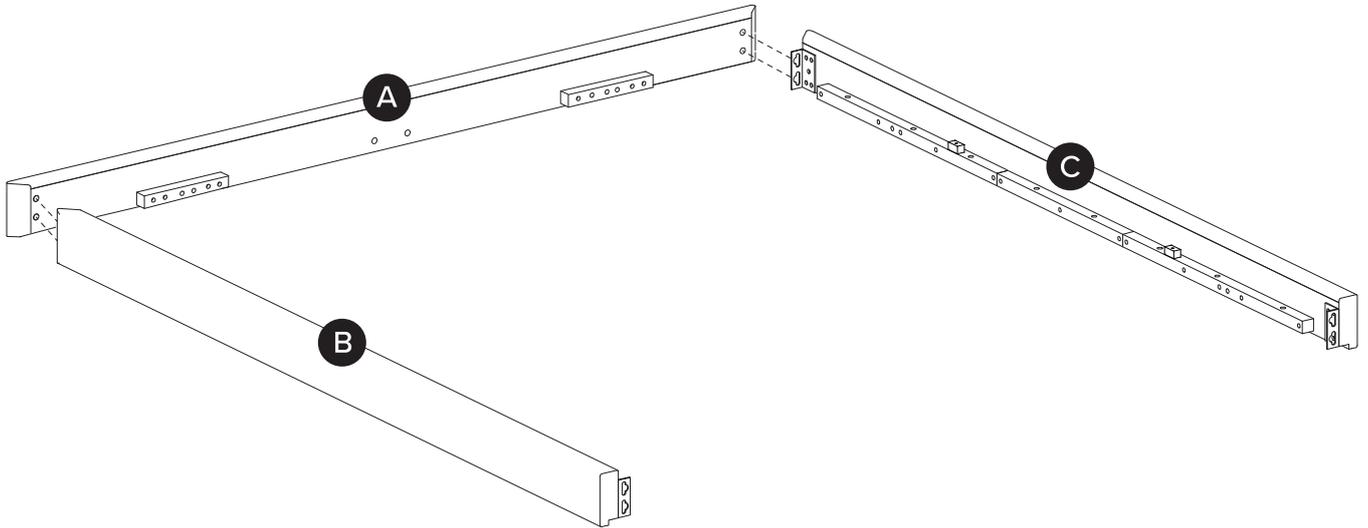

! Turn bolts (L) by hand first. Do not fully tighten bolts (L) on corner frames until step 2.


2

! Make sure to level the right side frame (B) and left side frame (C) metal brackets at a 90 degree angle before attaching to the headboard (D).

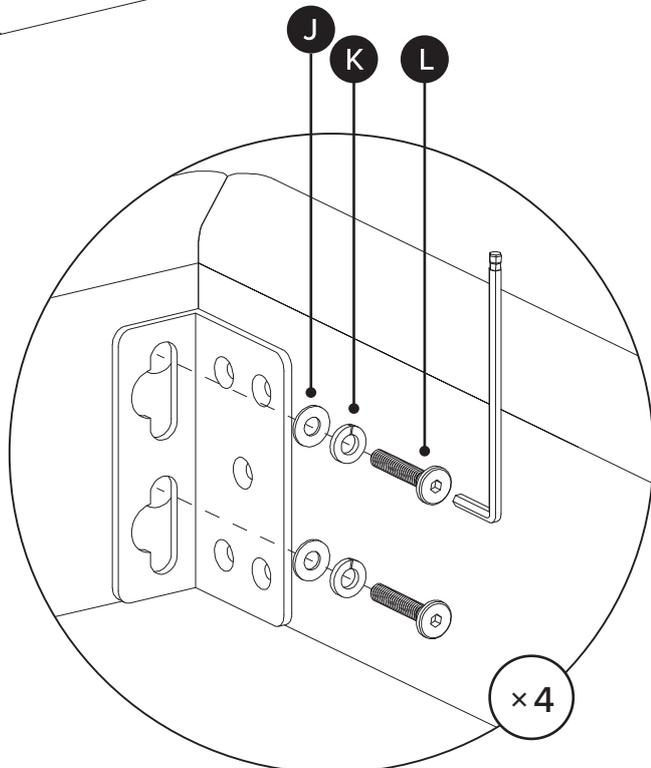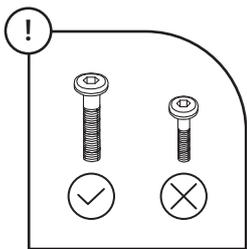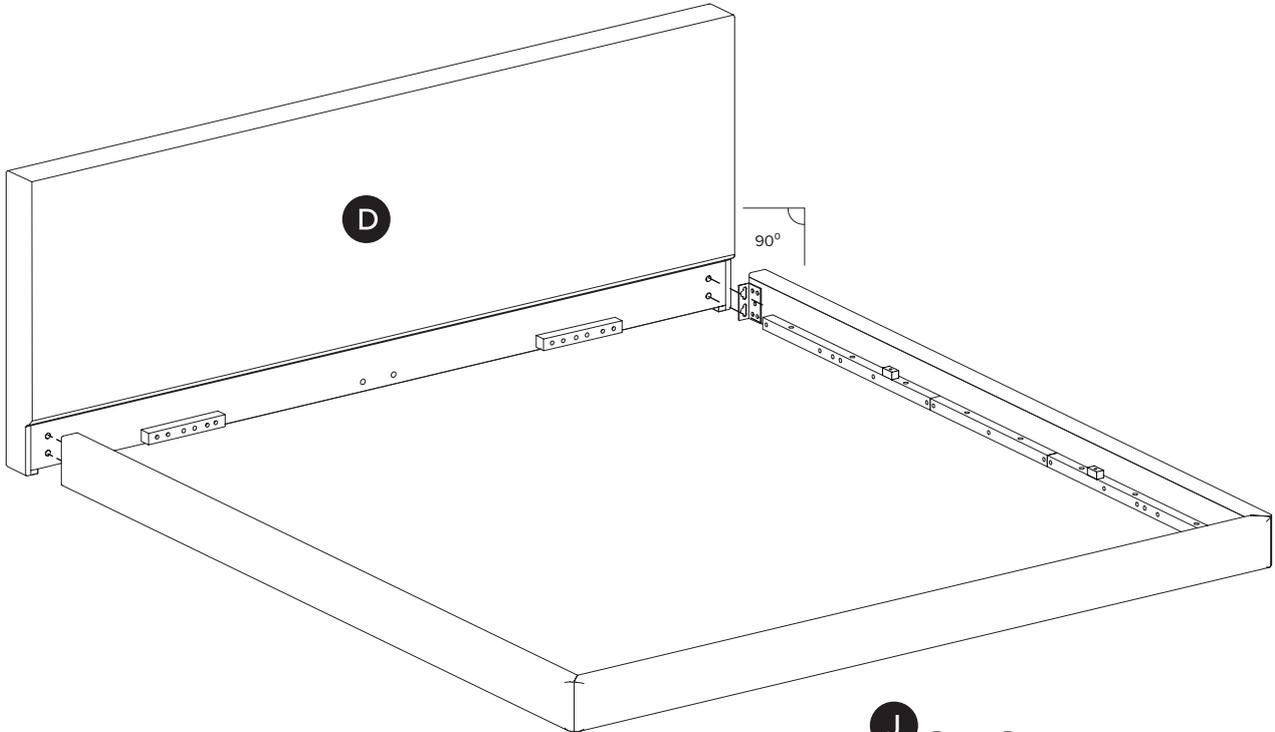


! Turn the bolt (L) by hand first. Fully tighten bolts (L) on corner frames after the side rails are flat.


3

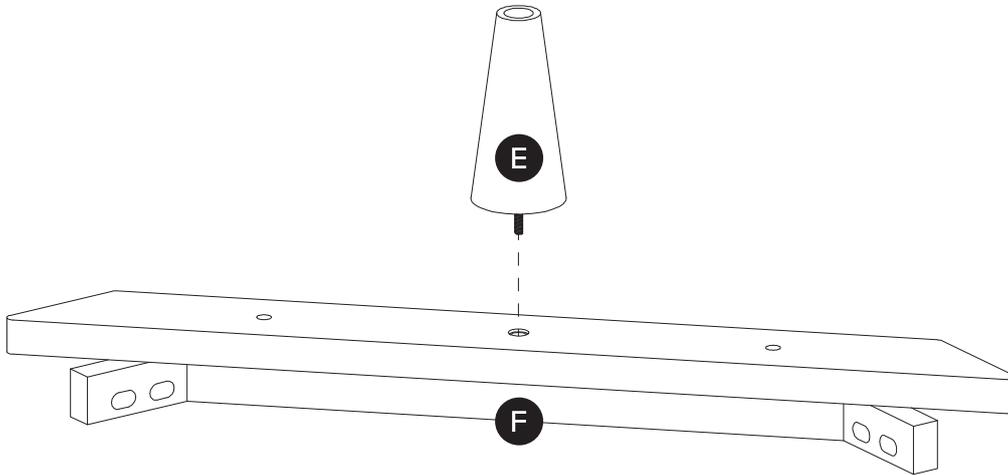


4

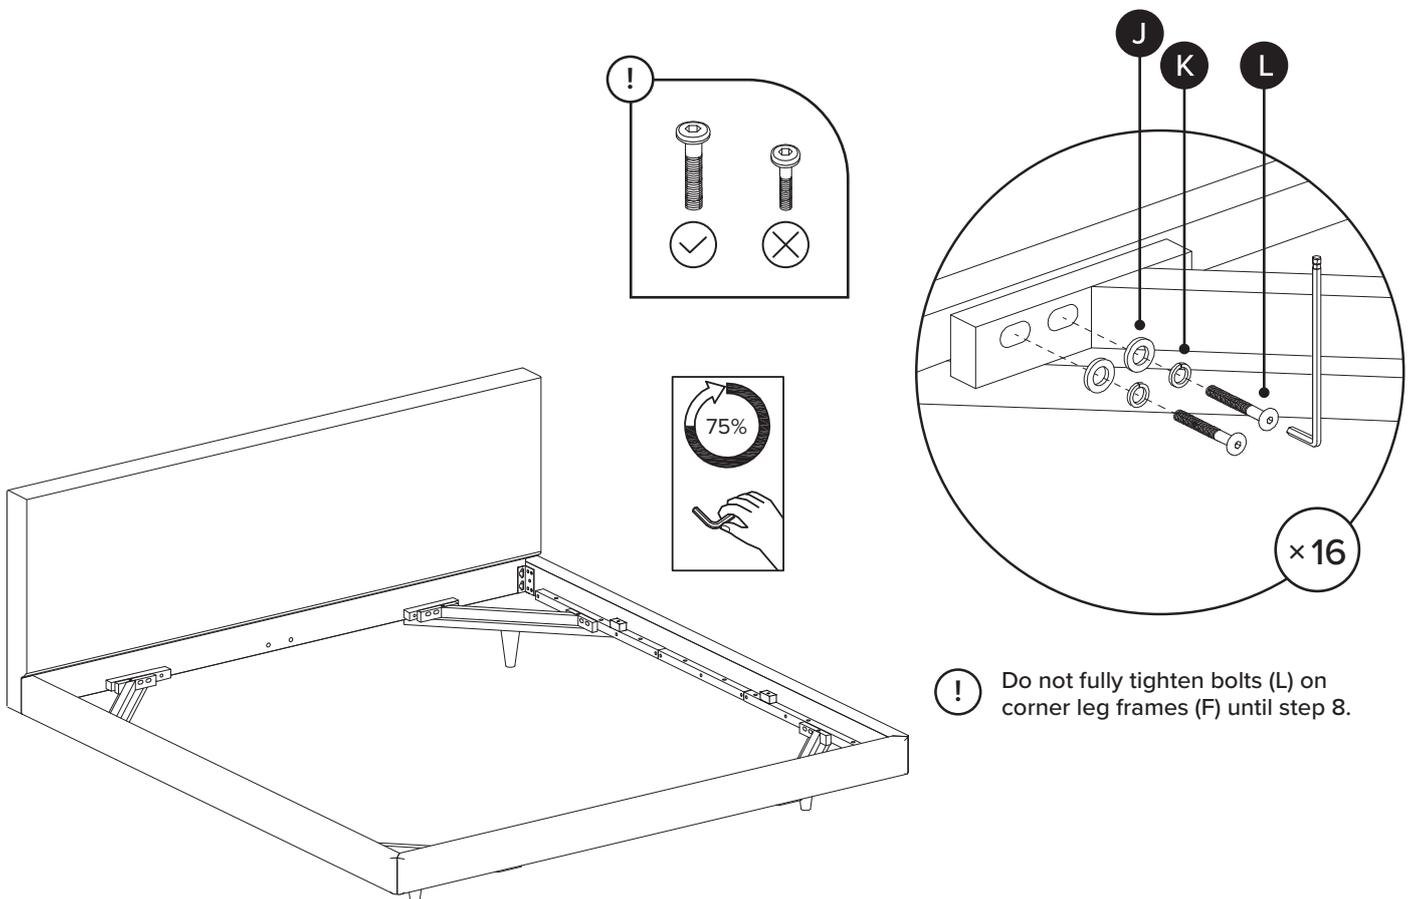

5


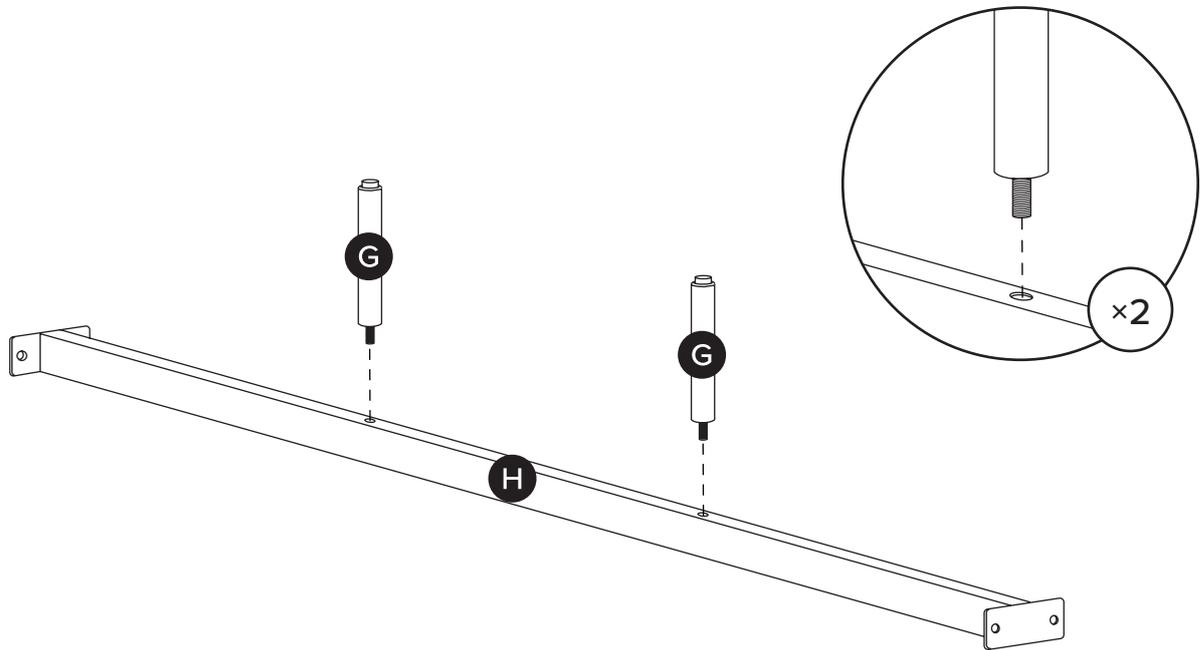


6

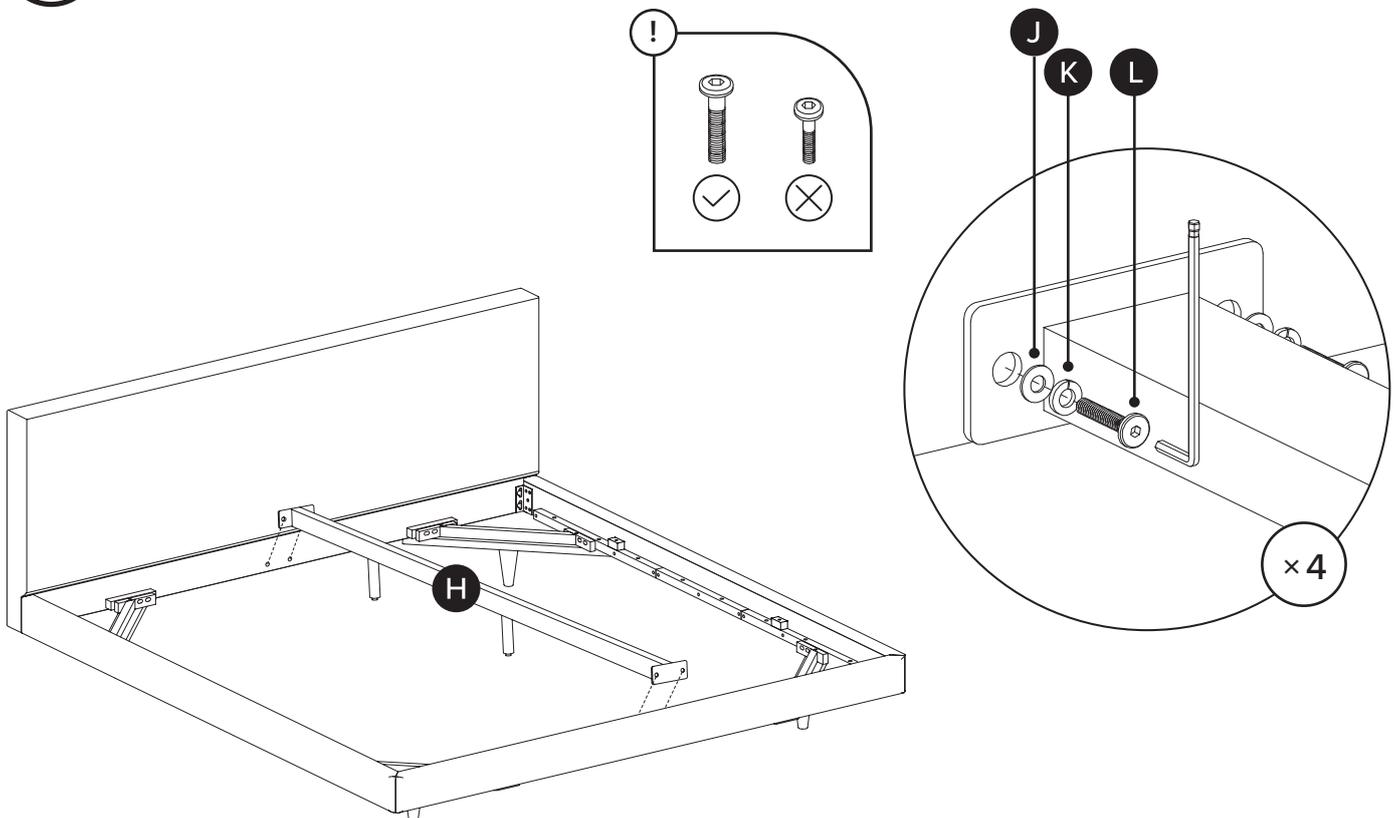


7

! Install 2 slats (I) between the 2 side rail center blocks.

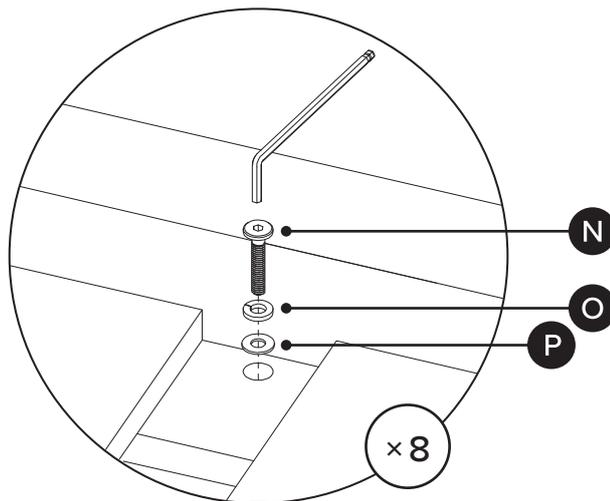
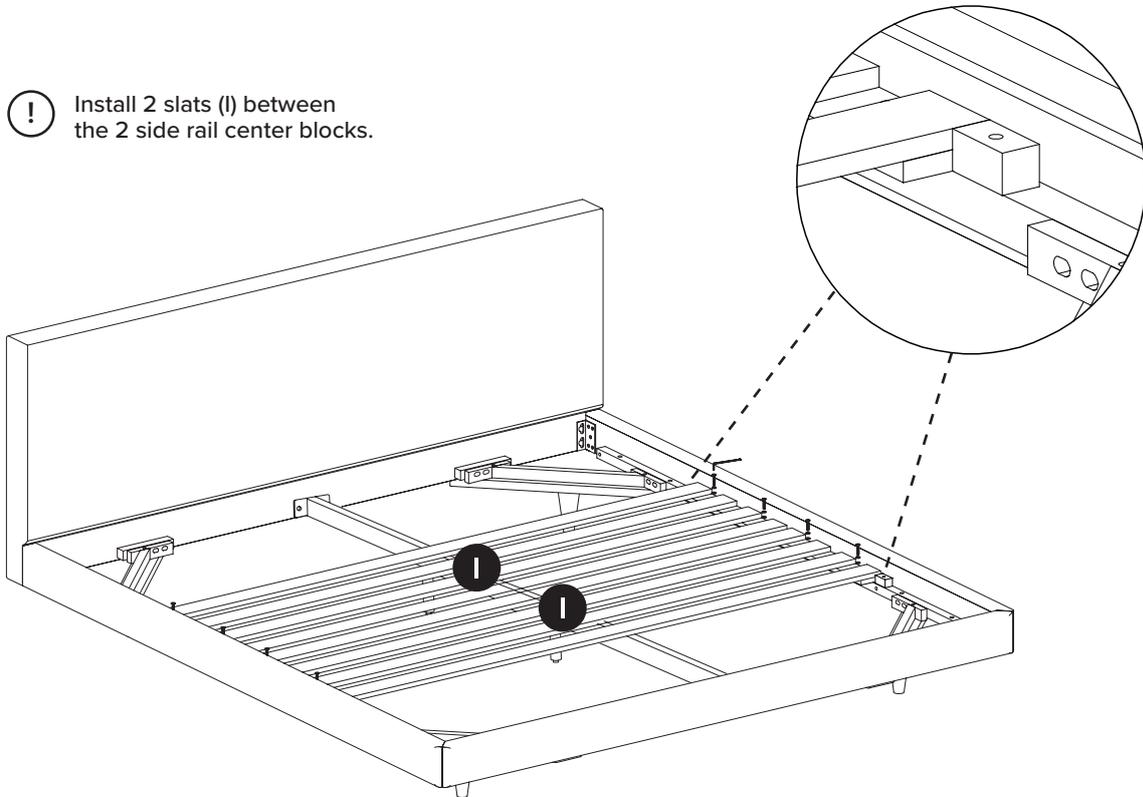


8

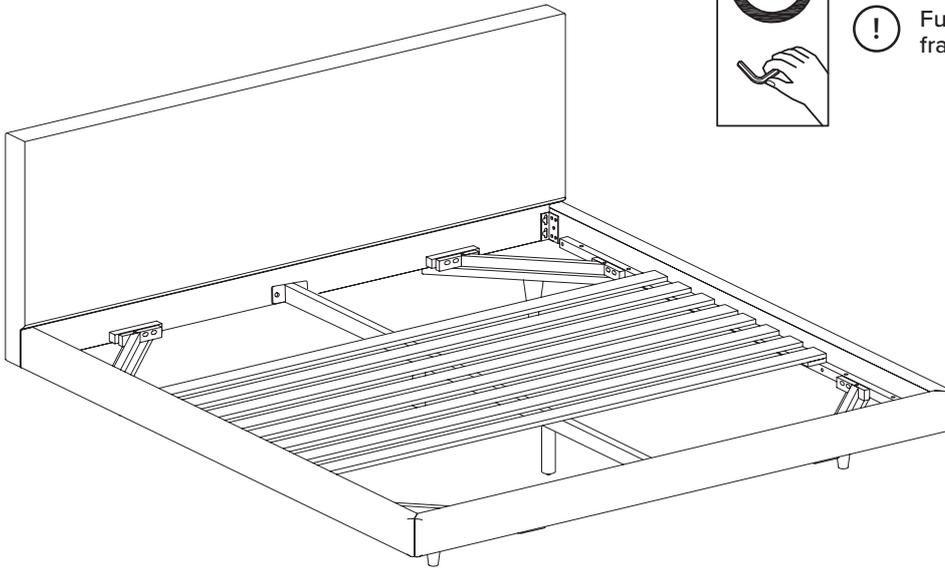

! Fully tighten all bolts on corner leg frames (F) once central slats are installed.

9

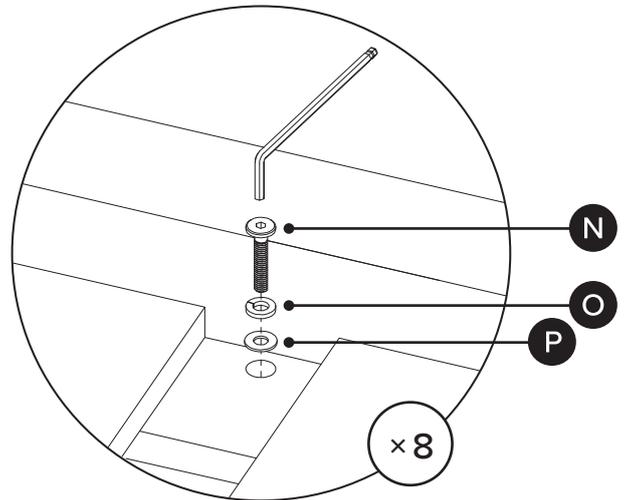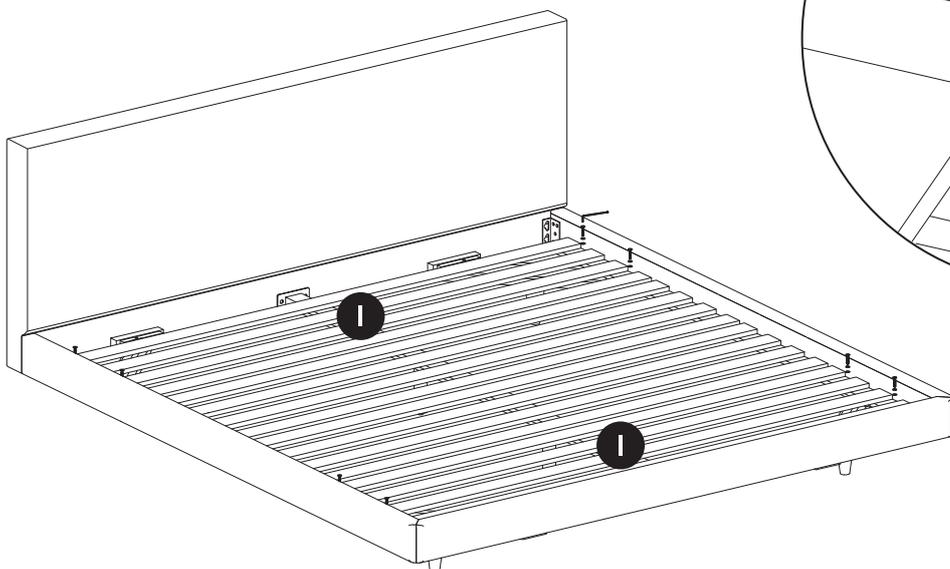

N

O

P

x 8