
ARTICLE.

VERSION 1.0

Assembly Instructions

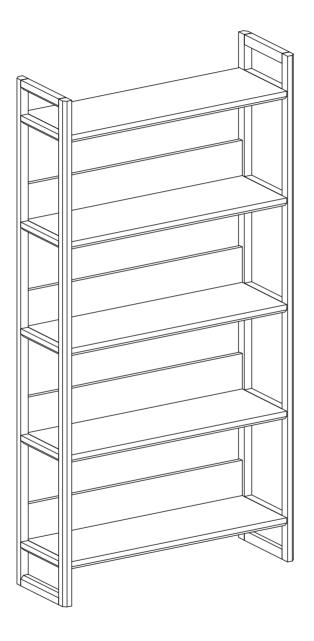

LILYA


36.5" Wide Bookcase

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.


When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

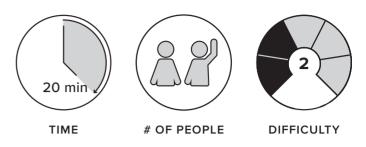


PARTS INVENTORY			
ID	DESCRIPTION	QTY	
A	LEG FRAME LEFT	1	
B	LEG FRAME RIGHT	1	
0	TOP PANEL	1	
D	SHELF WITH PRE-DRILLED HOLES	1	
3	SHELF	3	


HARDWARE / TOOLS INVENTORY					
ID	DESCRIPTION		QTY		
6	ANCHOR		28		
G	SCREW		28		
•	WOOD DOWEL		28		
0	ALLEN KEY		1		

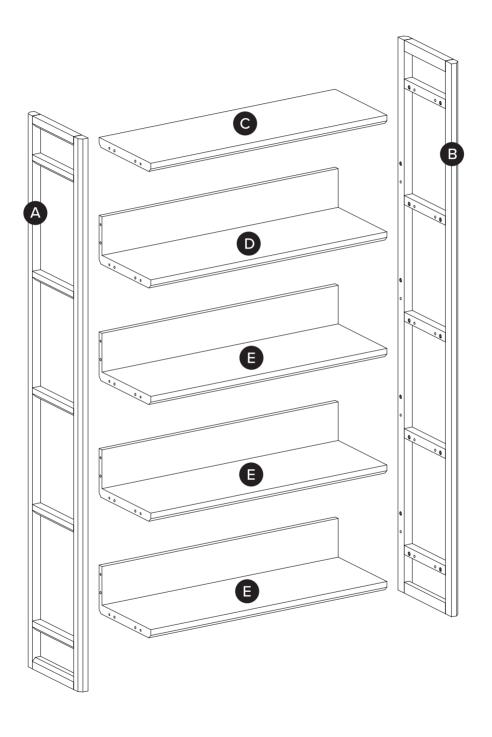





Set all anchors into position

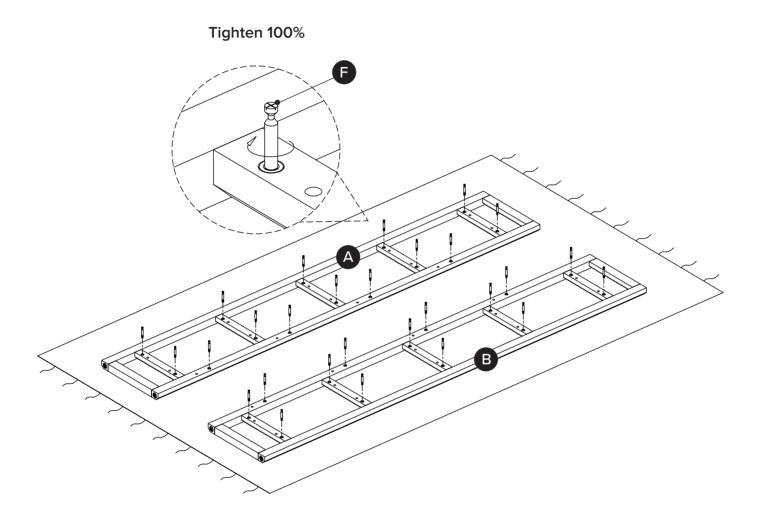

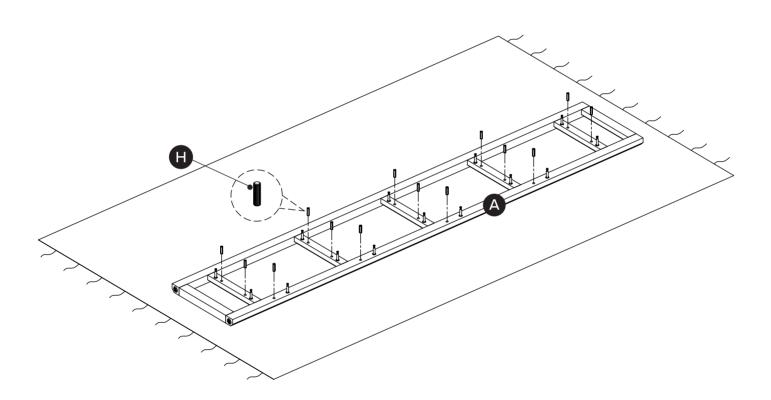

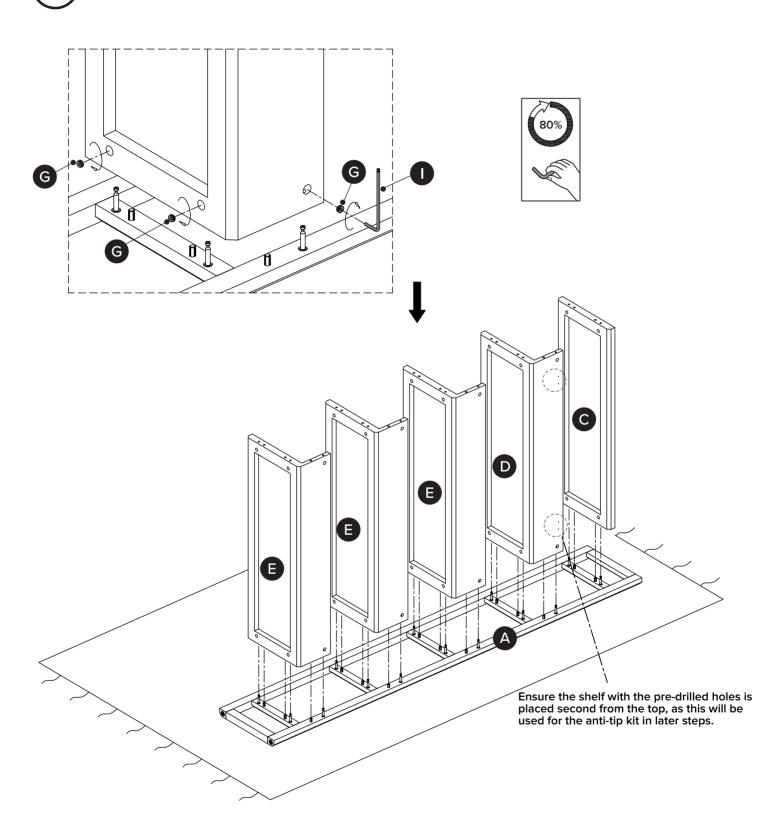





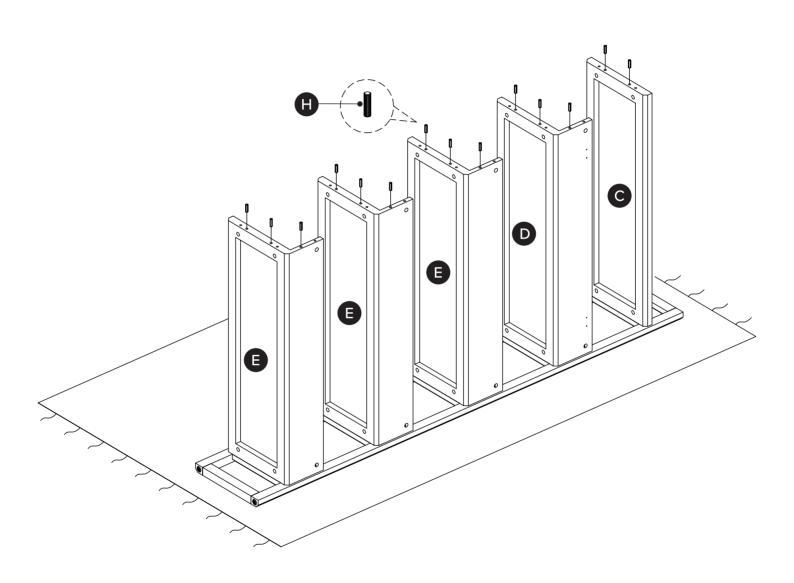



When all parts into position, now tighten 100% all bolts

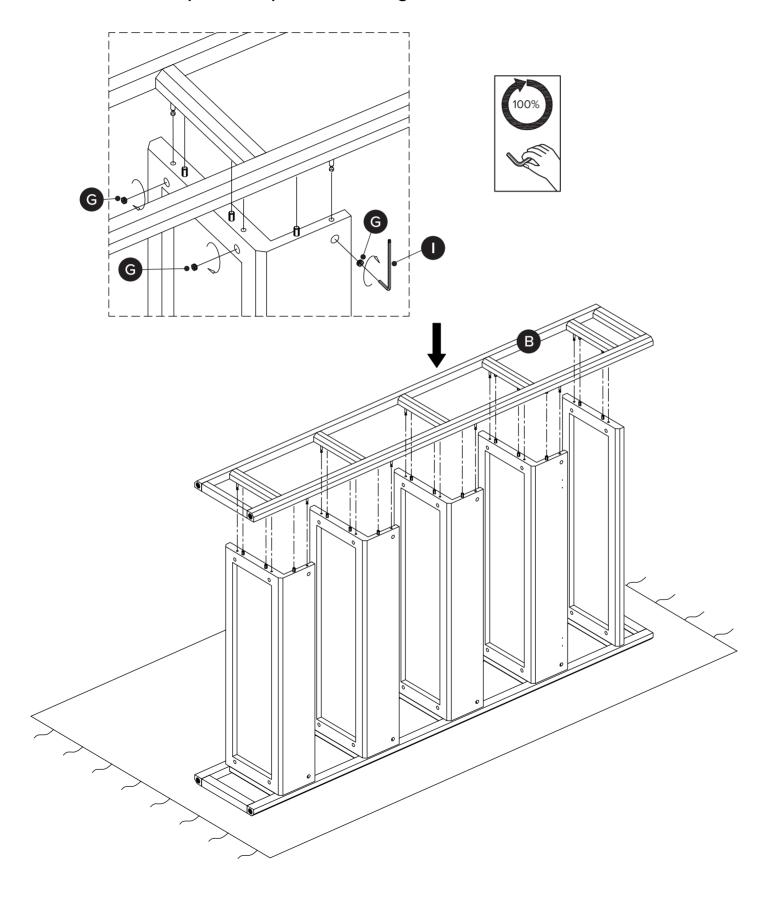

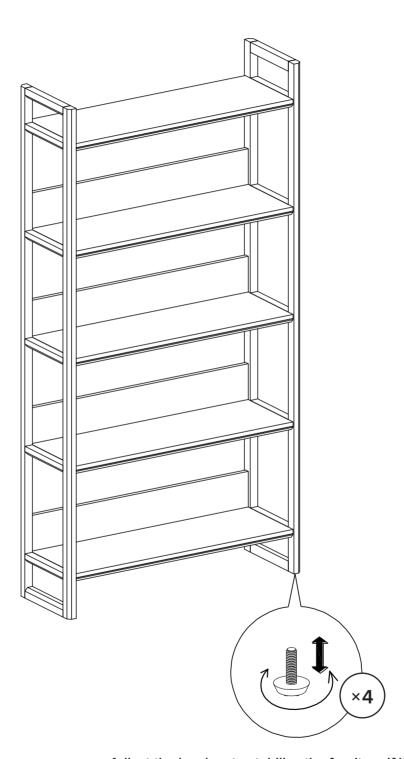

Adjust the levelers to stabilize the furniture if it is unbalanced



ANTI-TIP RESTRAINT INSTALLATION



WARNING!


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.







REQUIRED TOOL 8MM / 5/16" DRILL BIT

REQUIRED TOOL


PARTS INVENTORY					
ID	DESCRIPTION		QTY		
A	BRACKET		4		
B	M4 × 20MM SCREW	Dinn	4		
G	M8 × 51MM PLUG		4		
D	M6 × 70MM SCREW	dimmin.	4		
B	STRAP	O	2		

(!


Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.





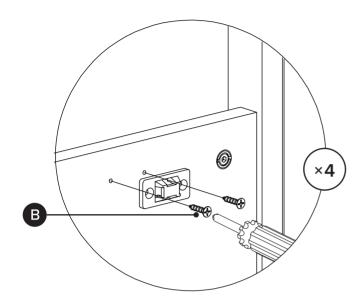


Attach pair of brackets to the back of the shelf frame.

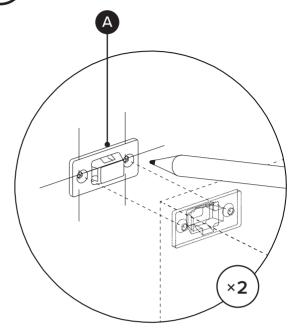

Mark on wall where second pair of brackets should be placed.



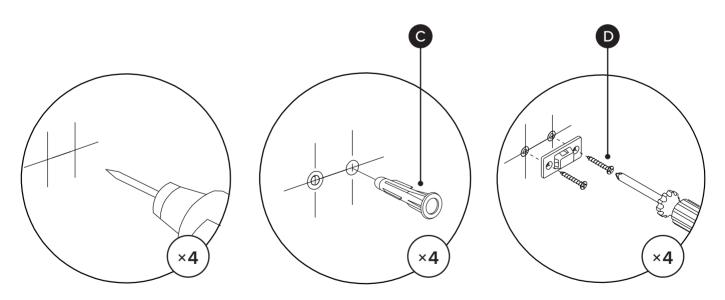

Drill holes in wall using 8mm / 5/16" drill bit.

