
ARTICLE.

Assembly Instructions

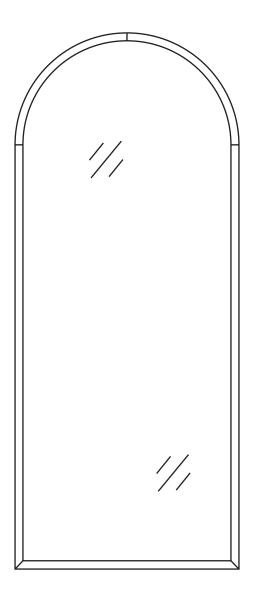

LAUD

Floor Mirror

1010 Raymur Ave. Vancouver, BC V6A 3T2



ANTI-TIP RESTRAINT INSTALLATION




WARNING!


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

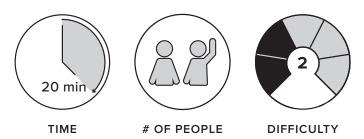





REQUIRED TOOL 8MM / 5/16" DRILL BIT


REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	M8×40MM PLUG		4
В	M4 × 45MM SCREW	Ammur)	4
G	BRACKET		2
D	QUICK LINK CABLE		2

Œ

Hardware (A/C) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.




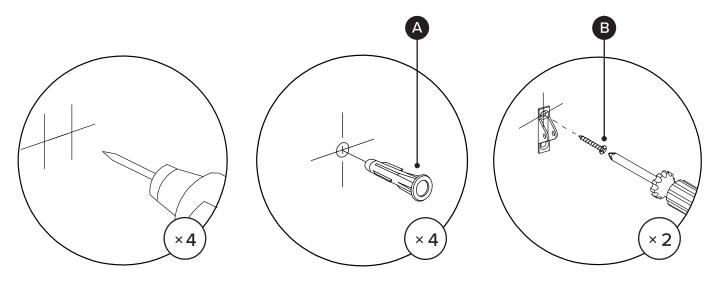

Drill holes in wall using 8mm / 5/16" drill bit.

(2)

Quick link cable (D) through pre-installed brackets (C) onto mirror. Thread through brackets (C) on the wall. To lock, link cable until they snap lock.

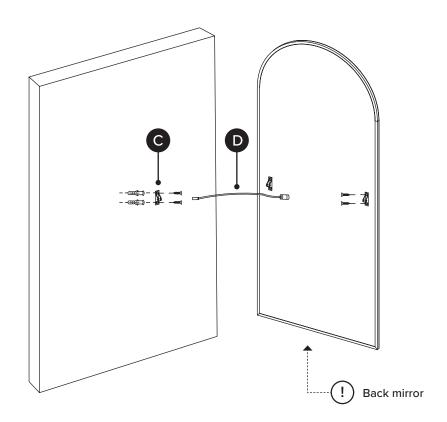

ARTICLE. LAUD Floor Mirror Page 4 of 4



