


ARTICLE.

VERSION 1.0

Assembly Instructions

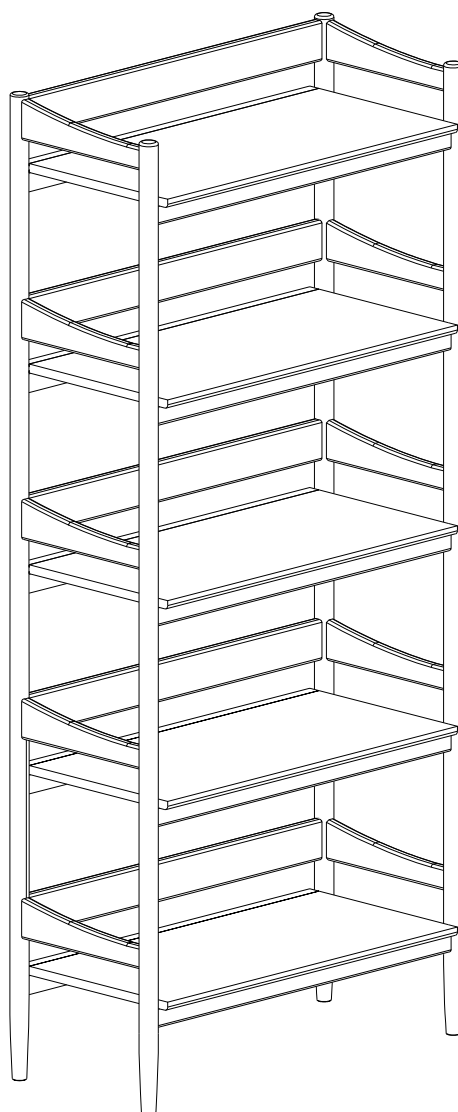

COTU


24" Bookcase

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com

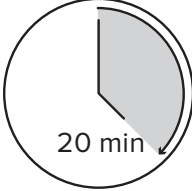


20 min


TIME



OF PEOPLE

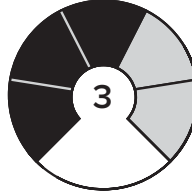

DIFFICULTY

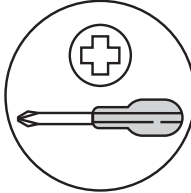




REQUIRED TOOL

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LEG FRAME LEFT	1
B	LEG FRAME RIGHT	1
C	SHELF FRAME	5
D	REAR SUPPORT BAR	5
E	ANCHOR 	30
F	ALLEN KEY 	1
G	SCREW 	30


SPAREPART LIST		
ID	DESCRIPTION	QTY
E	ANCHOR 	3
G	SCREW 	3
H	LOCK NUT 	3

Note: This is a spare part in case the fitting has issues. You can use it as a replacement.




1

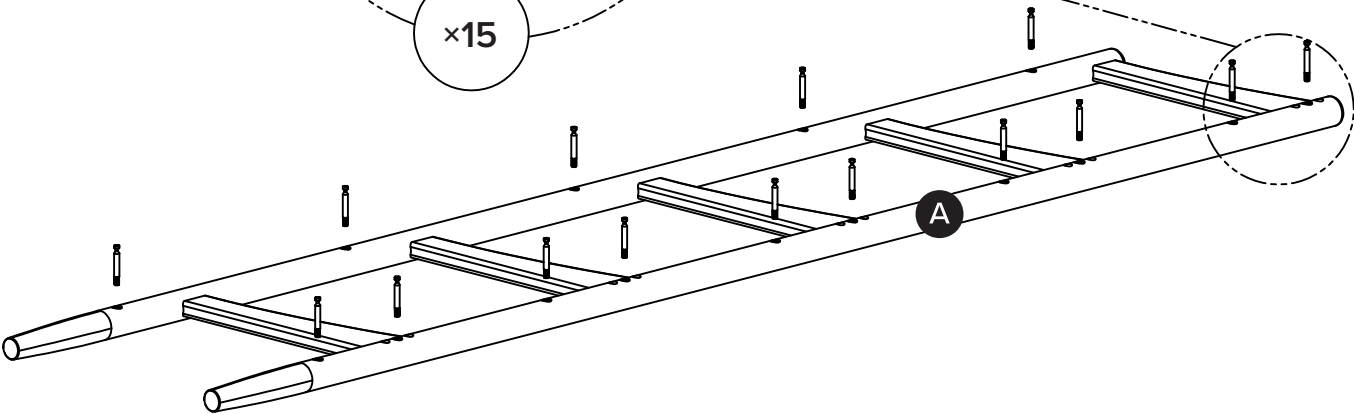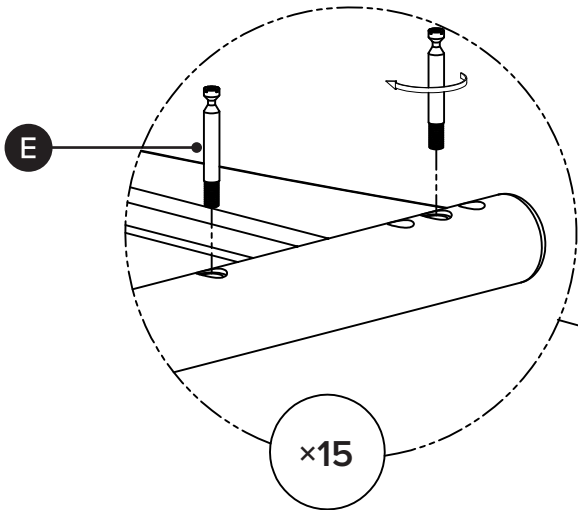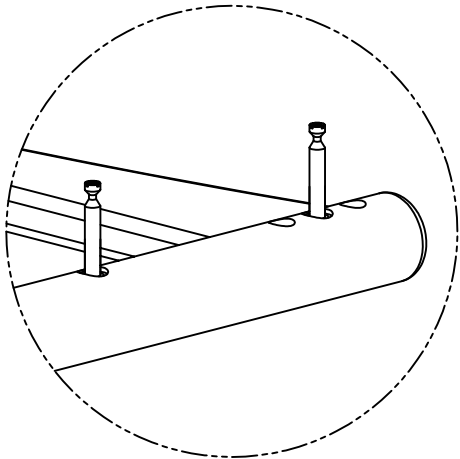

2

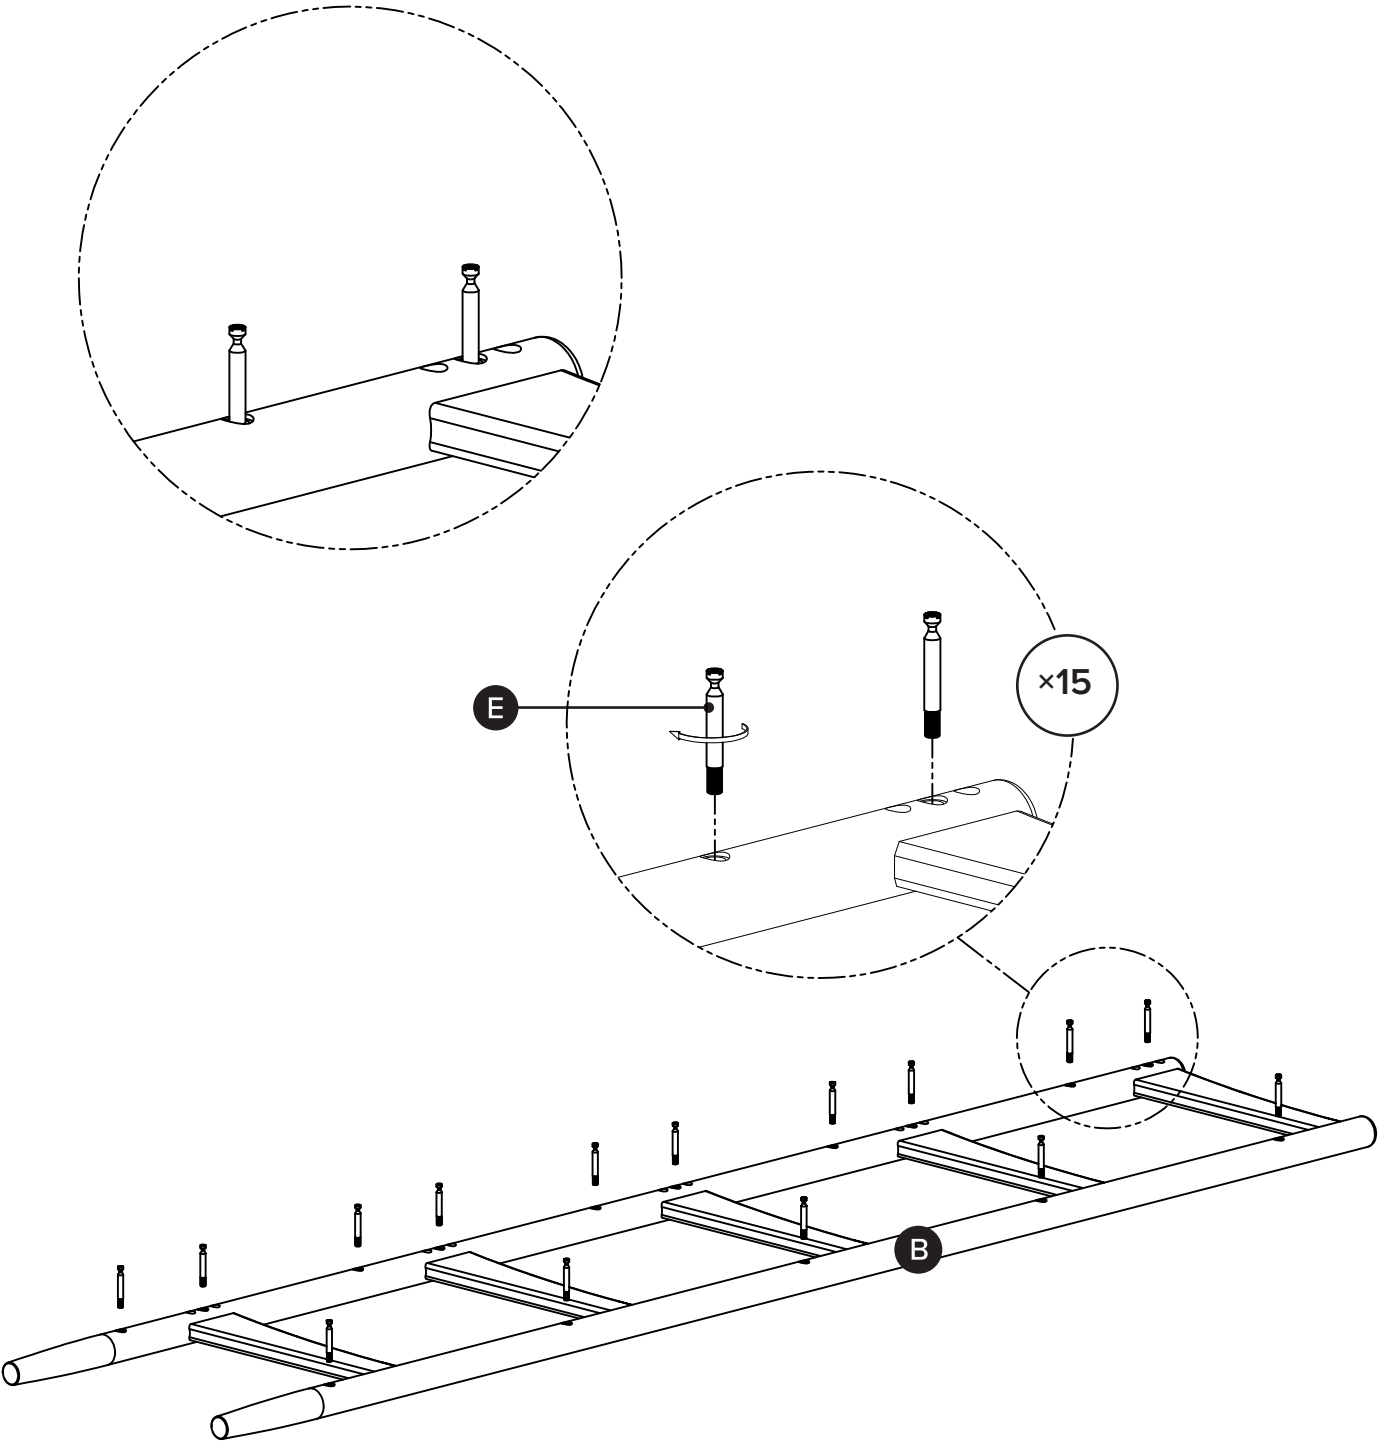



3

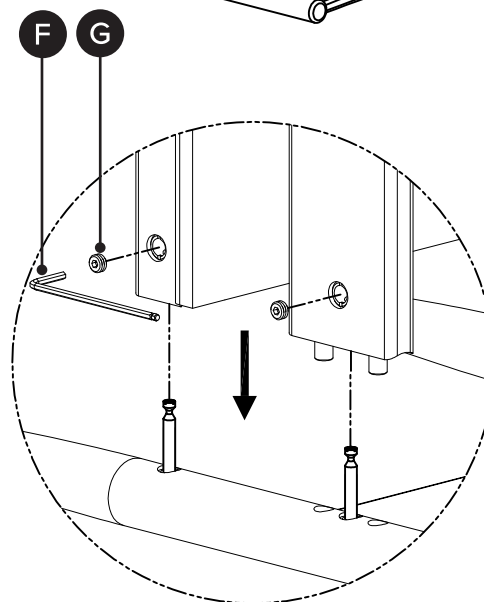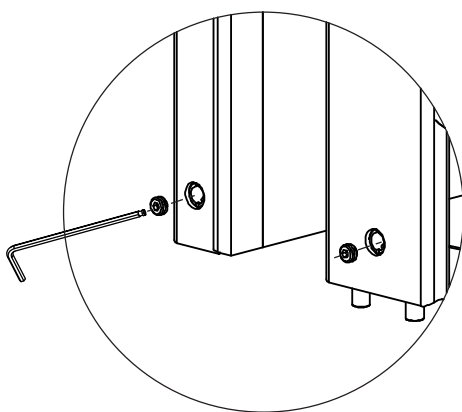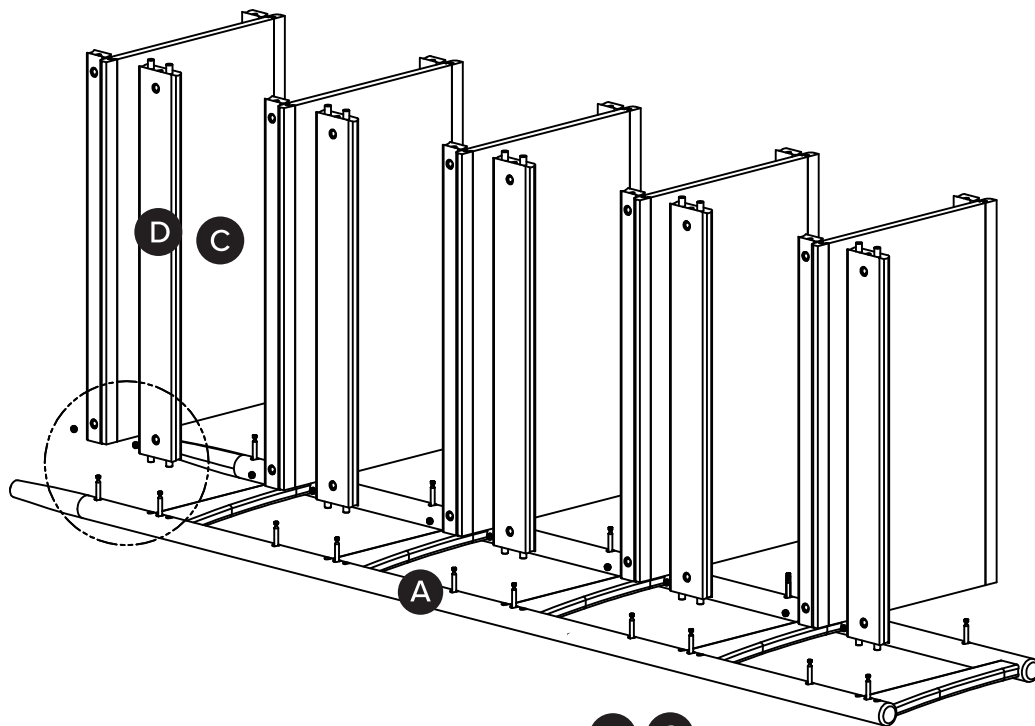


Use the ball-end Allen key to install the nuts
and tighten them to about 85%.

Use the short Allen key to fully tighten them to 100%

4

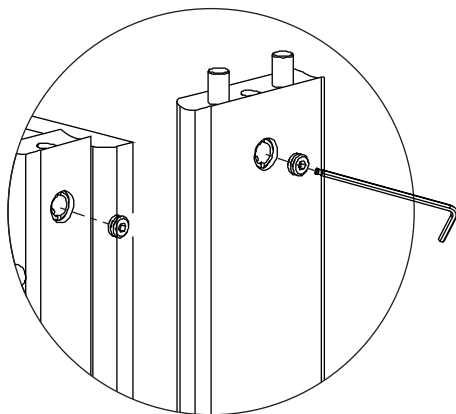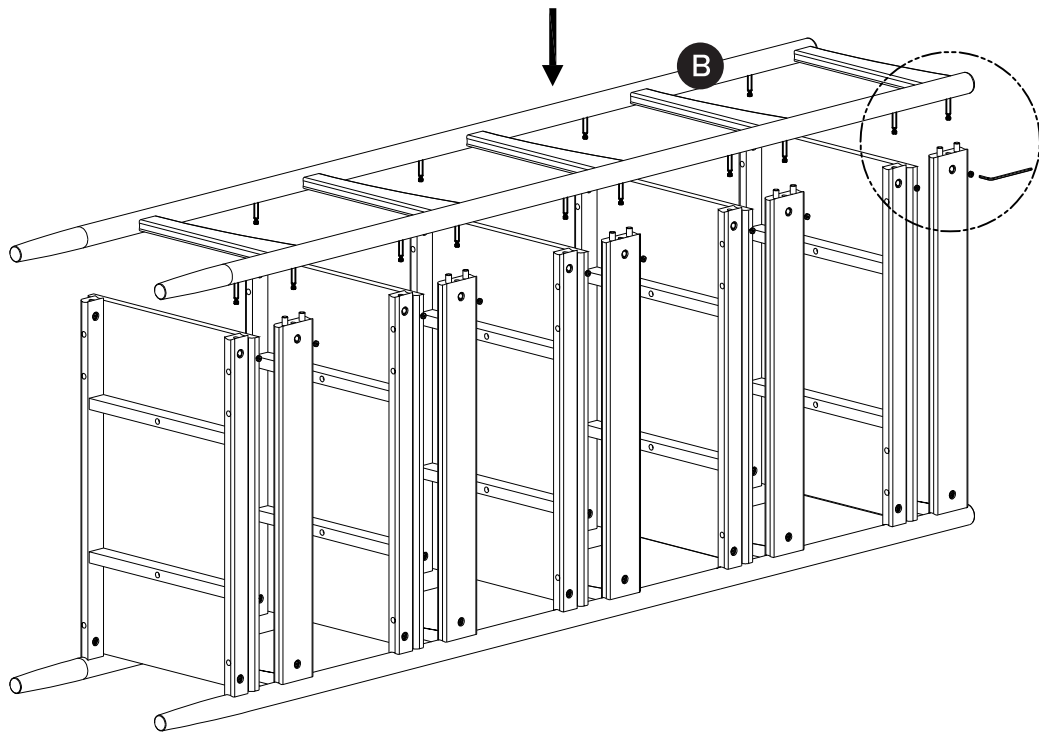


Use the ball-end Allen key to install the nuts and tighten them to about 85%.

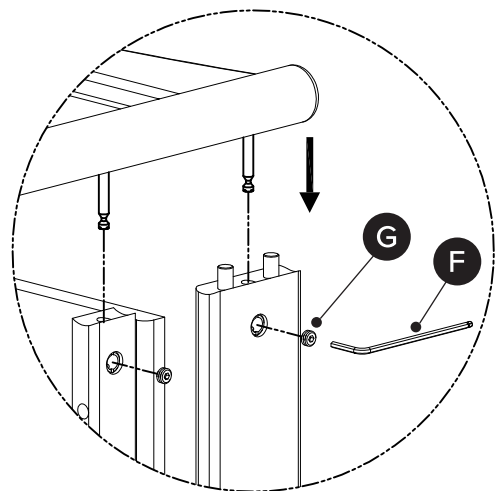


Use the short Allen key to fully tighten them to 100%



Assembly for Spare parts:

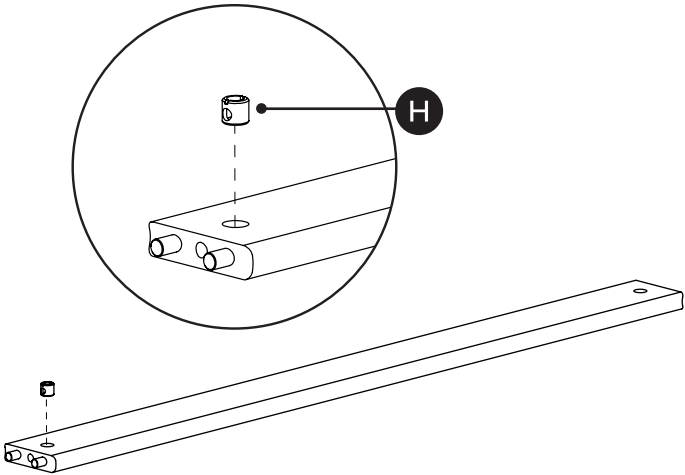

If a lock nut comes loose, insert is back into the hole.

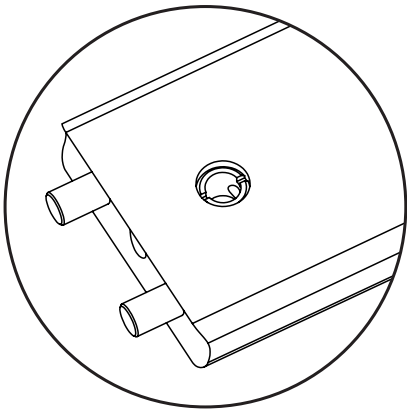

! Lines on lock nuts (H) must be parallel with the length of the rear support bar

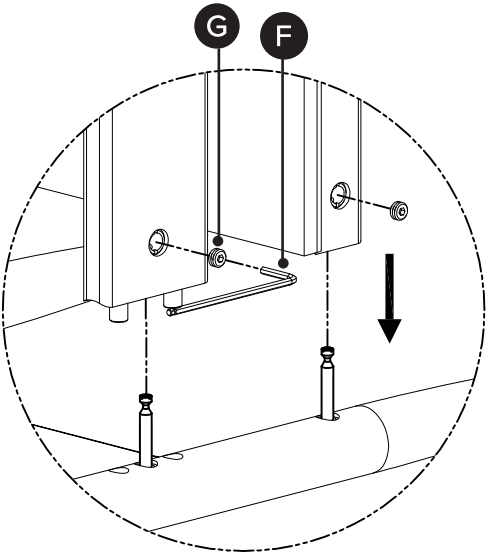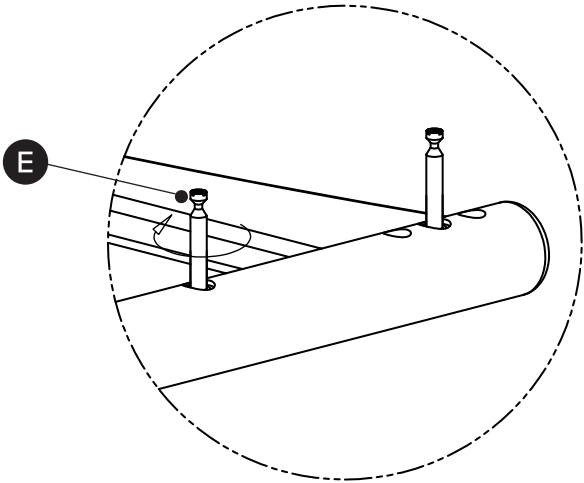




ANTI-TIP RESTRAINT INSTALLATION

WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

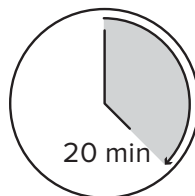


20 min

TIME




OF PEOPLE

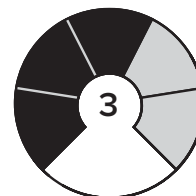


3

DIFFICULTY

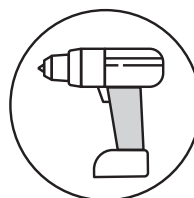

REQUIRED TOOL
8MM / 5/16" DRILL BIT

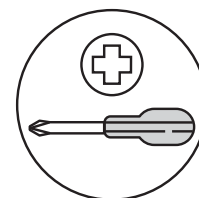


REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET 		4
B	M4 × 20MM SCREW 		4
C	M8 × 51MM PLUG 		4
D	M6 × 70MM SCREW 		4
E	STRAP 		2




Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

1

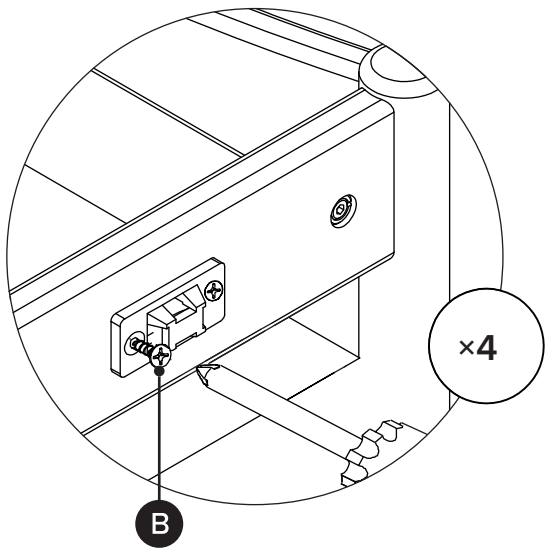




Attach pair of brackets to top corners of the back of the unit.

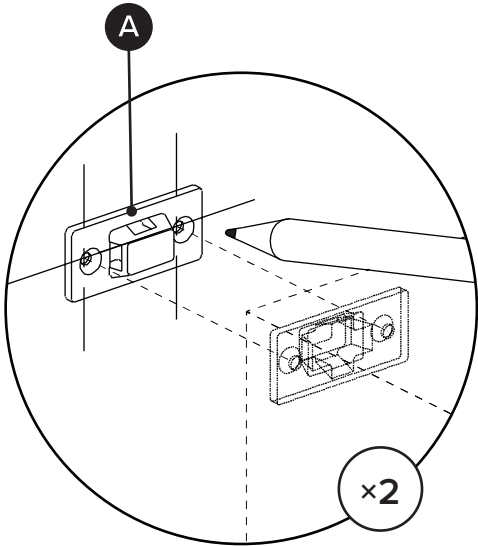

Mark on wall where second pair of brackets should be placed.

2

Drill holes into drywall, in wall using 8mm 5/16" drill bit.

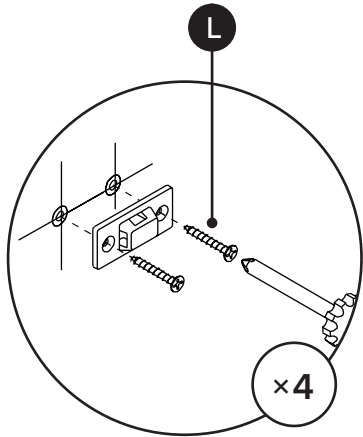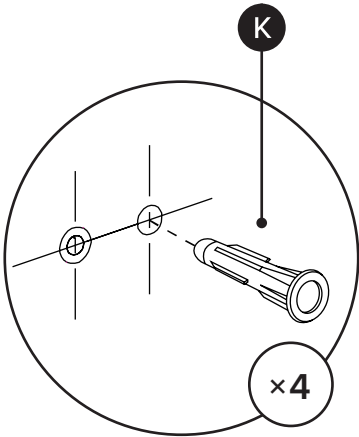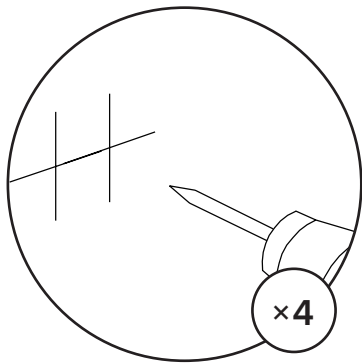

3

