


ARTICLE.

VERSION 1.1

Assembly Instructions

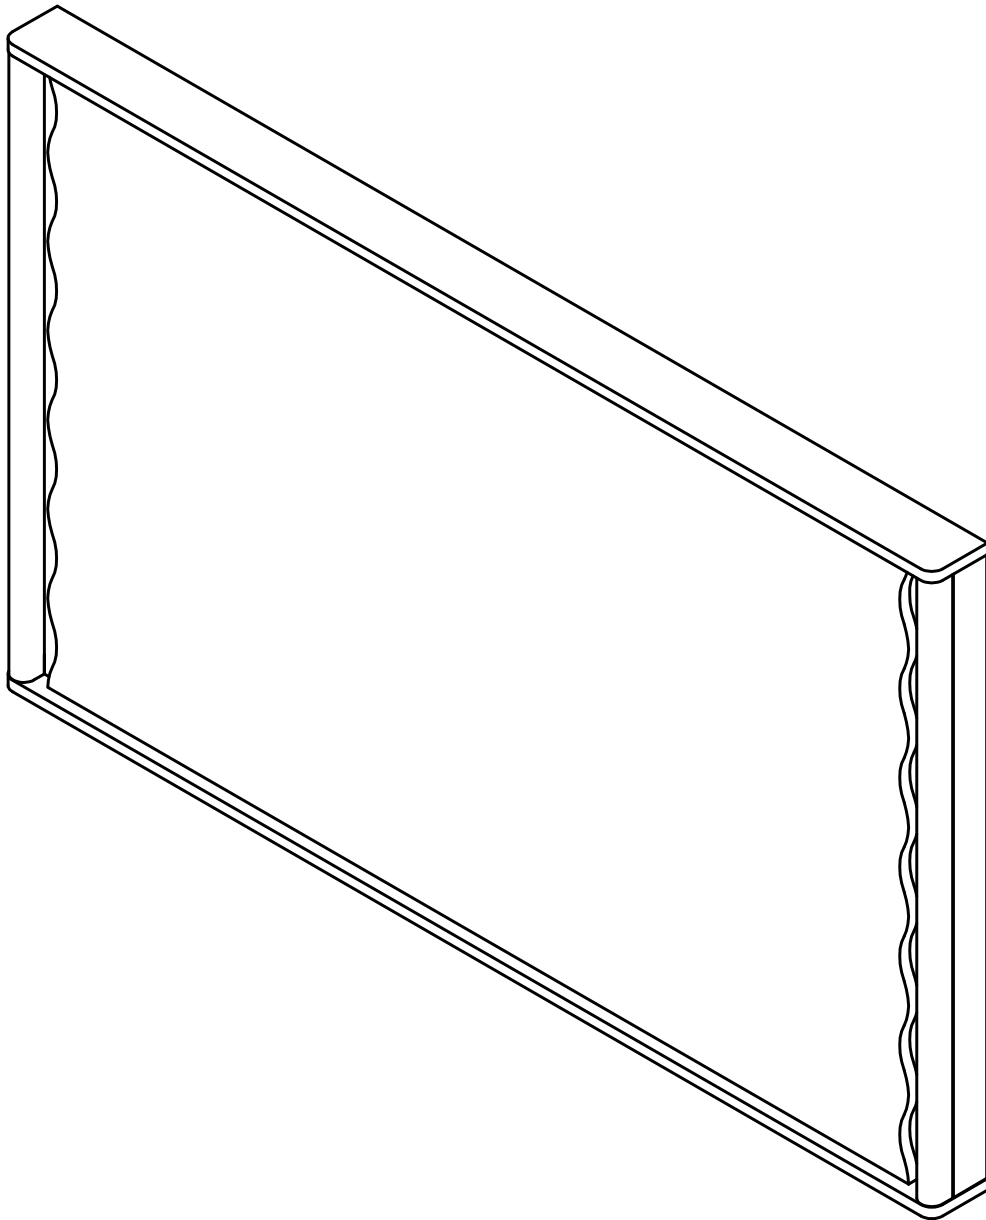

BOE


Headboard

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

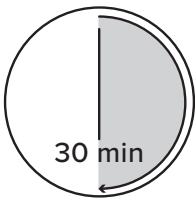





TIME

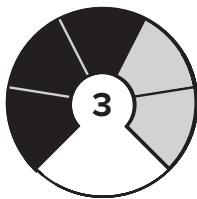


DIFFICULTY



OF PEOPLE

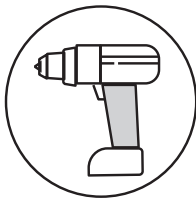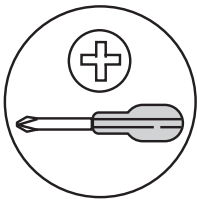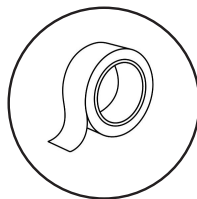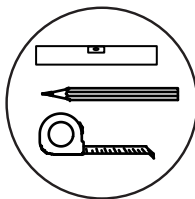

12mm DRILL BIT

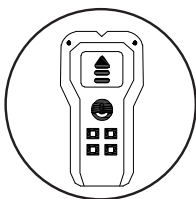


STUD FINDER


REQUIRED TOOLS

Hardware (A/B) to attach bracket to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	HEADBOARD	1
2	FRENCH CLEAT	1
3	DRILL TEMPLATE	1



HARDWARE LIST		
ID	DESCRIPTION	QTY
A	SNAPTOGGLE 	5
B	M6 × 63MM BOLT 	5
C	ALLEN KEY 	1

Note: There are additional 2pcs of (A) and (B) as spare part in case it is necessary, you can use it as a replacement.

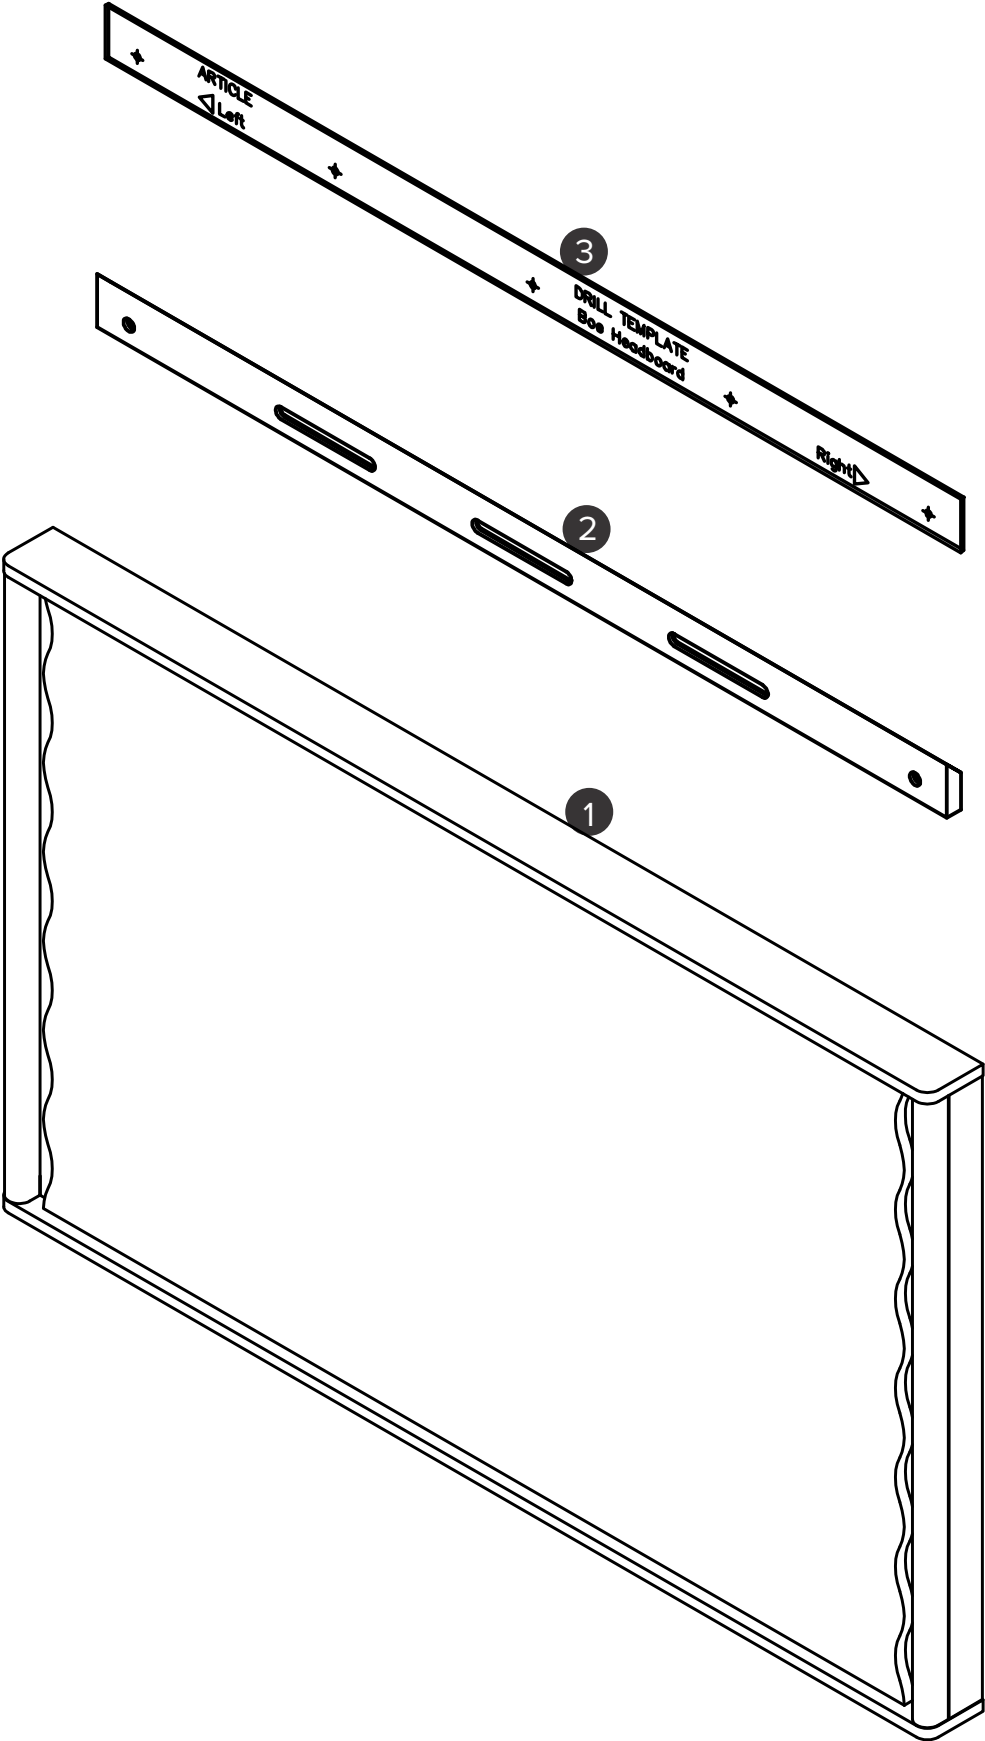

1

- ! Use stud finder to avoid drilling holes on the wooden studs. Our hardware (A/B) provided are for drywall only, if your wall has different construction, please consult with your contractor for proper hardware.

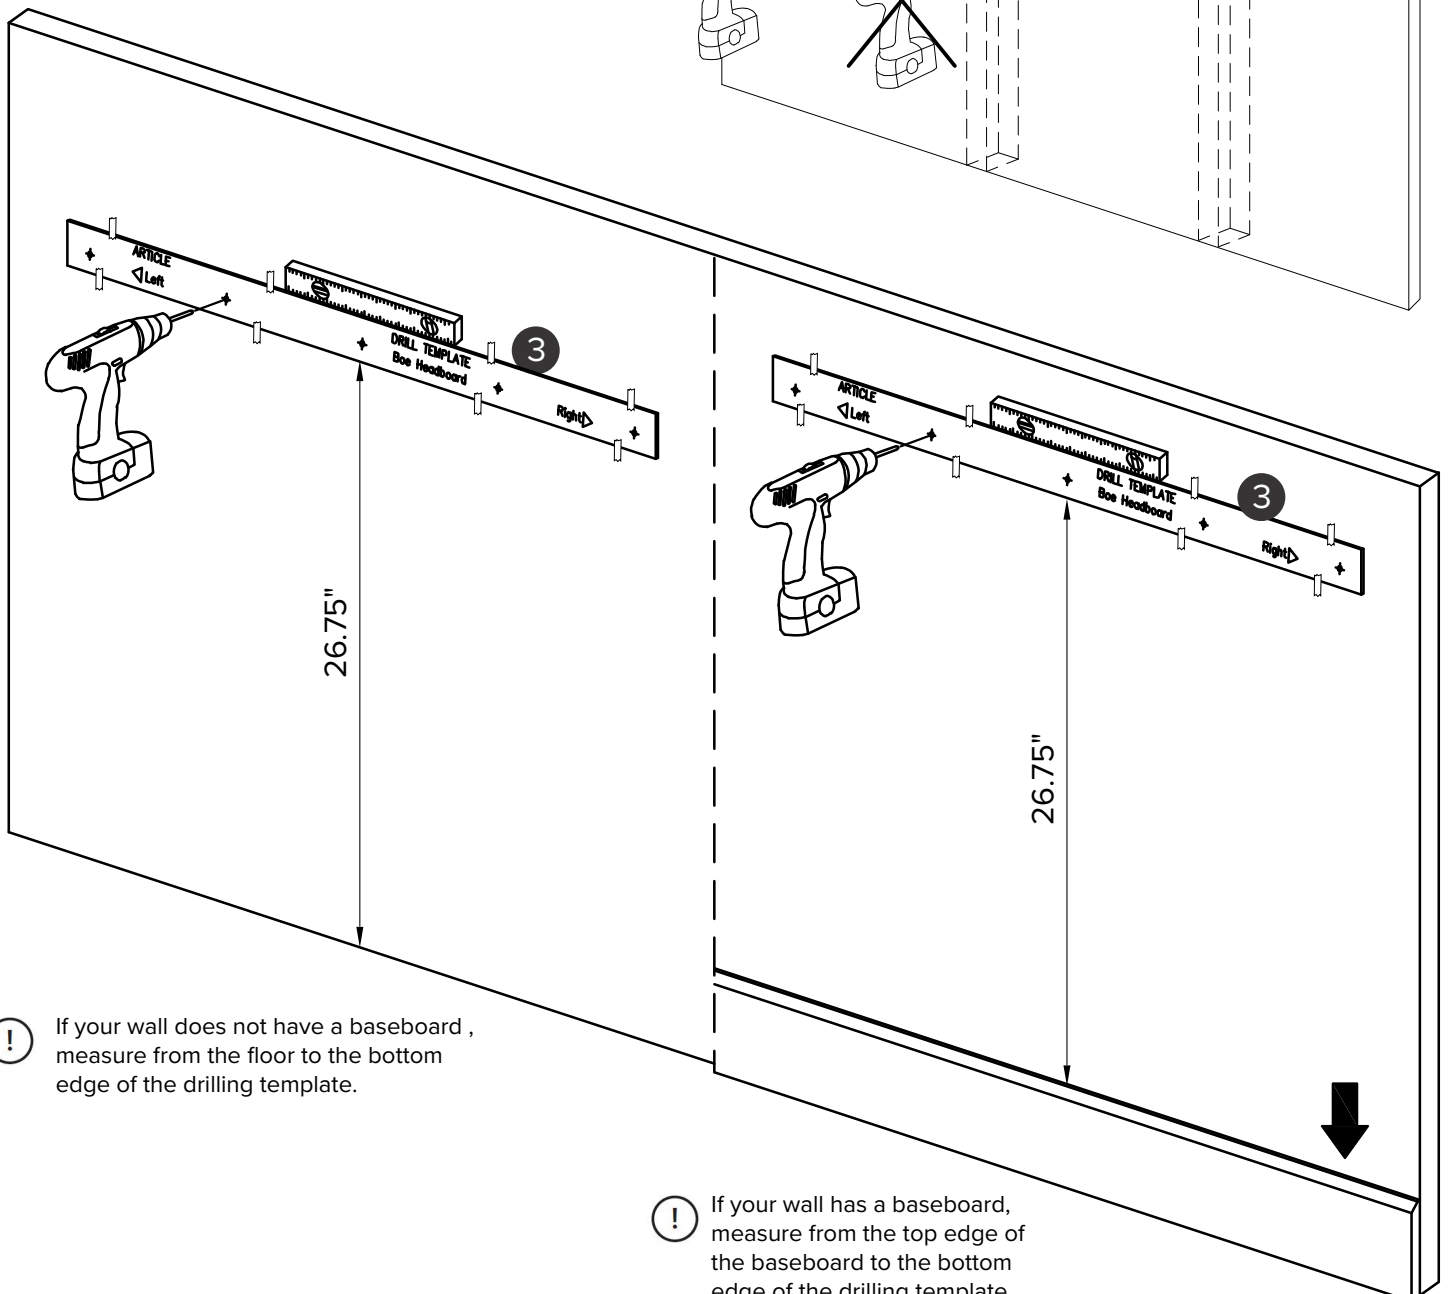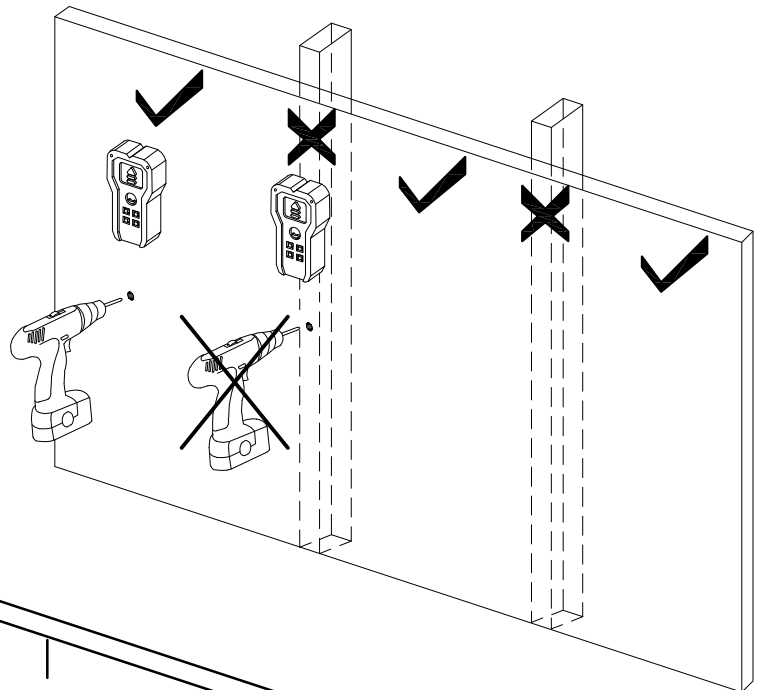


- ! If your wall does not have a baseboard , measure from the floor to the bottom edge of the drilling template.

- ! If your wall has a baseboard, measure from the top edge of the baseboard to the bottom edge of the drilling template.

2A**PLEASE READ THE INSTRUCTIONS BEFORE ATTACHING THE HARDWARE.**




CHECK THE SNAP TOGGLE AND MAKE SURE NOTHING IS STUCK OR DAMAGED. CAREFULLY AND SLOWLY FOLLOW THE STEPS ONE BY ONE.

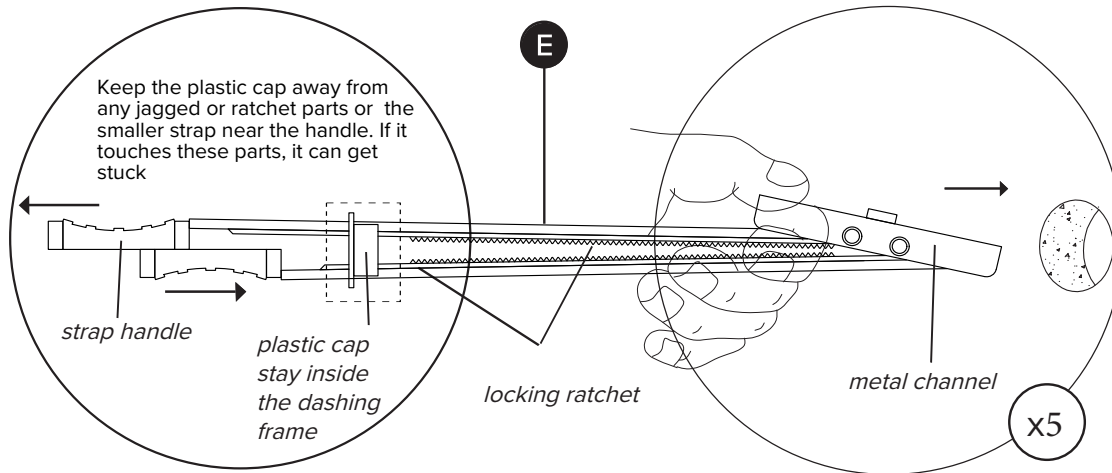**2B**

Slide one handle of the plastic trap to straighten the metal, then insert it into the wall holes.



Pull the plastic trap backward until 2 ends aligned in order to make the metal channel rests flush behind the wall vertically.

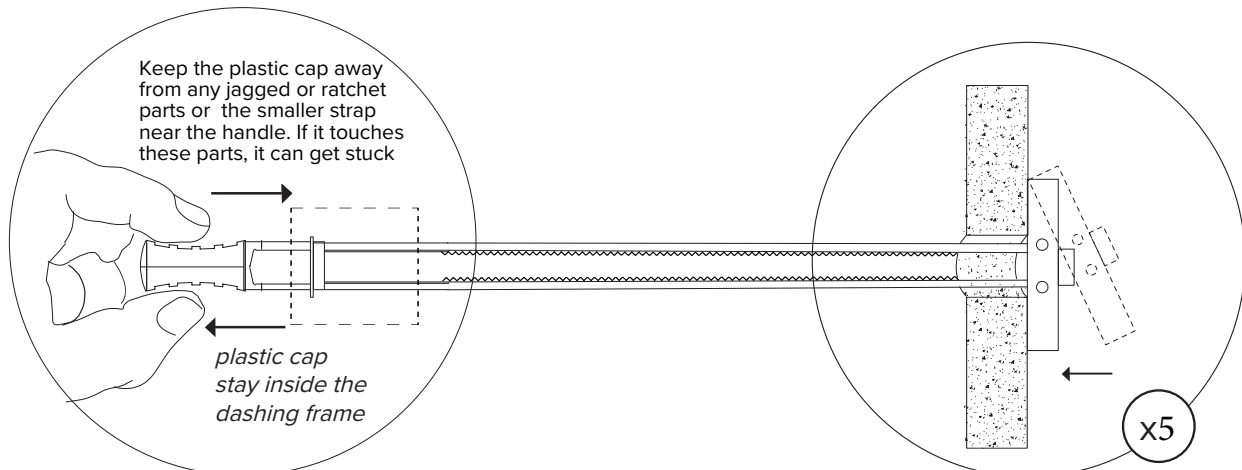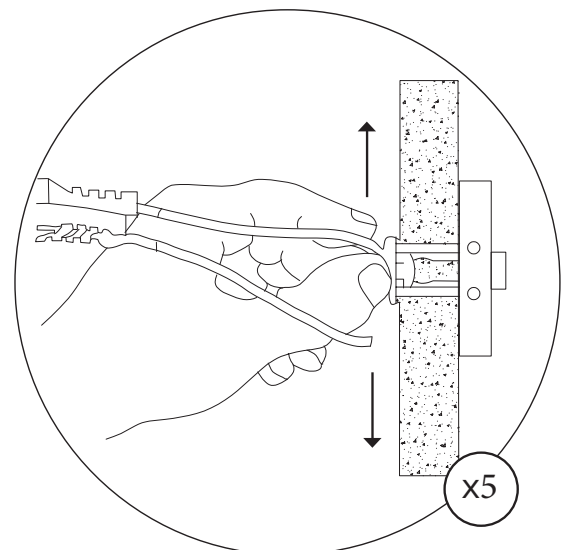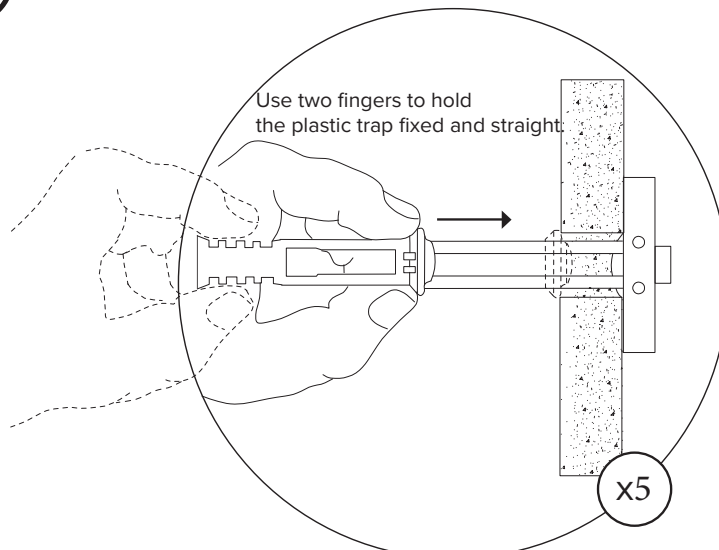**2C**

Slide the plastic cap along the straps until flange of cap is flush with the wall




Place thumb between 2 plastic straps. Push side to side, snapping off straps level with flange of cap.



3




WRONG

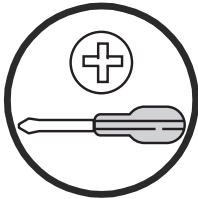

RIGHT

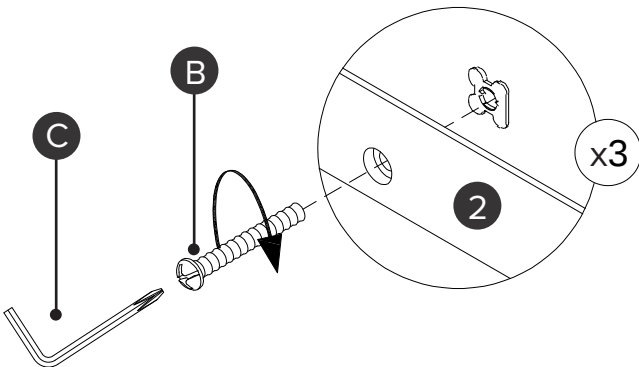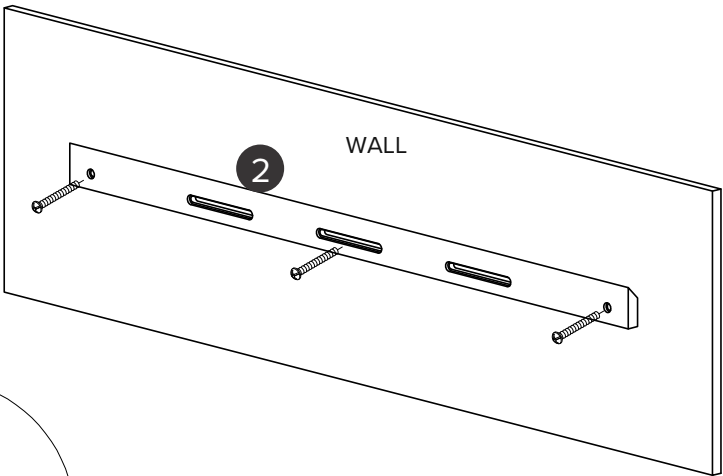

4

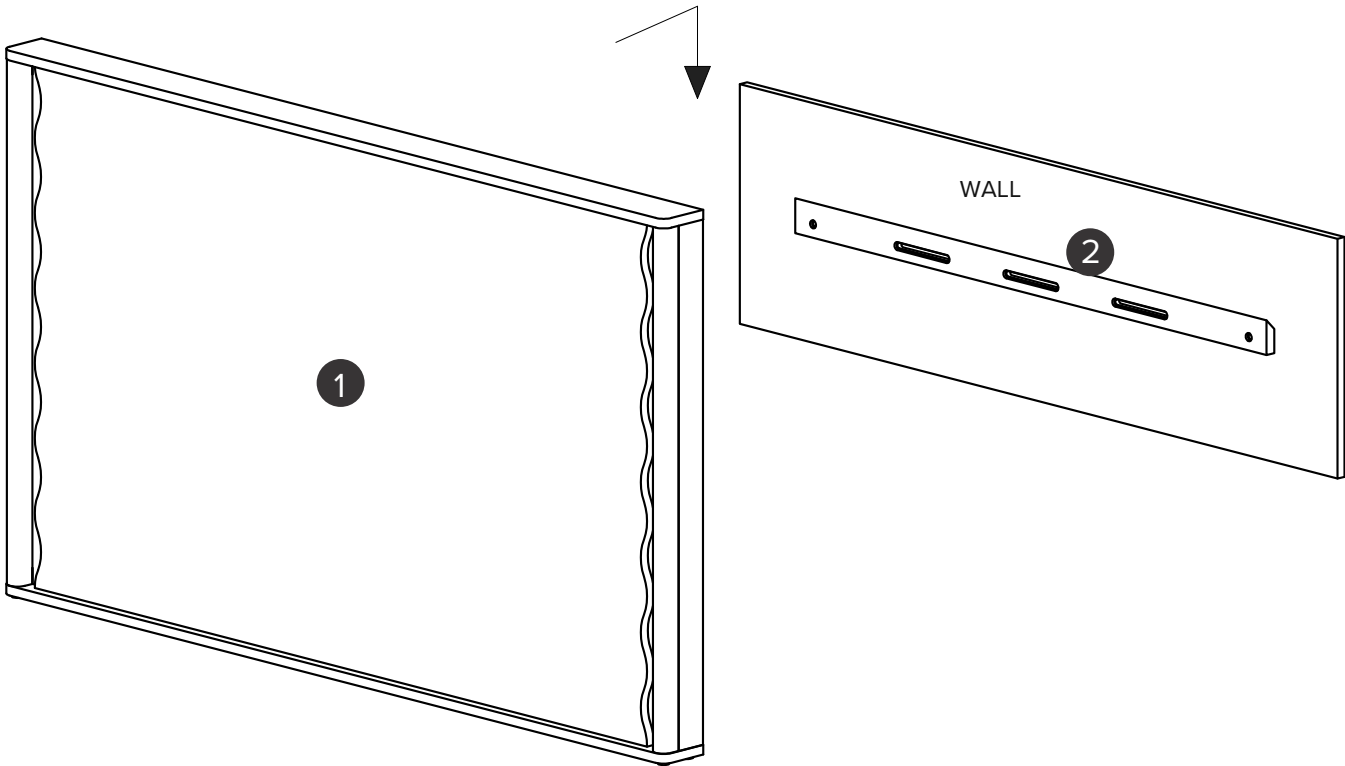

5

