


ARTICLE.

VERSION 1.0

Assembly Instructions

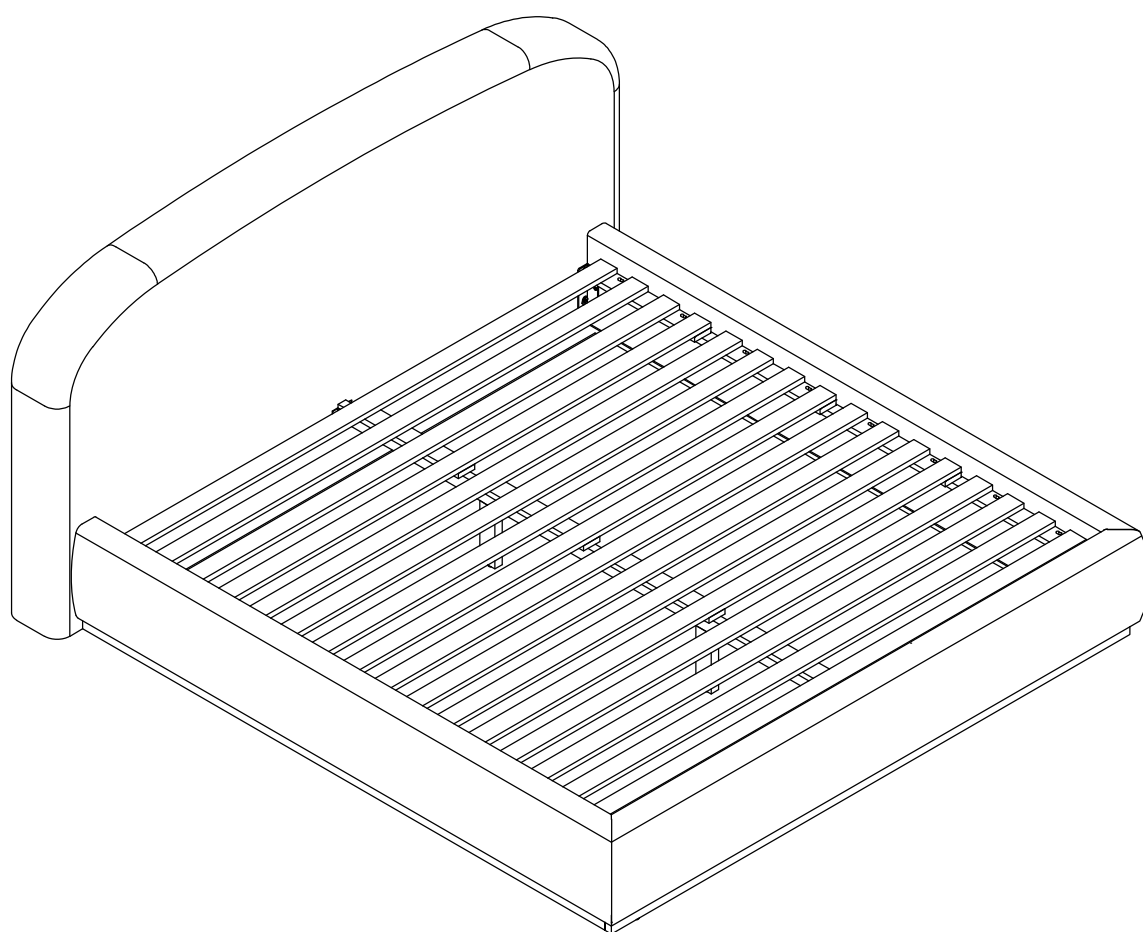

ALAIAH

Upholstered Bed

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

!


Structural integrity is only guaranteed if all bolts are installed and properly tightened.



TIME




OF PEOPLE

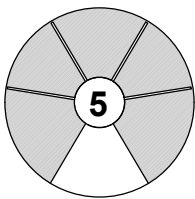

DIFFICULTY

!


DO NOT DRAG BED, ALWAYS LIFT WITH AT LEAST TWO PEOPLE BEFORE MOVING

PART LIST		
ID	DESCRIPTION	QTY
1	HEADBOARD 	1
2	FOOTBOARD 	1
3	LEFT SIDE RAIL 	1
4	RIGHT SIDE RAIL 	1
5	CENTER SUPPORT RAIL 	1
6	CENTER LEG 	2
7	SLATS 	4
8	METAL BRACKET 	2

HARDWARE LIST		
ID	DESCRIPTION	QTY
A	M8 × 40MM BOLT 	12
B	M6 × 20MM BOLT 	6
C	M6 × 60MM BOLT 	4
D	M6 × 40MM BOLT 	16
E	8.5 LOCK WASHER 	12
F	8.5 WASHER 	12
G	6.5 LOCK WASHER 	22
H	6.5 WASHER 	22
I	ALLEN KEY 	1


1

Attach the Footboard (2) to the Left and Right Side Rails (3 & 4) using Bolt (A), Lock Washer (E), and Washer (F). Tighten to 80% using the Allen Key.

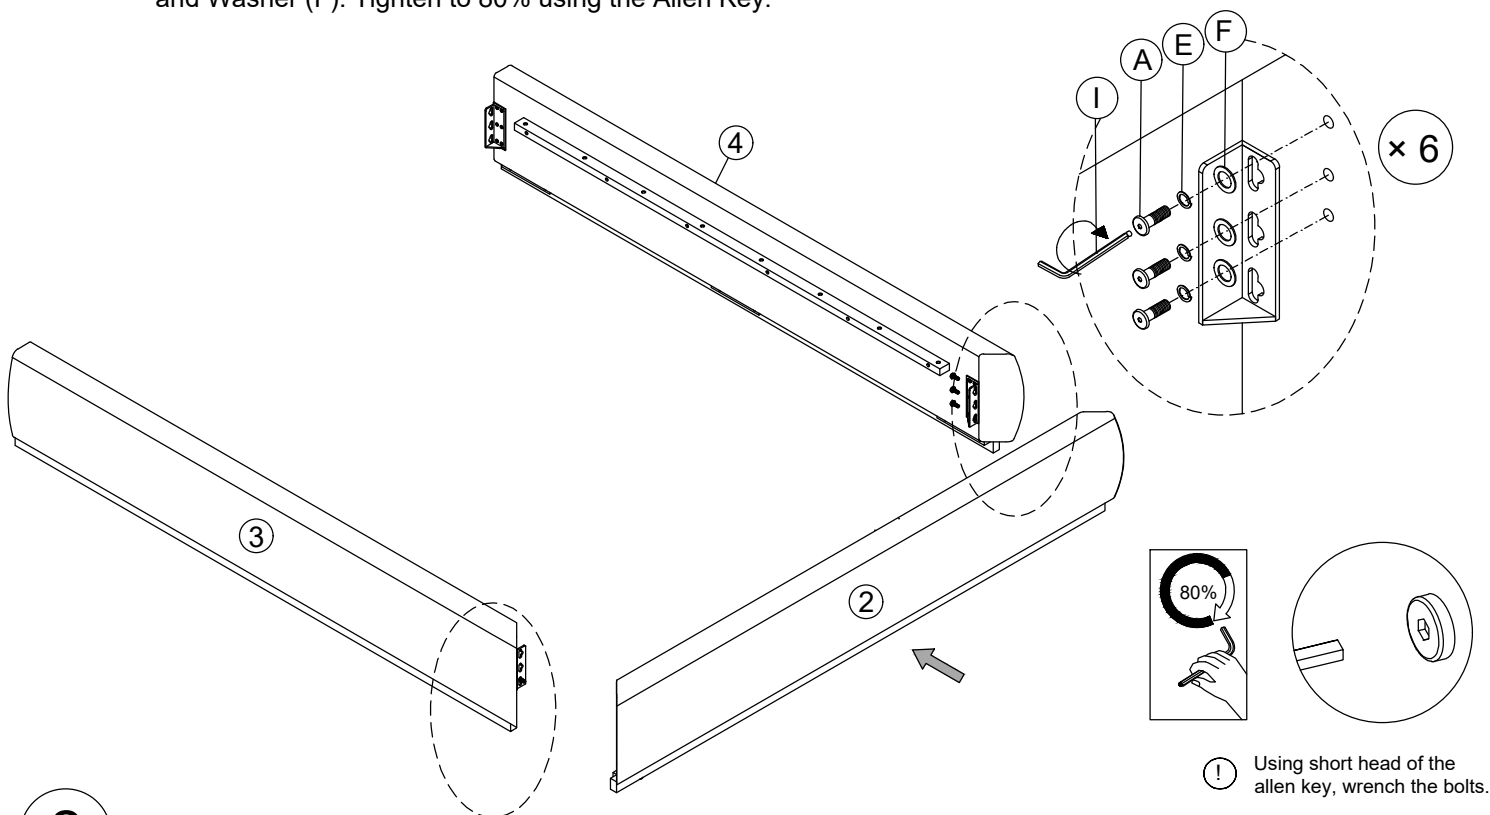


2

Attach the Side Rail Frame (assembled in Step 1) to the Headboard (1). Pull both ends of the side frame to align them with the bolt holes on the Headboard (1). Secure using Bolt (A), Lock Washer (E), and Washer (F). Tighten bolts to 80% only.
 Note: During assembly, ensure the wood plinth is aligned across all sides, small gap 1mm is acceptable.

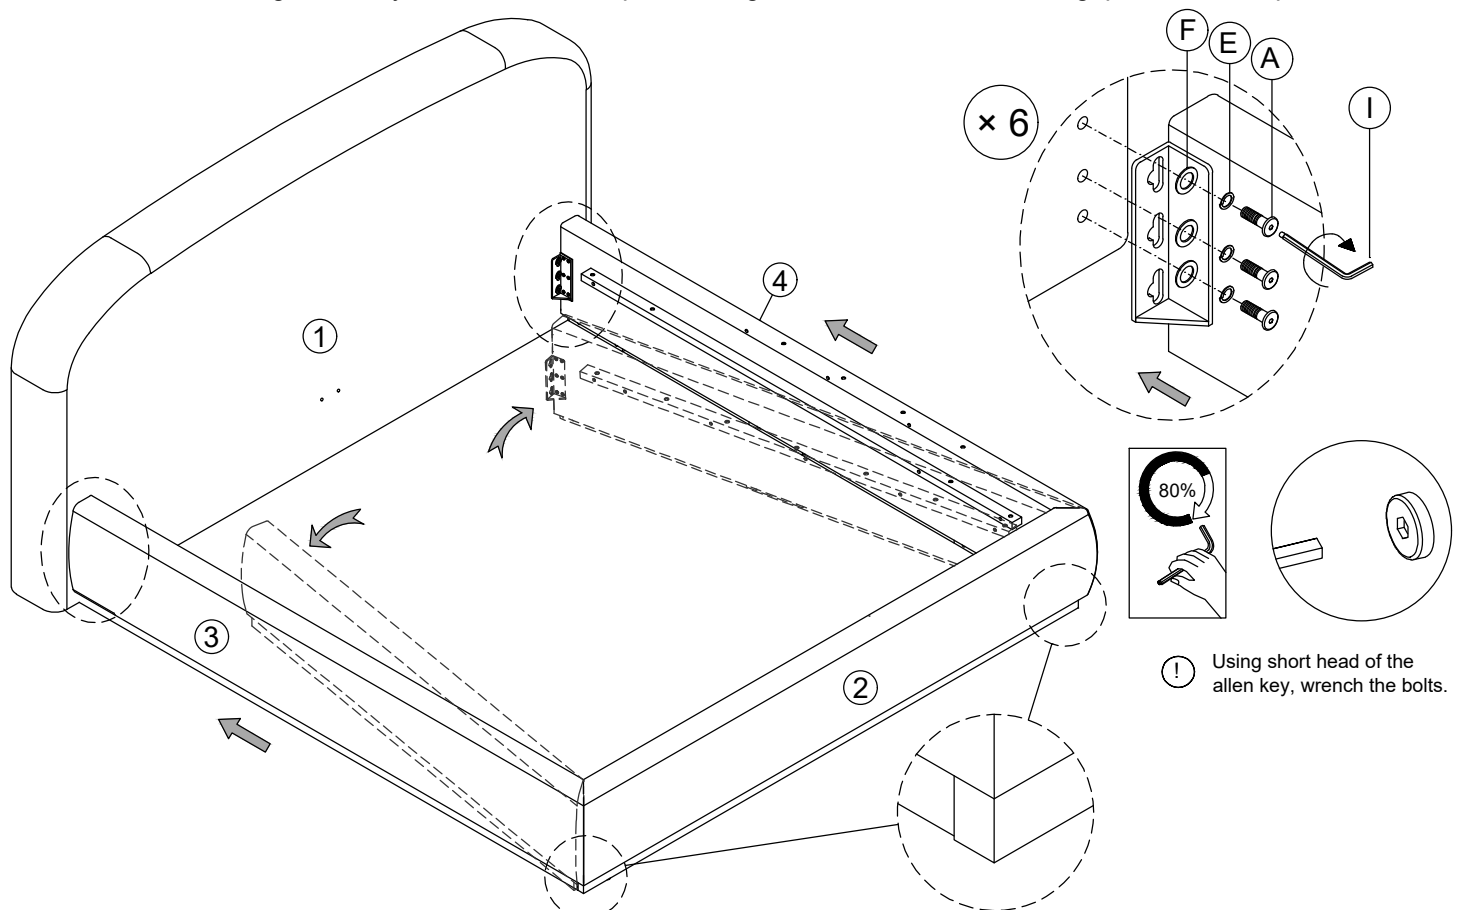


3

Attach Metal bracket (8) to the HB and FB. Fully tighten Bolts

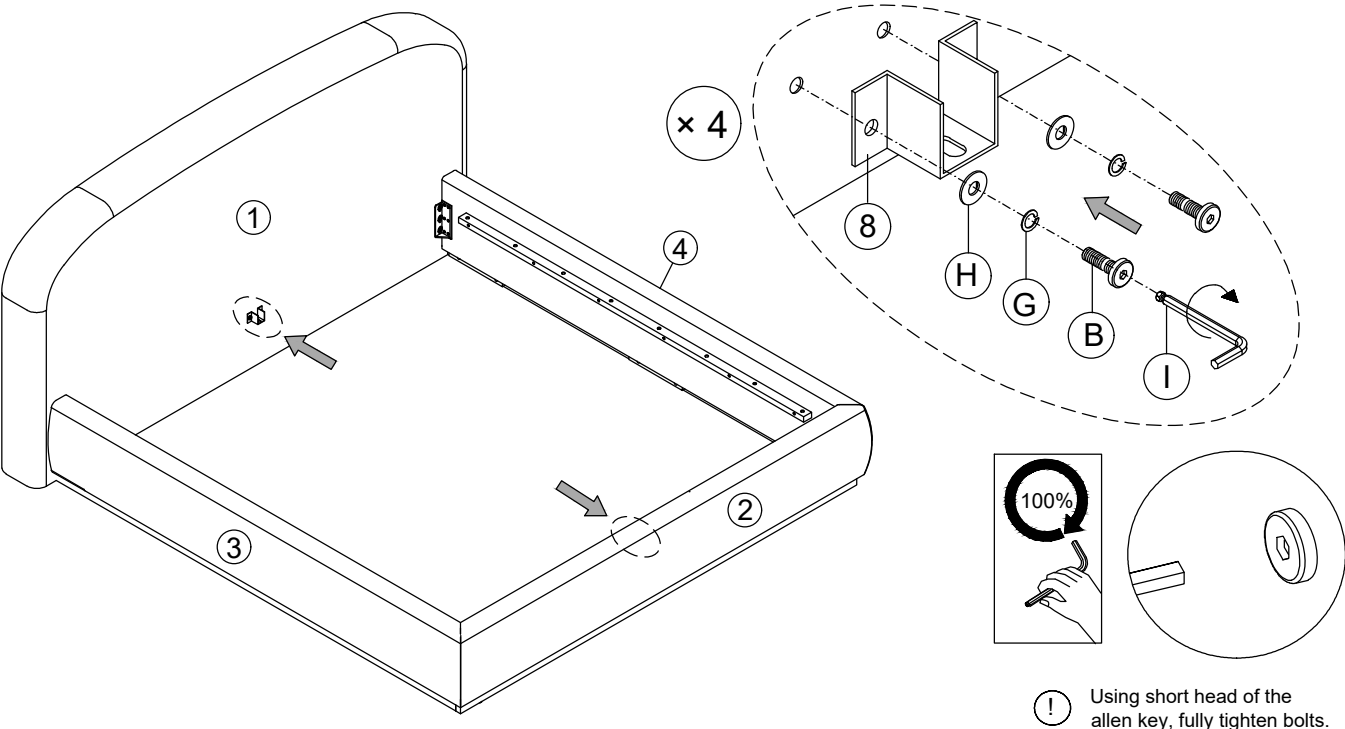


4

Attach center leg (6) to support rail (5). Fully tighten Bolts

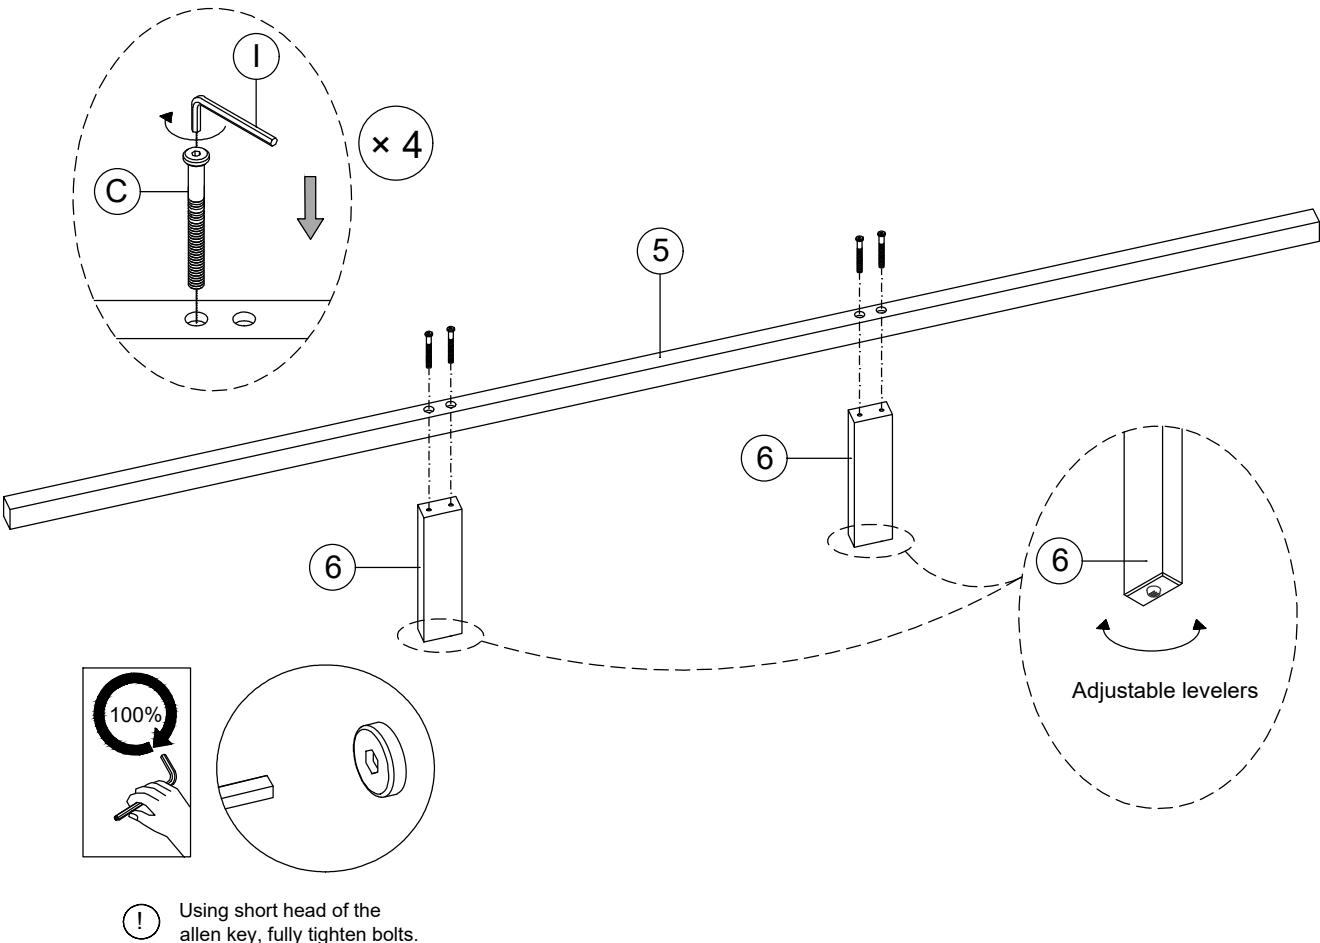


5

Attach the Center Support Frame (assembled in Step 4) to the Headboard (HB) and Footboard (FB). Ensure all wood plinths are aligned across all sides, small gap 1mm is acceptable, then fully tighten all bolts.

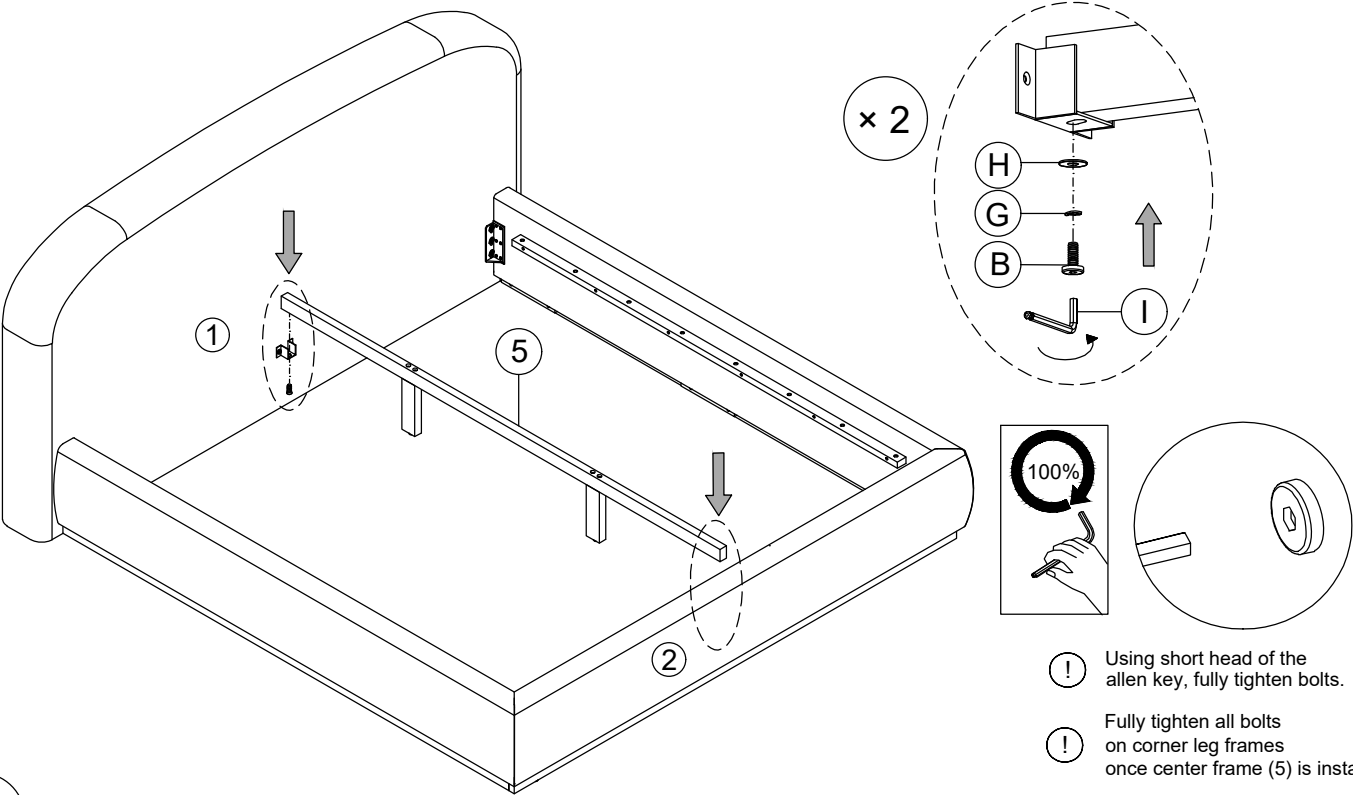

6

Attach 4 Slats (7) to the side rail (3, 4) first, using Bolts properly. Once all bolts are in place, fully tighten

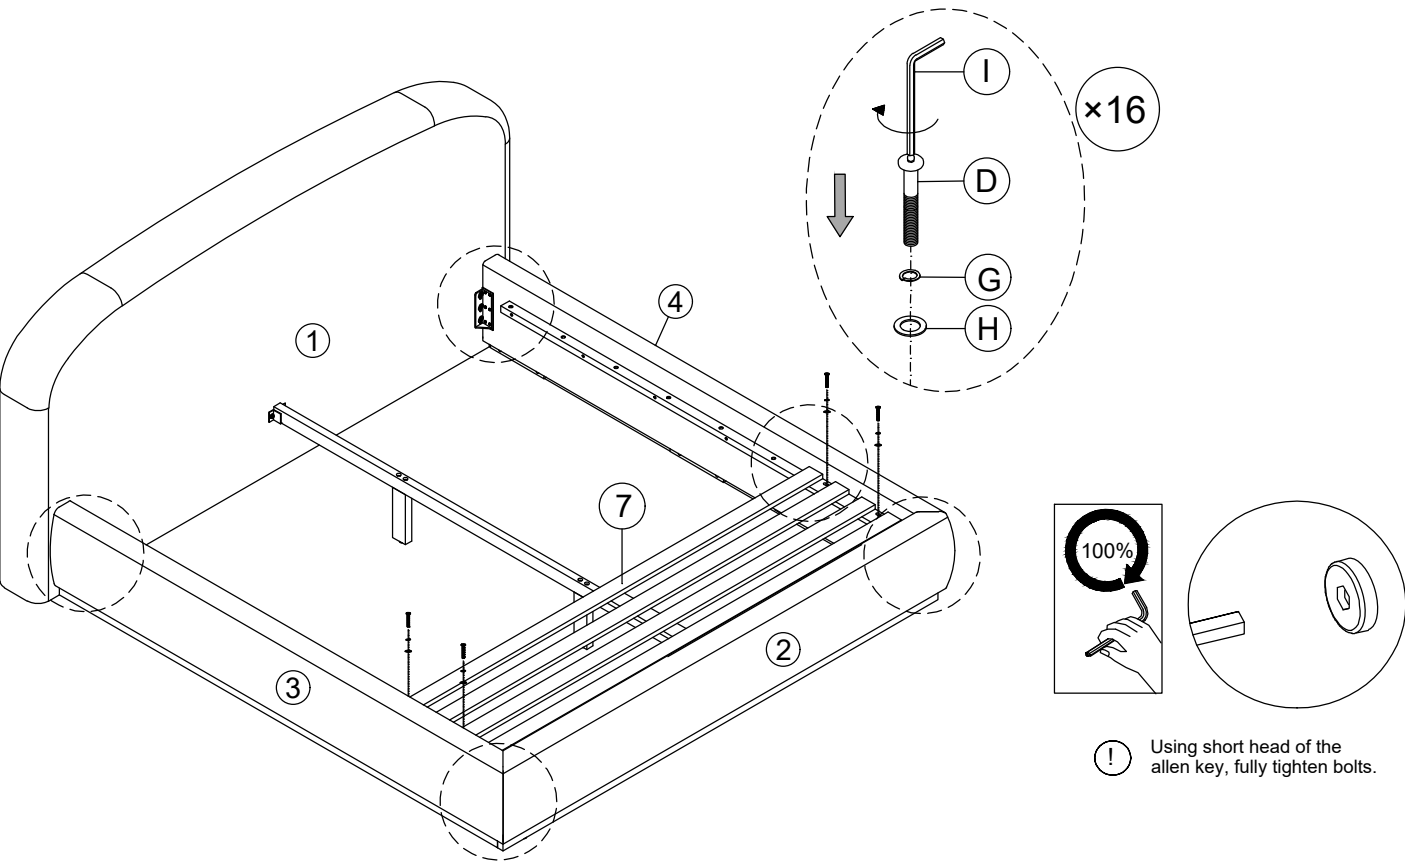

7

Finish

