


ARTICLE.

VERSION 1.2

Assembly Instructions

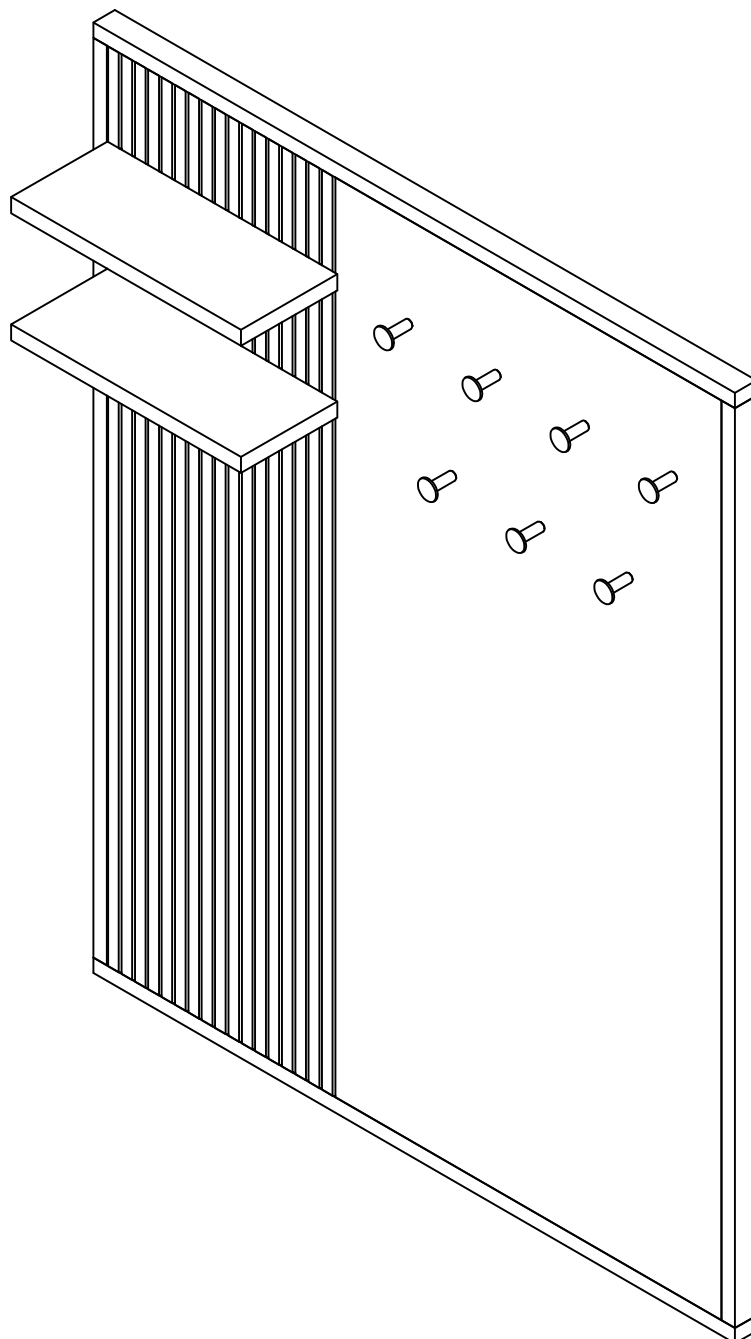

KOUVA



Wall Panel


ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.


When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email service@article.com or chat live at [article.com](https://www.article.com).

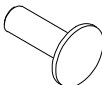
PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	BACK PANEL	1
B	SHELVES	2
C	FRENCH CLEAT	2
D	DRILL TEMPLATE 	1
E	SNAPTOGGLE 	6
F	ALLEN KEY 	1
G	M6 × 30MM BOLT 	17
H	M6 LOCK WASHER 	17
I	M6 WASHER 	17
J	1/4" × 60MM BOLT 	6
K	HOOKS 	7

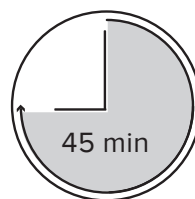



TIME

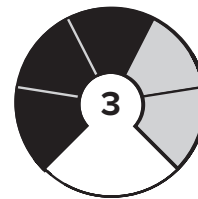



DIFFICULTY

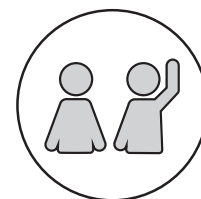


OF PEOPLE

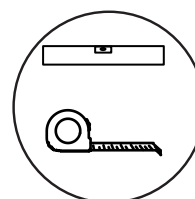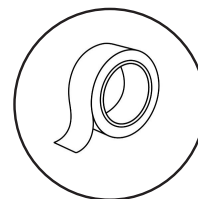LEVELER
MEASUREMENT

PAPER TAPE

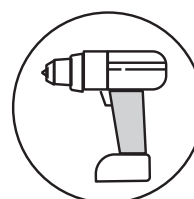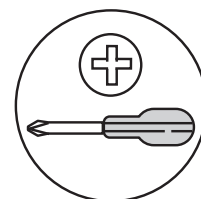

12 MM / DRILL BIT

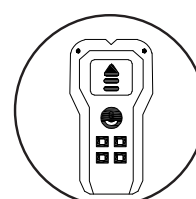

STUD FINDER

REQUIRED TOOLS




Hardware (E/J) to attach bracket to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

SPAREPART LIST		
ID	DESCRIPTION	QTY
E	SNAPTOGGLE 	2
J	1/4" × 60MM BOLT 	2


Note: This is a spare part in case the fitting has issues. You can use it as a replacement.

This line will show the position of wall panel when you attach it.

Drill bit 12mm / 1/2"

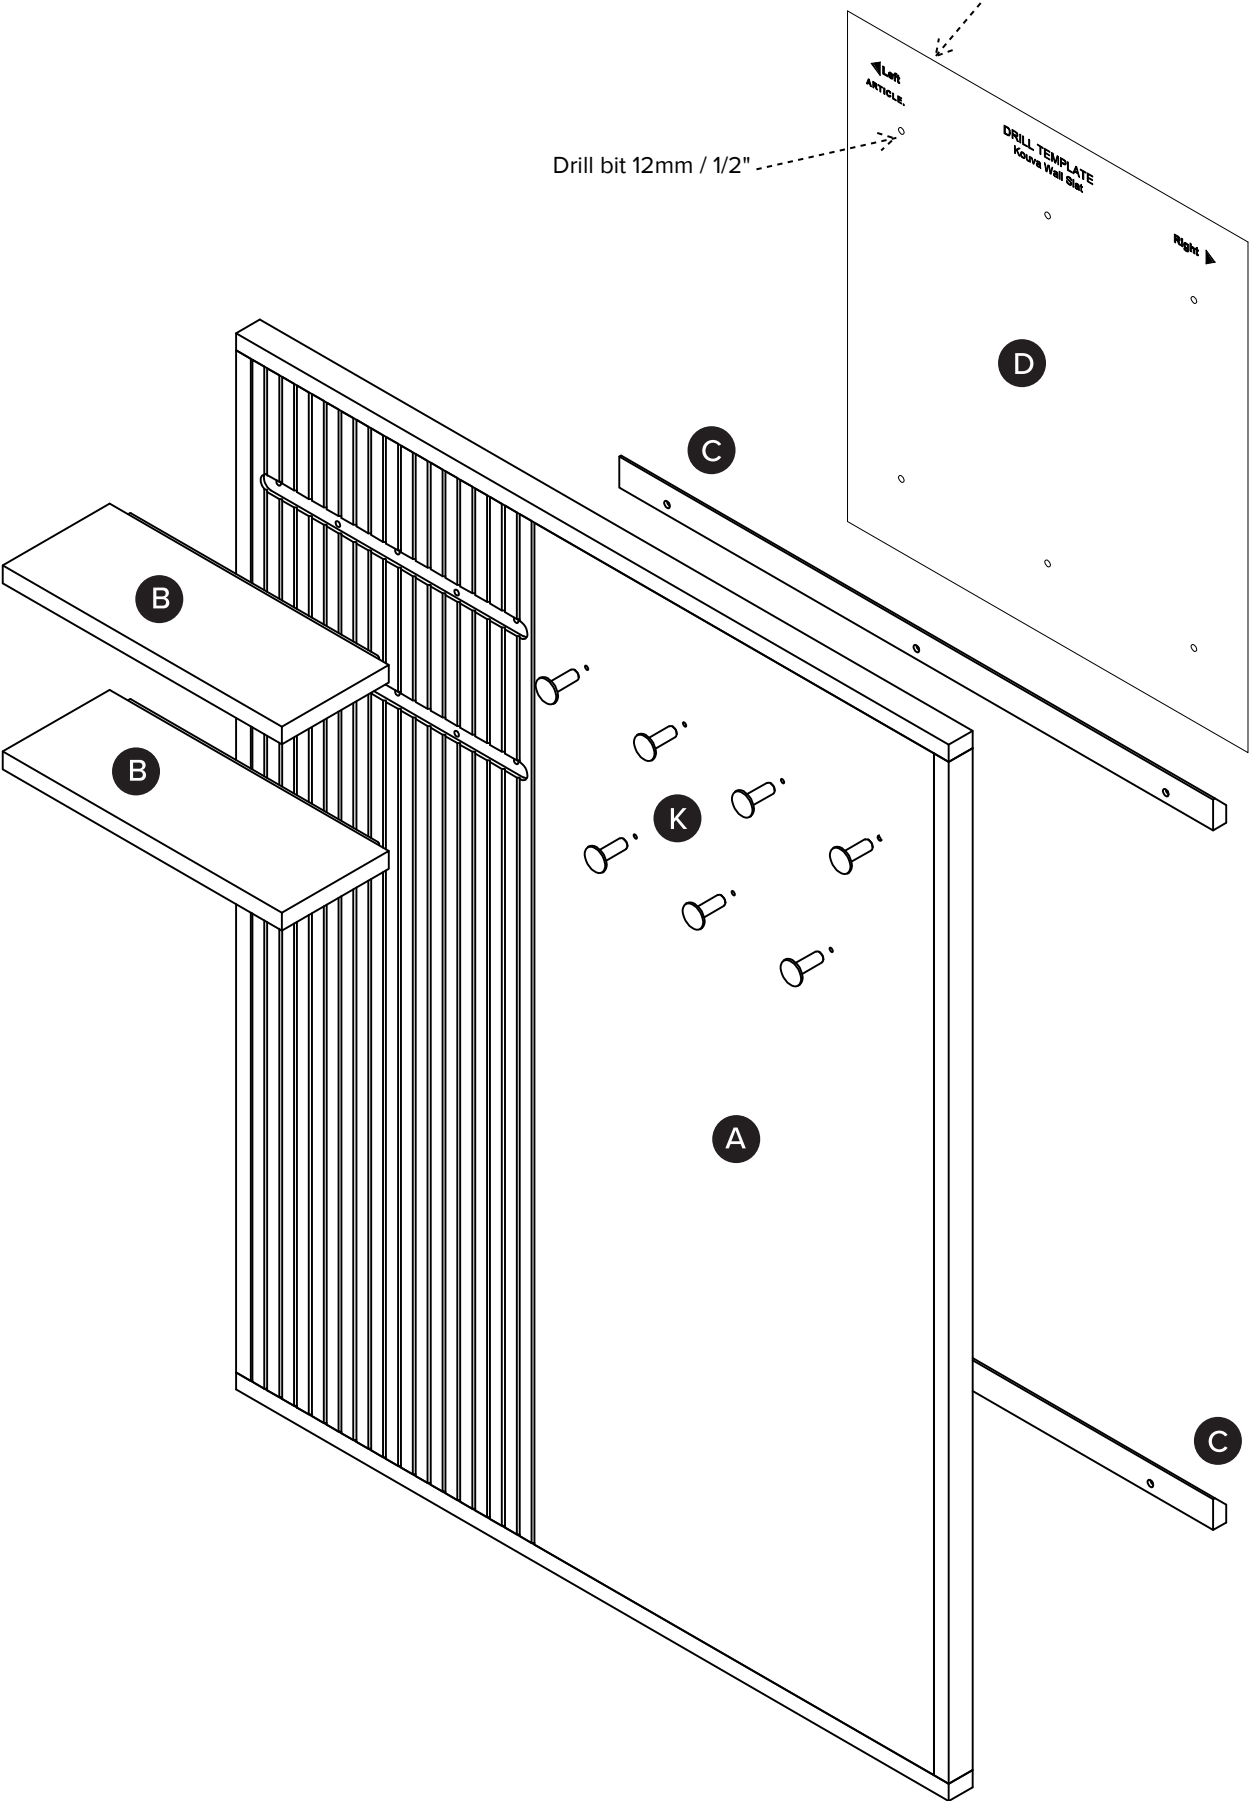


ⓘ The bench won't be provided together with this product. The height 77 - 1/2 inch is recommended when you purchase together with our Kouva Bench as one set.

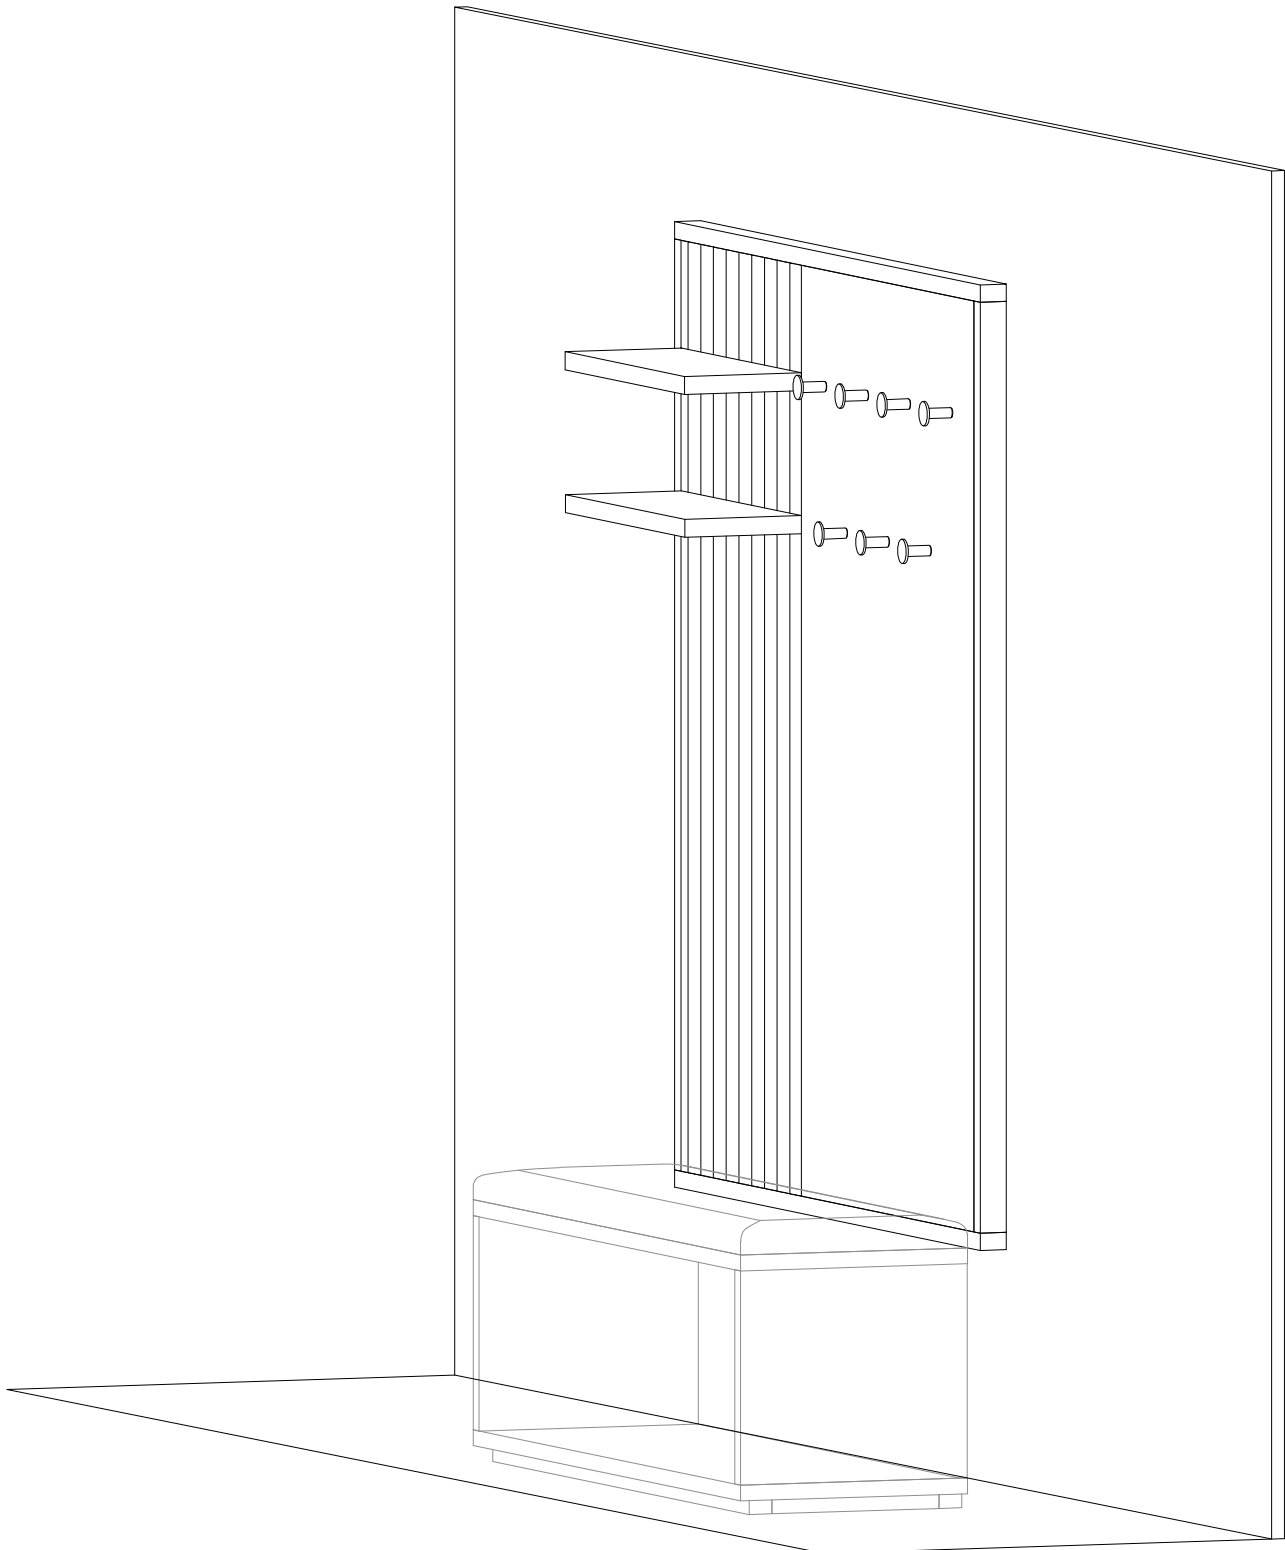


1A

- ! Use stud finder to avoid drilling holes on the wooden studs. Our hardware (E/J) provided are for drywall only, if your wall has different construction, please consult with your contractor for proper hardware.

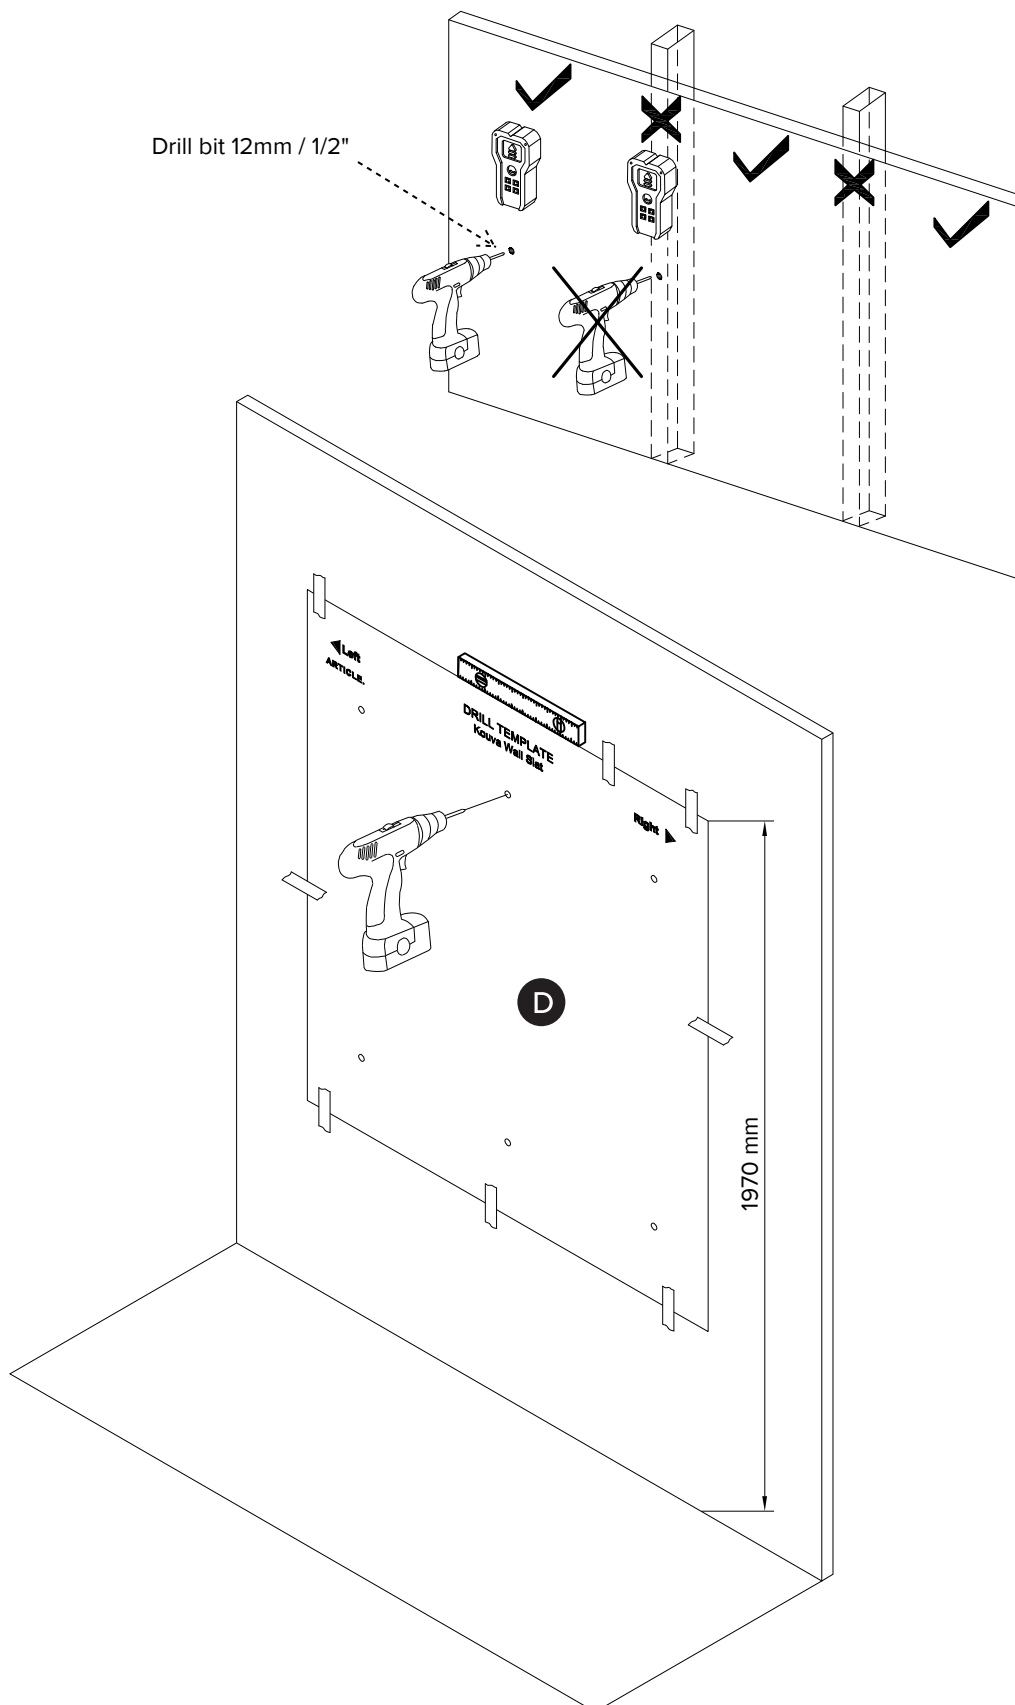


ⓘ The height 60 - 7/8 inch is recommended when you purchase this product only.

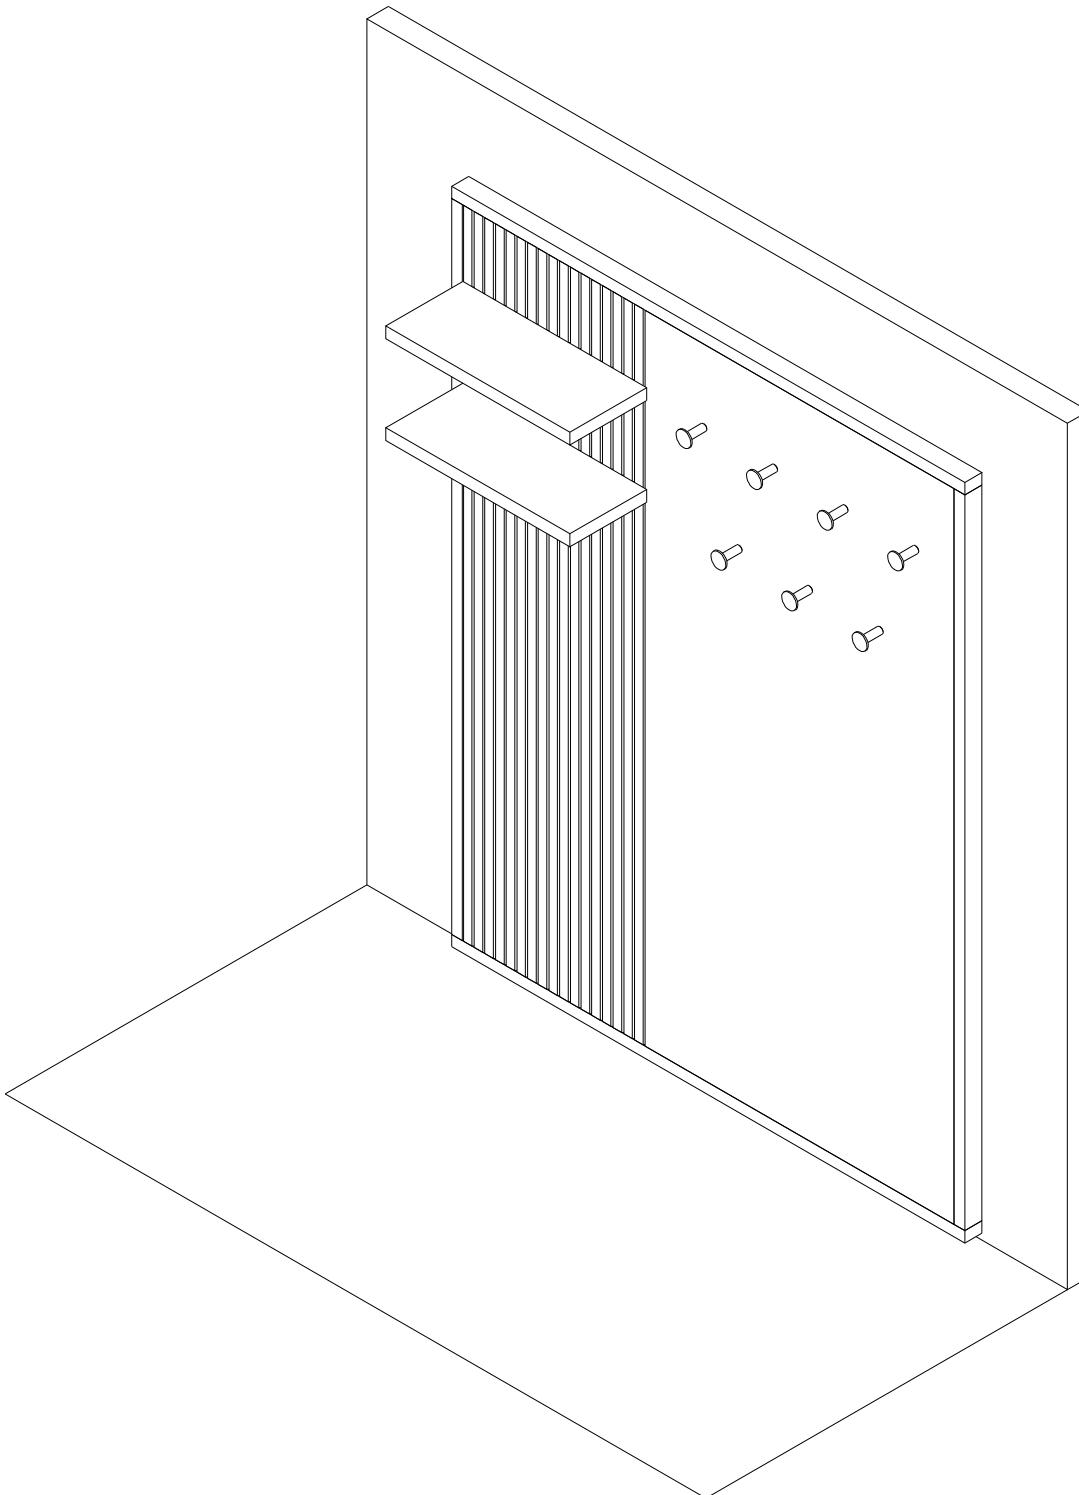


1B

- ! Use stud finder to avoid drilling holes on the wooden studs. Our hardware (E/J) provided are for drywall only, if your wall has different construction, please consult with your contractor for proper hardware.

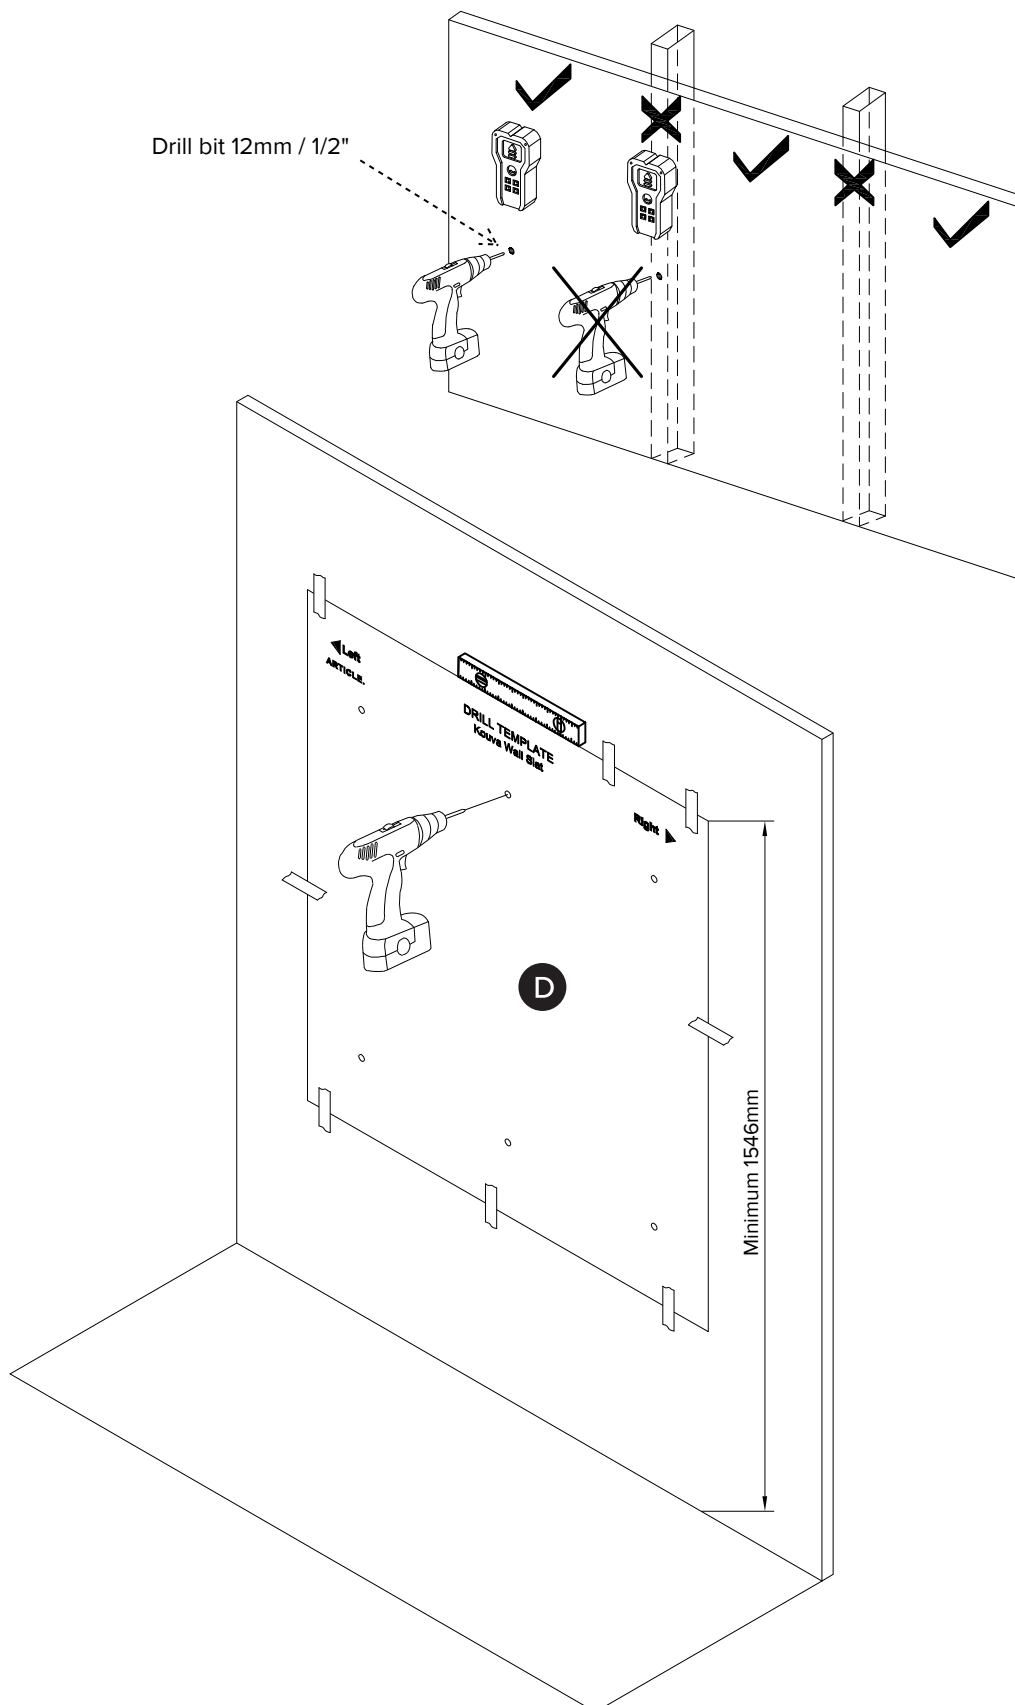

2A**PLEASE READ THE INSTRUCTIONS BEFORE ATTACHING THE HARDWARE.**


CHECK THE SNAP TOGGLE AND MAKE SURE NOTHING IS STUCK OR DAMAGED. CAREFULLY AND SLOWLY FOLLOW THE STEPS ONE BY ONE.

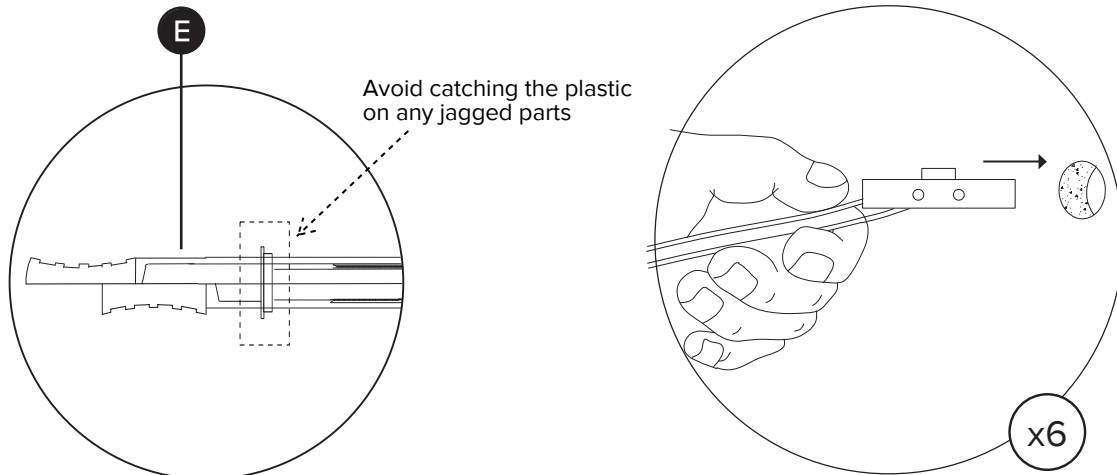**2B**


Slide one side of the plastic trap to straighten the metal, then insert it into the holes.



Pull the plastic trap backward until 2 ends aligned in order to make the metal channel rests flush behind the wall vertically.

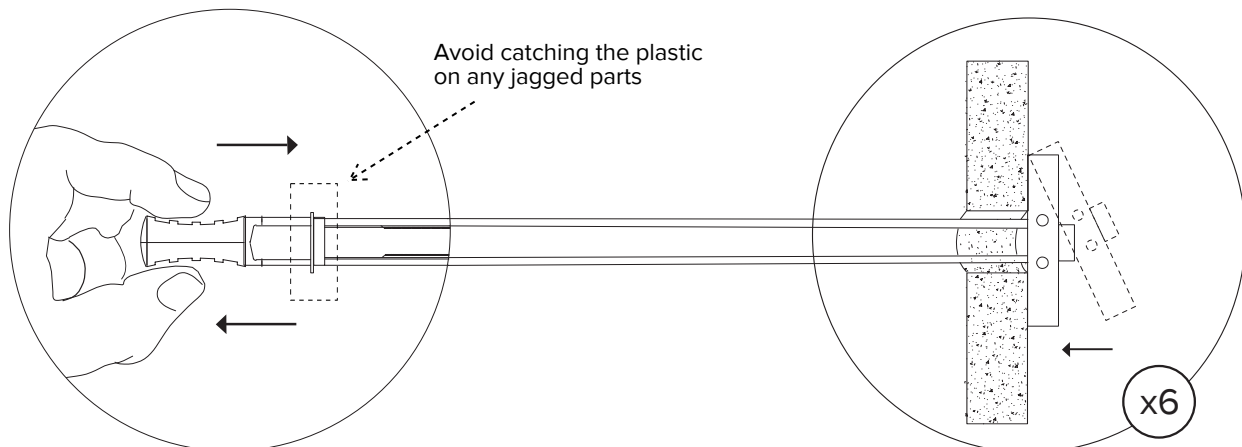**2C**

Use two fingers to hold the plastic trap fixed and straight.

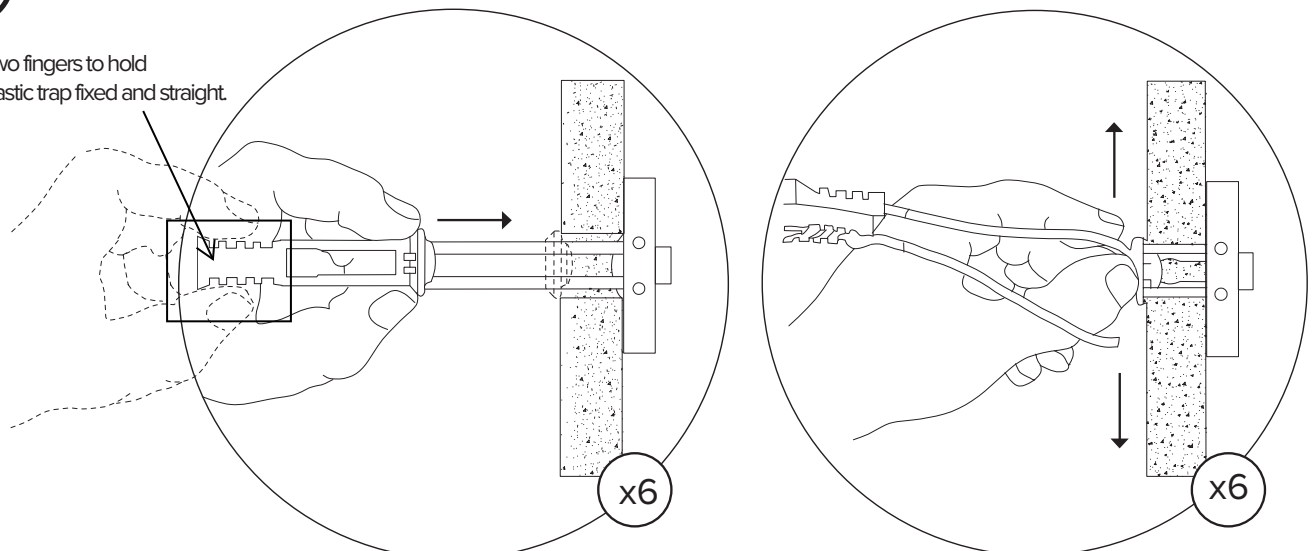

Slide the plastic cap along the straps until flange of cap is flush with the wall




Place thumb between plastic straps. Push side to side, snapping off straps level with flange of cap.



3





✗ WRONG

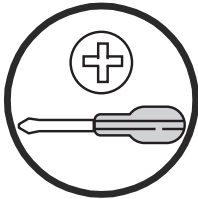


✓ RIGHT

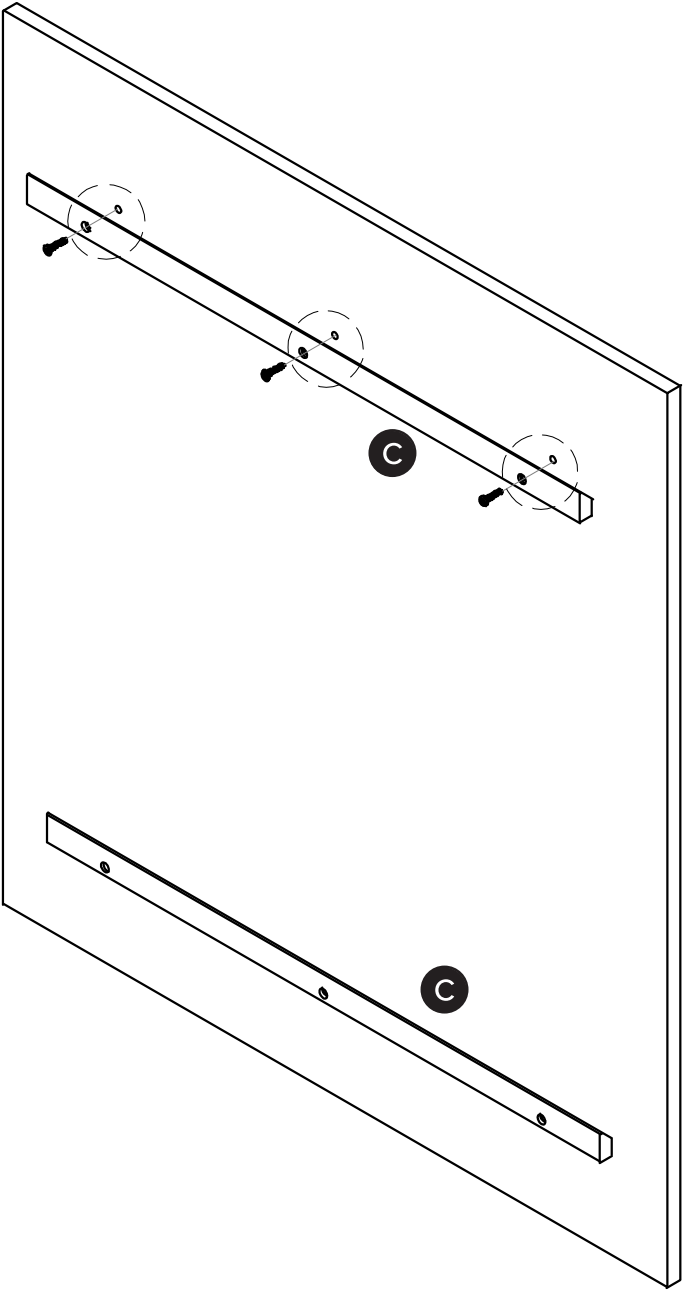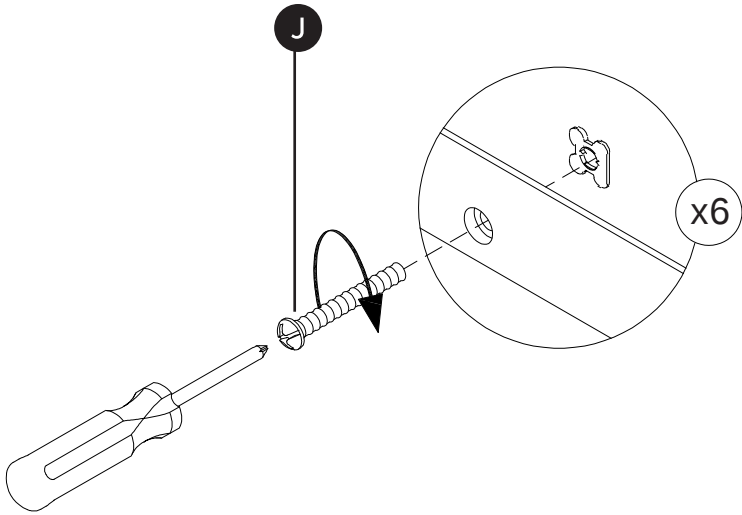

4

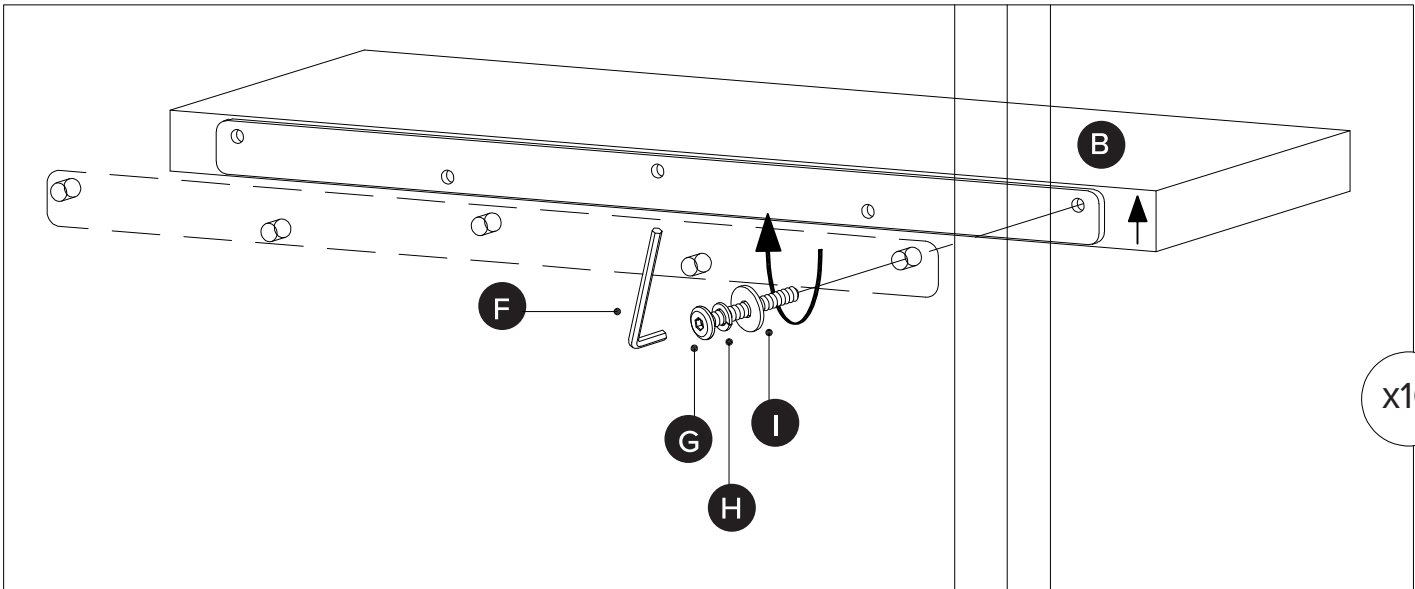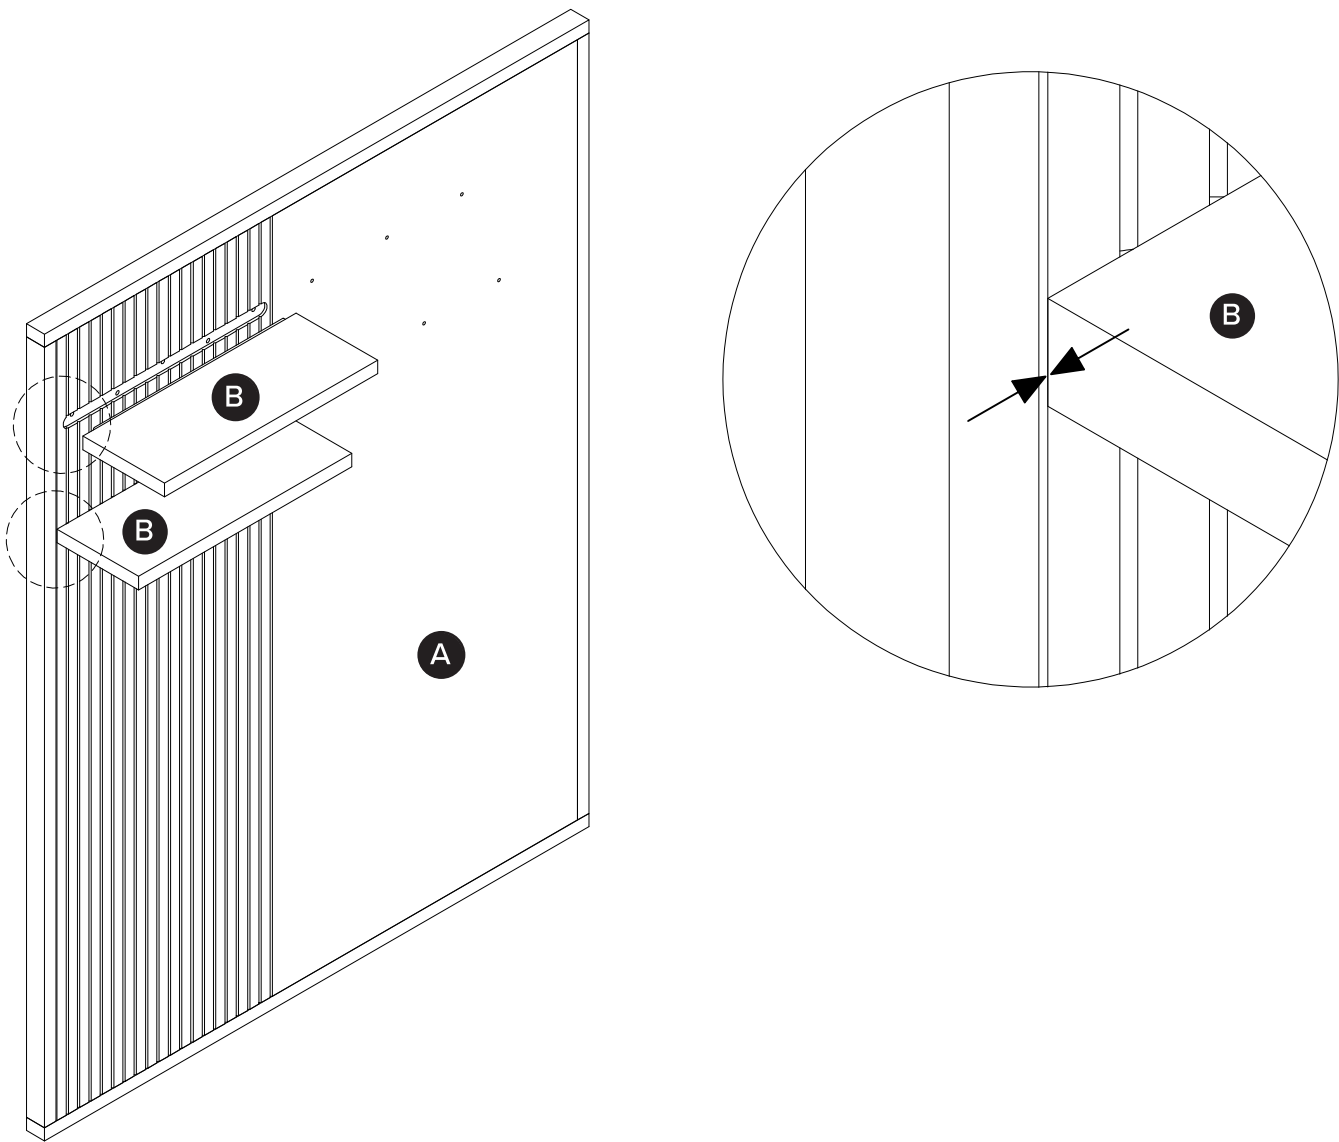

5

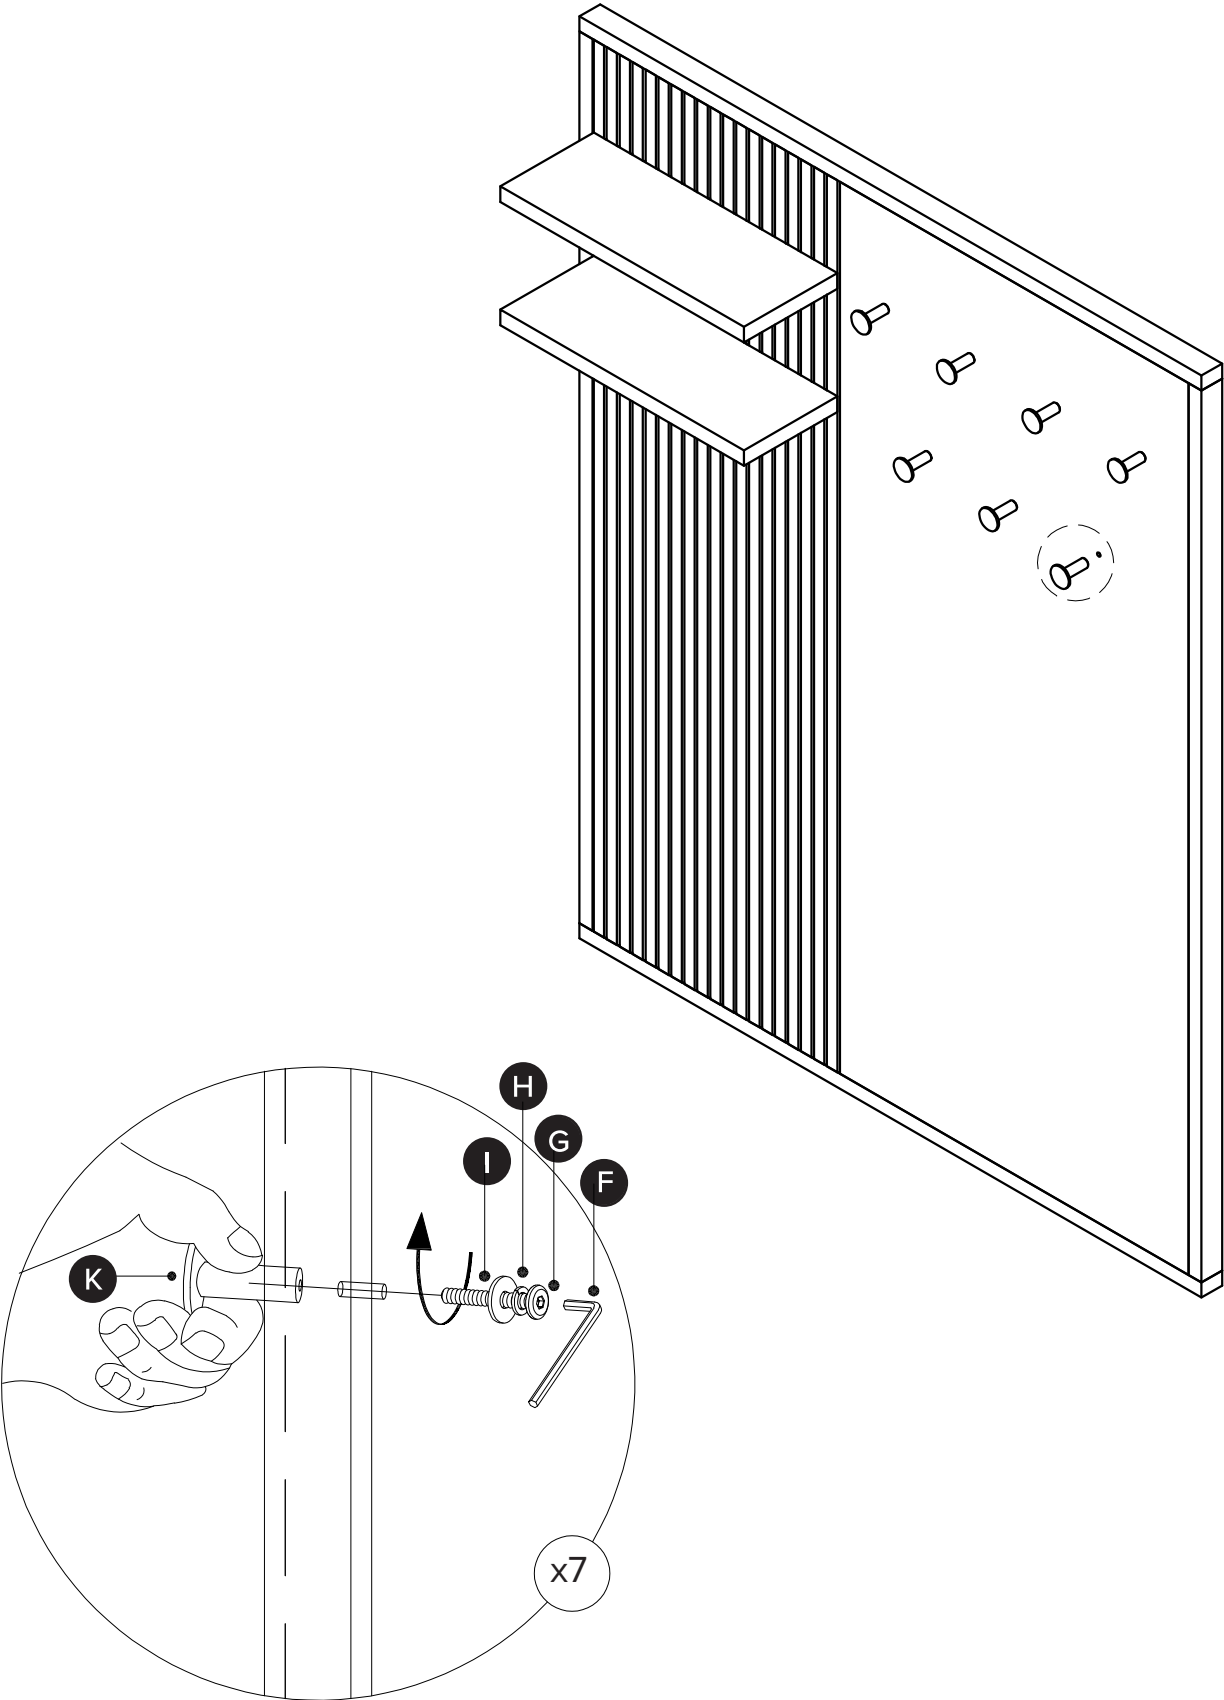

6

! Slot wall slat (A) onto wall bracket (C).

