


ARTICLE.

VERSION 1.0

Assembly Instructions

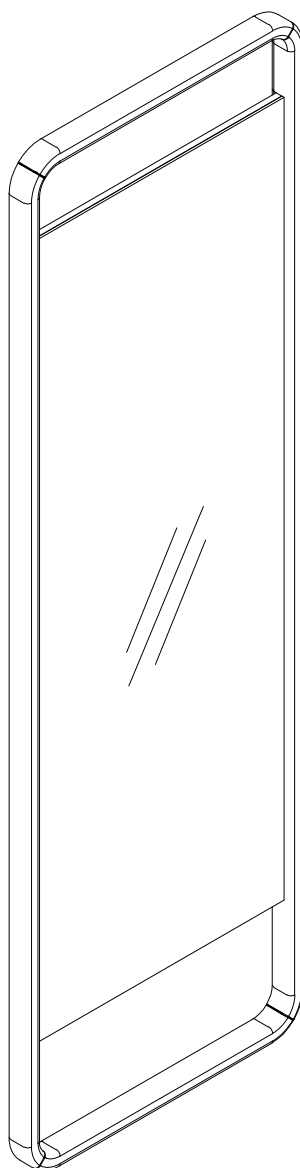

NERA

Floor Mirror




ANTI-TIP RESTRAINT INTALLATION

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

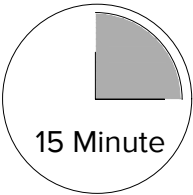


TIME

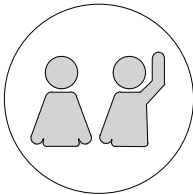


OF PEOPLE

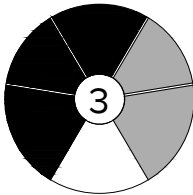

DIFFICULTY

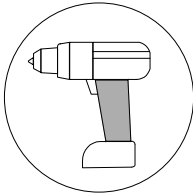

REQUIRED TOOL
8MM / 5/16" DRILL BIT

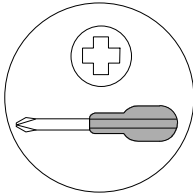



REQUIRED TOOL

! Hardware (B/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	FRAME MIRROR 	1


HARDWARE LIST			
ID	DESCRIPTION		QTY
A	BRACKET 		4
B	PLUG 		4
C	M4× 12MM BOLT 		4
D	M5x40MM SCREW 		4
E	STRAP 		2

1

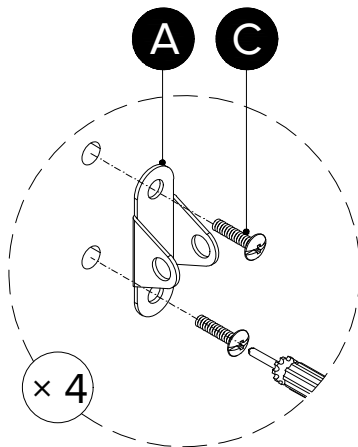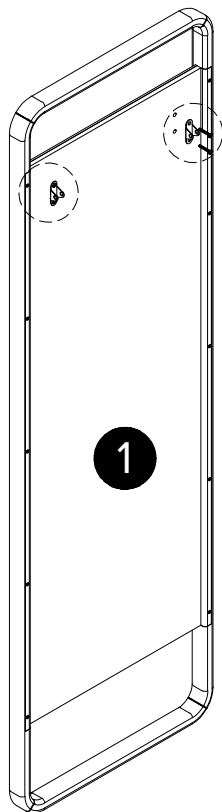


Attach pair of brackets to top corners of the back of the unit.

2


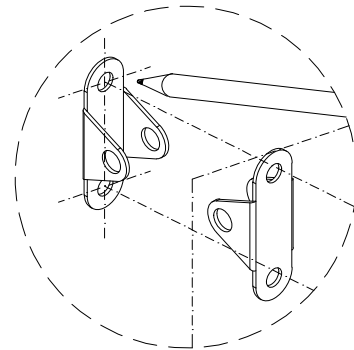


Mark on wall where second pair of brackets should be placed.

3

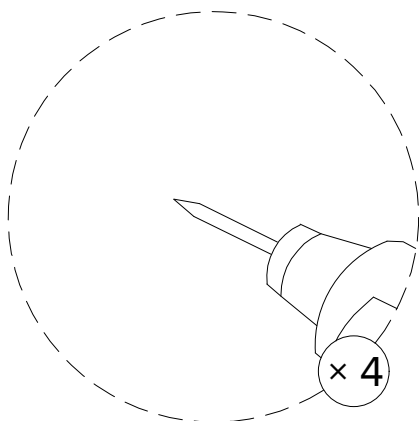

Drill holes in wall using
8mm / 5/16" drill bit.

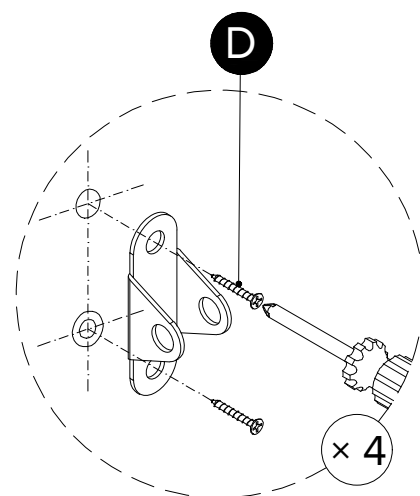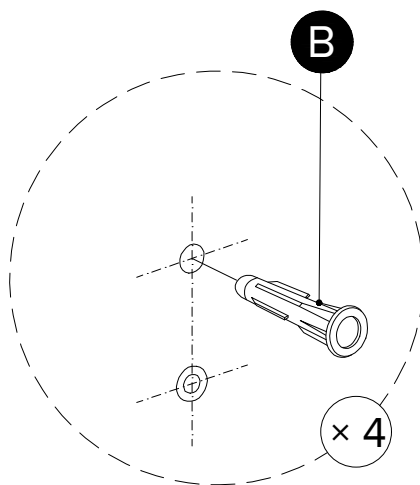

4

Align brackets on unit
with brackets on wall.

WALL



5

