
ARTICLE.

VERSION 1.1

Assembly Instructions

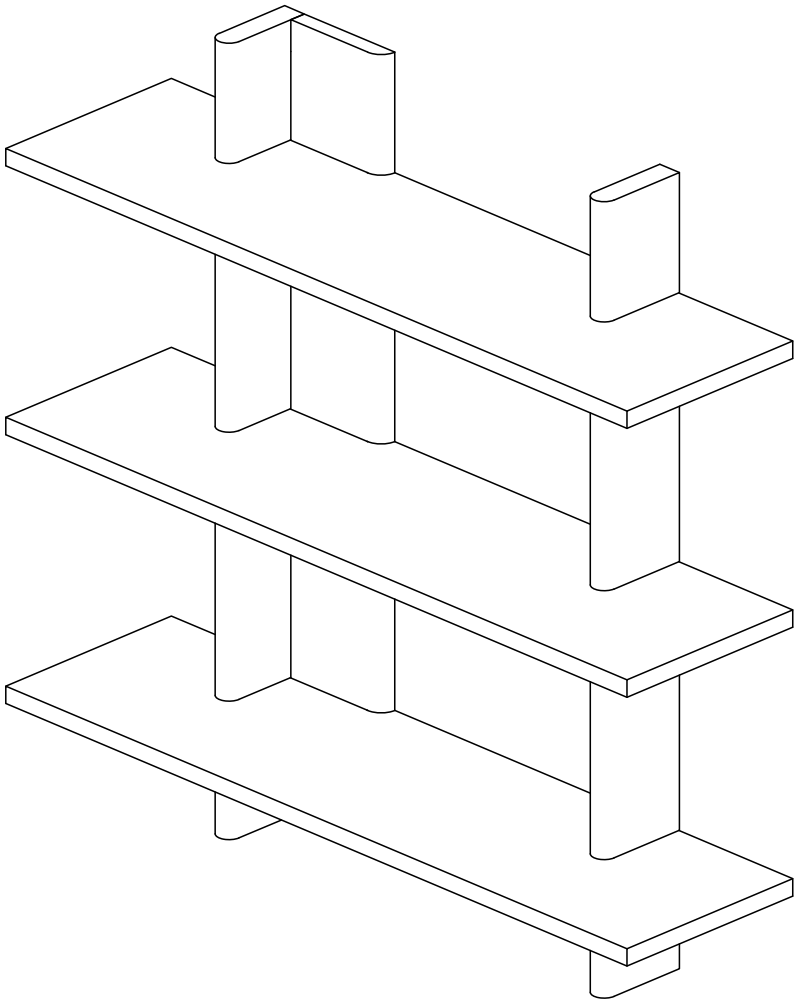

TORME


32.5" Modular Shelving Unit

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

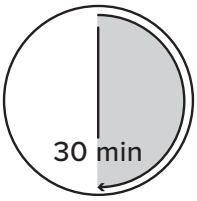


TIME

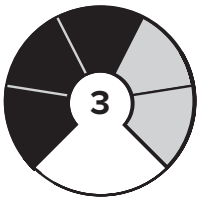


DIFFICULTY




OF PEOPLE

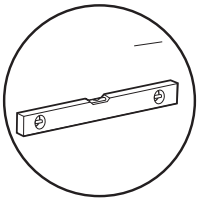


LEVEL

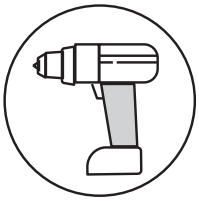


POWER DRILL

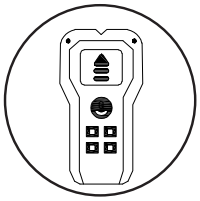


STUD FINDER

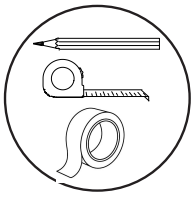

MEASUREMENT TAPE, PENCIL, PAPER TAPE

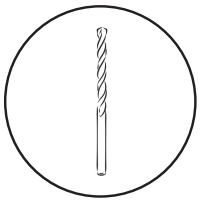

6MM OR 1/4'' DRILL BIT FOR DRYWALL (GYPSUM)



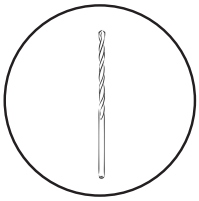


4MM OR 5/32'' DRILL BIT FOR WOODEN STUDS



REQUIRED TOOLS

! Hardware (C/D) to attach bracket to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.


PARTS INVENTORY


ID	DESCRIPTION	QTY
1	L-SHAPE DIVIDER 	1
2	I SHAPE DIVIDER 	1
3	SHELF 	3
4	DRILL TEMPLATE 	1

HARDWARE LIST

ID	DESCRIPTION	QTY
A	BOLT M6 x 25 	3
B	BOLT M6 x 55 	6
C	DRY WALL TOGGLE 	4
D	DRY WALL SCREW M5 x 70 	4
E	ALLEN KEY 	1


i

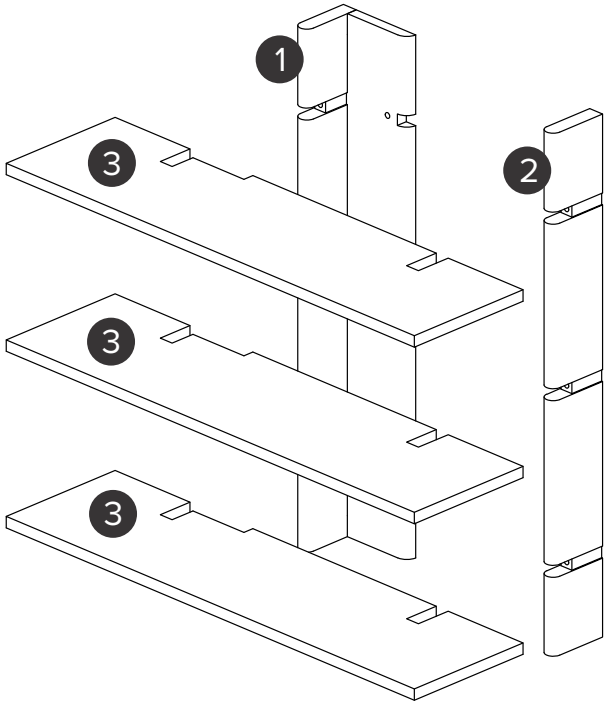


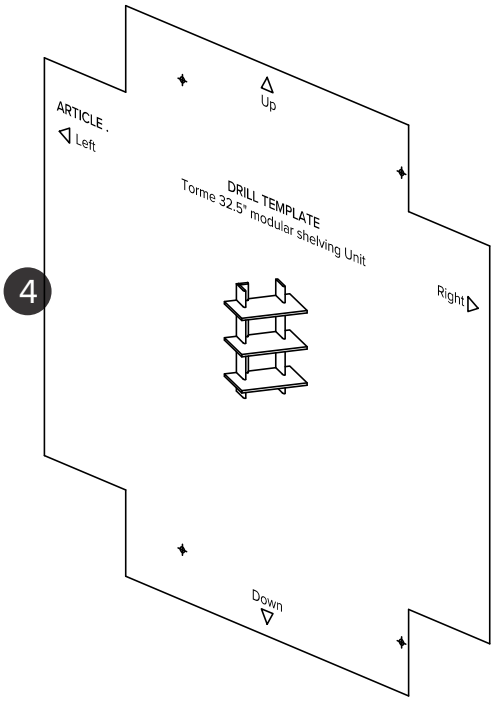


ii

! Reverse the drilling template (4) if you want to install the shelf with the L-shaped section on the right side.

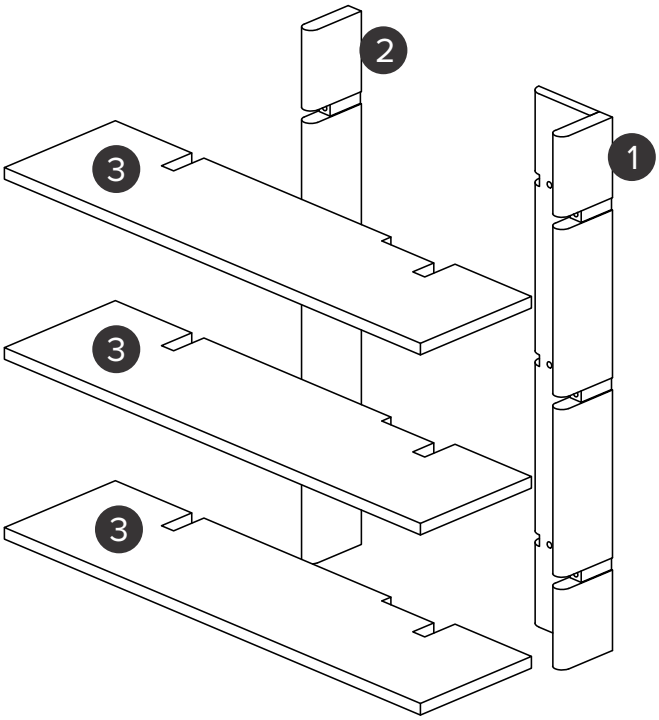

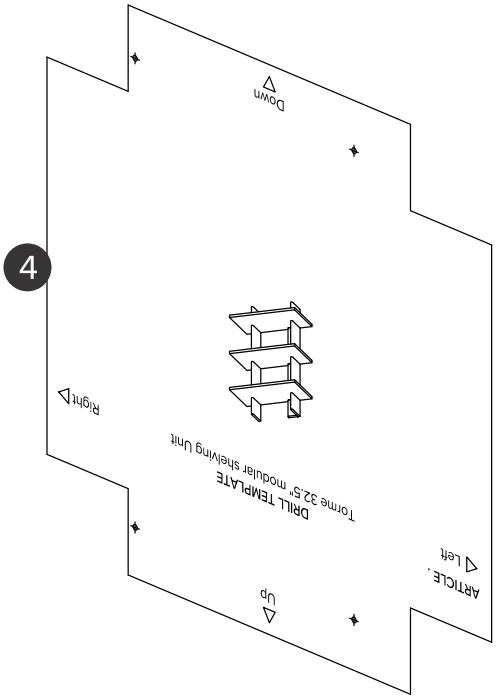


1

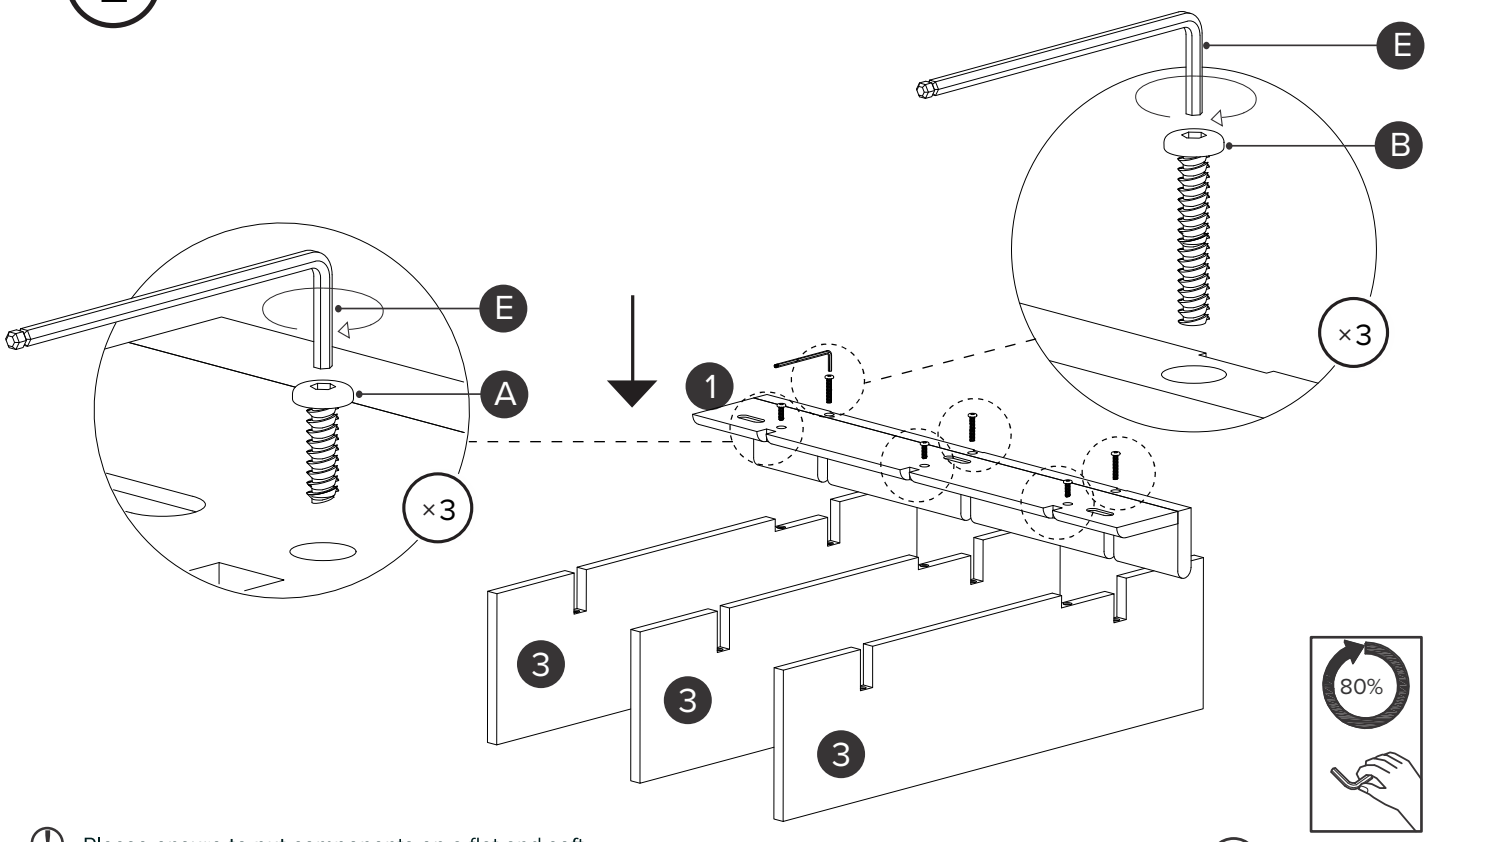

Please ensure to put components on a flat and soft surface such as a cardboard or a rug.

Tighten the bolts 80%

2

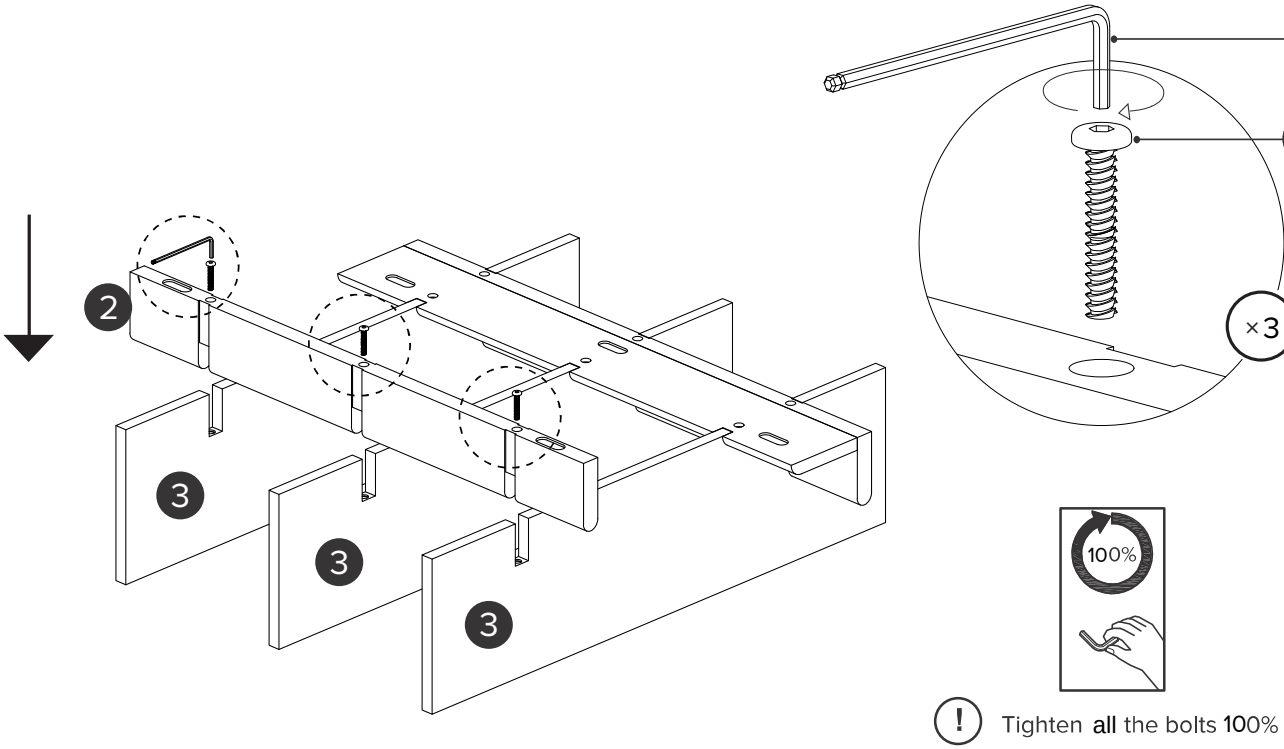


Tighten all the bolts 100%

Please ensure to put components on a flat and soft surface such as a cardboard or a rug.

3




! Tighten all the bolts 100%

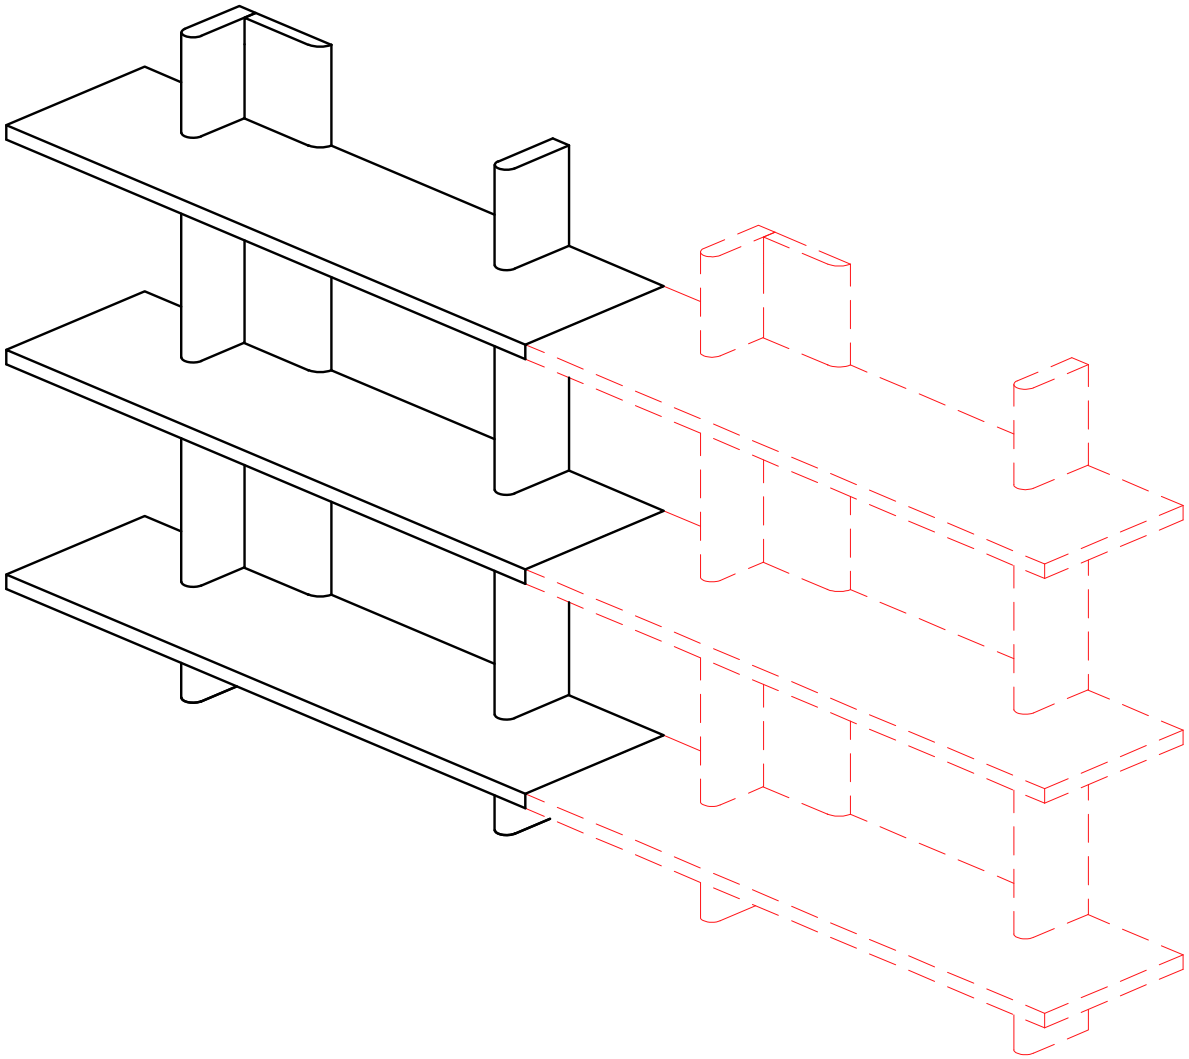


! **Assembly Tip:** If you purchased multiple shelves for a modular setup, align all the shelves in the standing position together before fully tightening the bolts.

4

! The shelf cannot slide left or right.
Confirm its position with the drilling template before drilling.

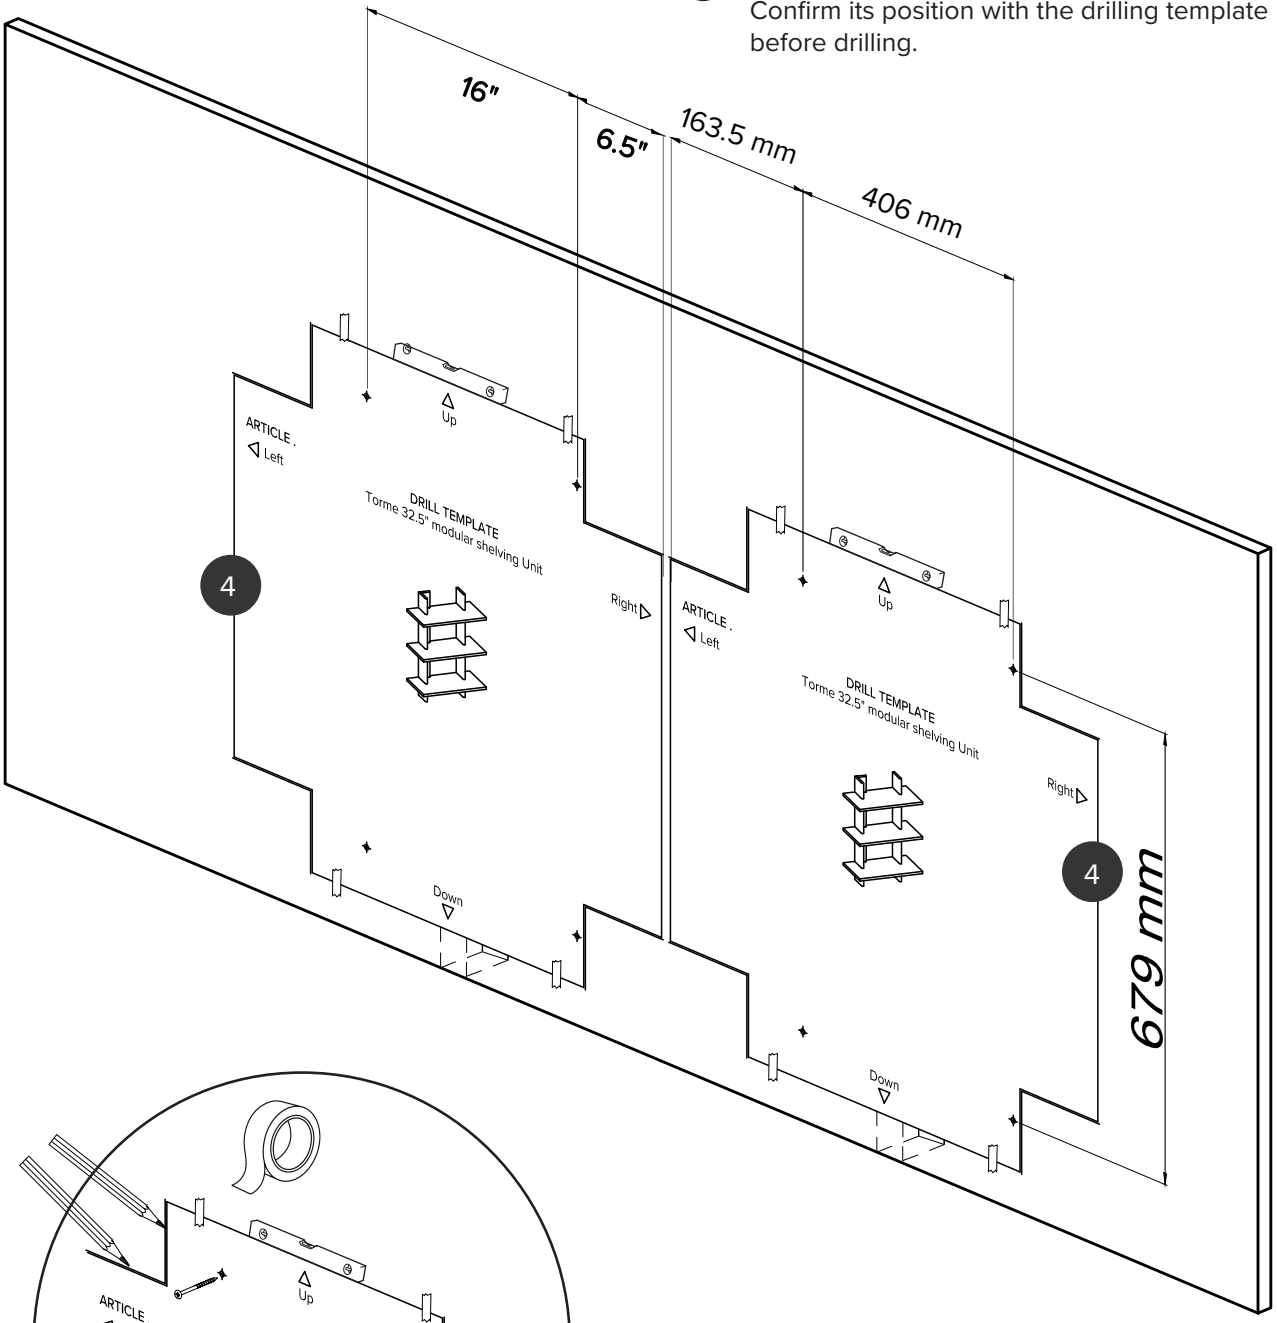

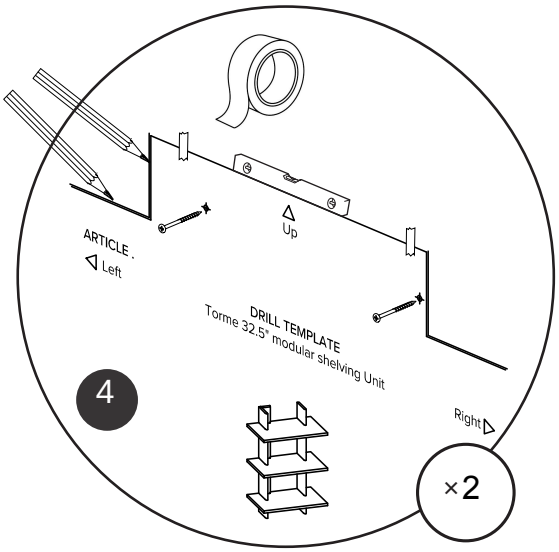


! For modular setups, leave a 2 mm gap between shelves to prevent misalignment on uneven walls or tolerance between products.

! **Assembly Tip:** Use masking tape and a pencil to mark two perpendicular lines along the corner edges of the drilling template. These marks will help you position and hang the shelf later (step 6)


5A INSTALLING INTO DRYWALL (NO WOODEN STUDS)

! Use a stud finder to check whether there is a wooden stud behind each drilling location.


- **No wooden stud behind the drywall (gypsum):** follow steps as shown below.
- **Wooden stud behind the wall:** follow the instructions on the next page.

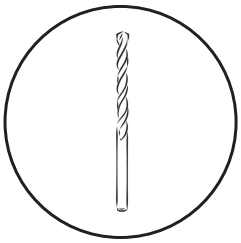


6MM OR 1/4'' DRILL BIT
FOR DRYWALL (GYPSUM)

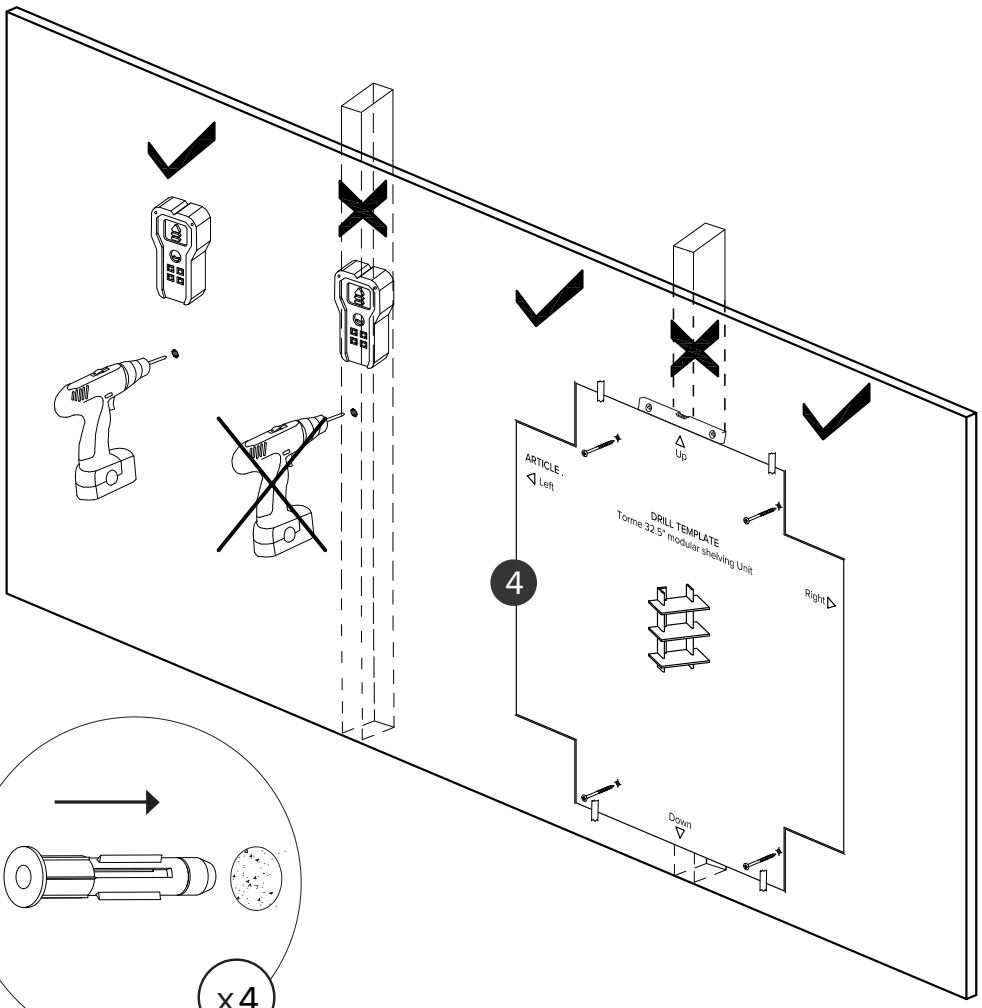


! Drill a hole in the drywall (gypsum) using a 6 mm drill bit.

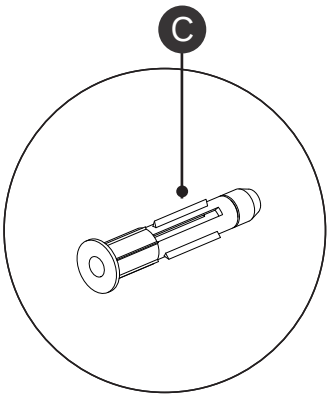

! Insert the toggle anchor (C) into the drilled hole.

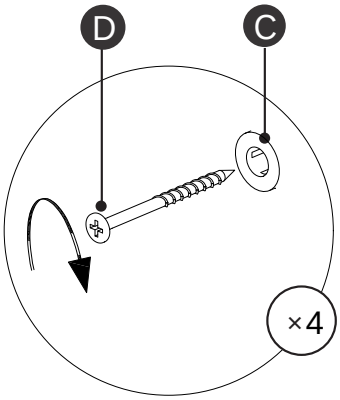

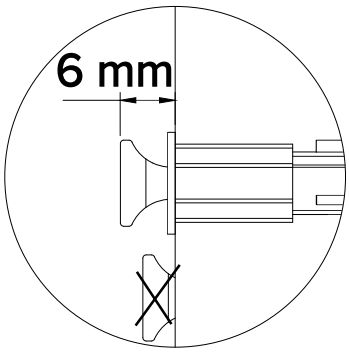


! Insert the screw (D) into the toggle anchor (C). Leave the screw head protruding **6 mm from the wall** to fit into the shelf's hanging brackets.

5B INSTALLING INTO DRYWALL (WOODEN STUDS)


Use a stud finder to check whether there is a wooden stud behind each drilling location.


- **No wooden stud behind the drywall (gypsum):** follow steps on previous page
- **Wooden stud behind the wall:** follow the instructions below

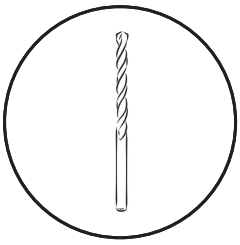


4MM OR 5/32'' DRILL BIT
FOR WOODEN STUDS


Tip ! Pre-drill a pilot hole in the wooden studs using a 4 mm drill bit.

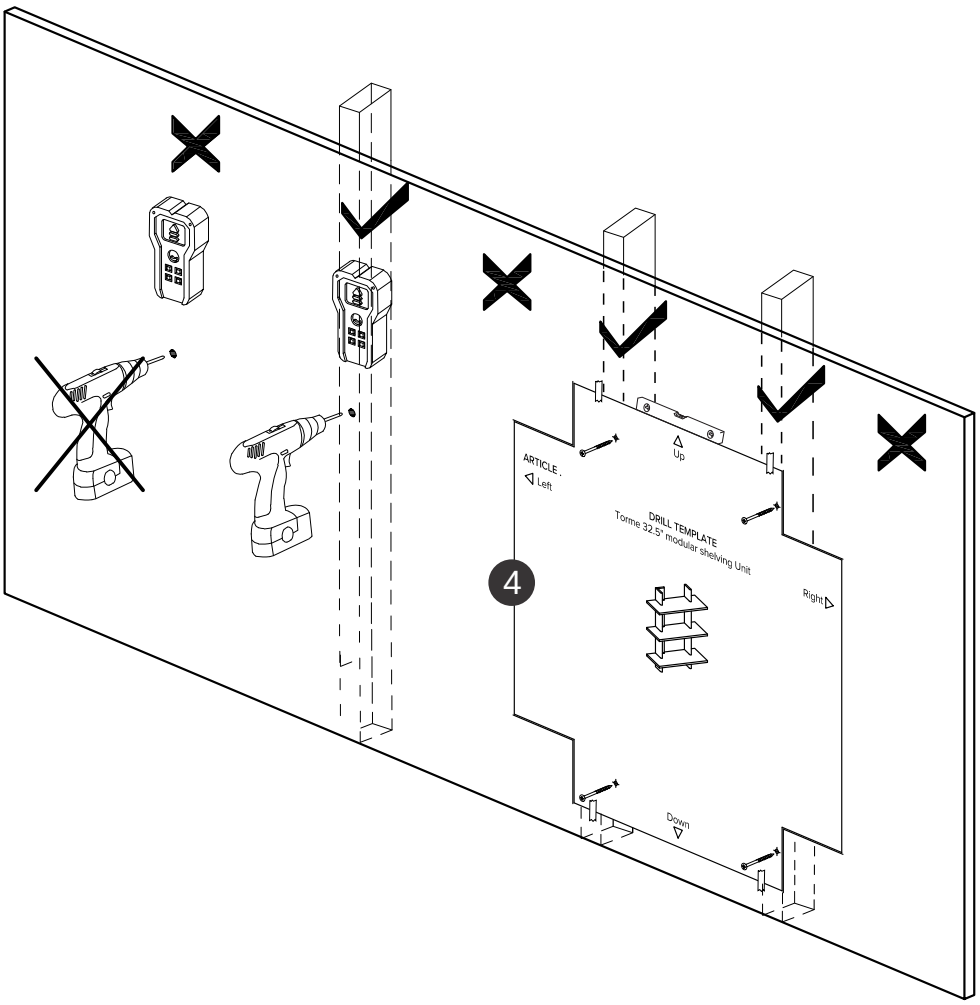

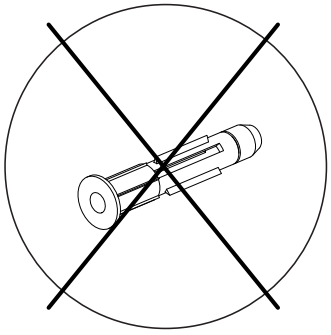

Do not use toggle anchors (C) when installing into wooden studs.

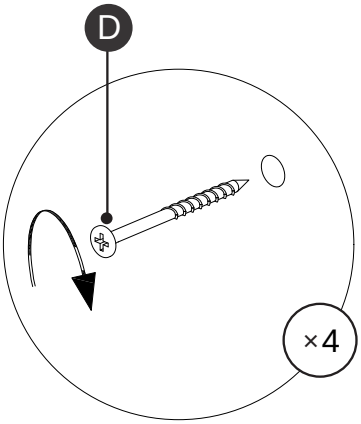


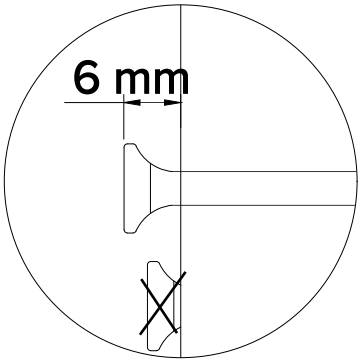



Insert the screw (D) on to the wooden studs. Leave the screw head protruding **6 mm from the wall** to fit into the shelf's hanging brackets.


6

Assembly Tip: The two lines marked in Step 4 help align the center of the metal brackets on the back of the shelf with the screw heads on the wall. Follow the steps below.

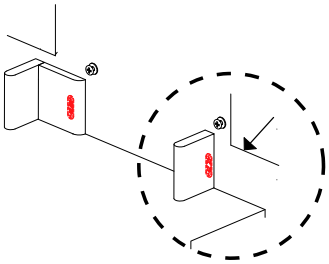


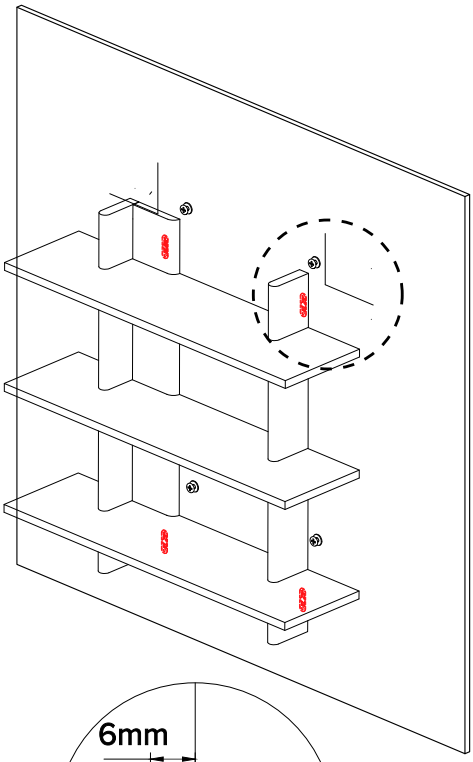


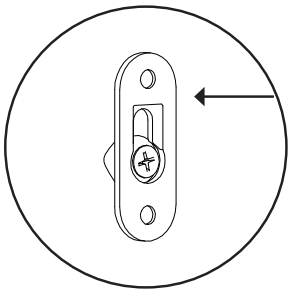

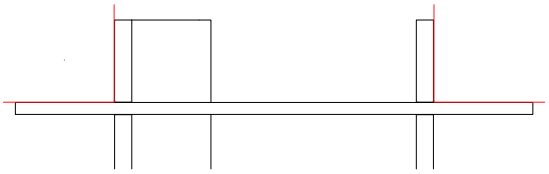


Align the right-angle corners of the top shelf and divider with the two lines marked on the wall in Step 4.

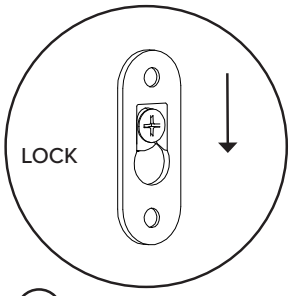


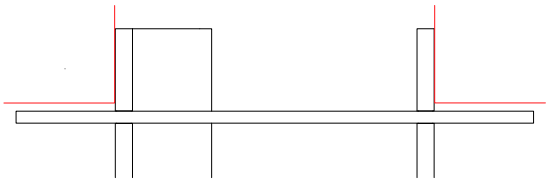


Push the shelf down into place. Make sure all four screws lock securely into the four metal brackets.

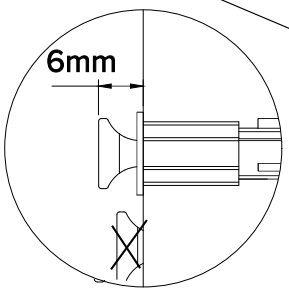

If you have difficulty hanging the shelf, check that all screw heads (D) protrude 6 mm from the wall.

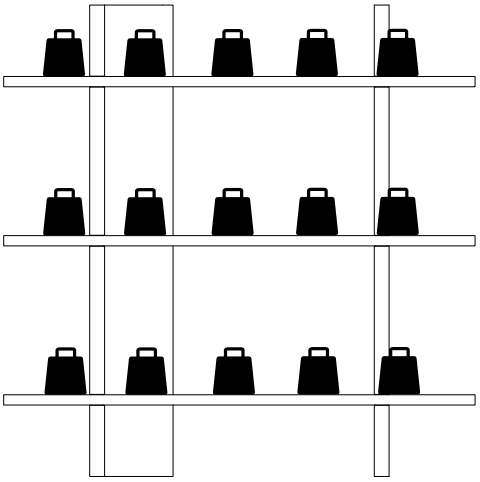

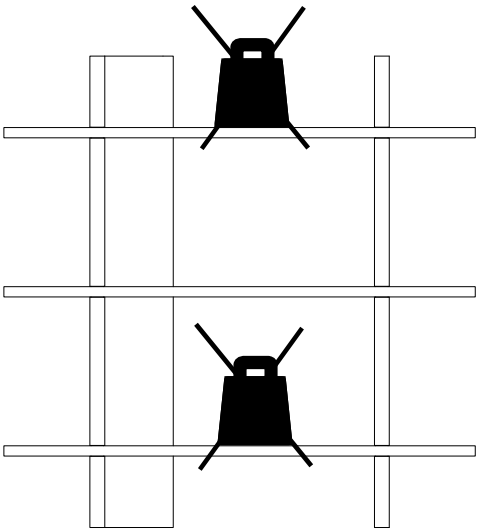

Attention: Maximum load on each shelf is 68 lbs

MODULAR HANGING INSTRUCTION

Assembly Tip: For a modular setup, always hang the bottom shelf first, then the top shelf.

