


ARTICLE.

VERSION 1.0

Assembly Instructions

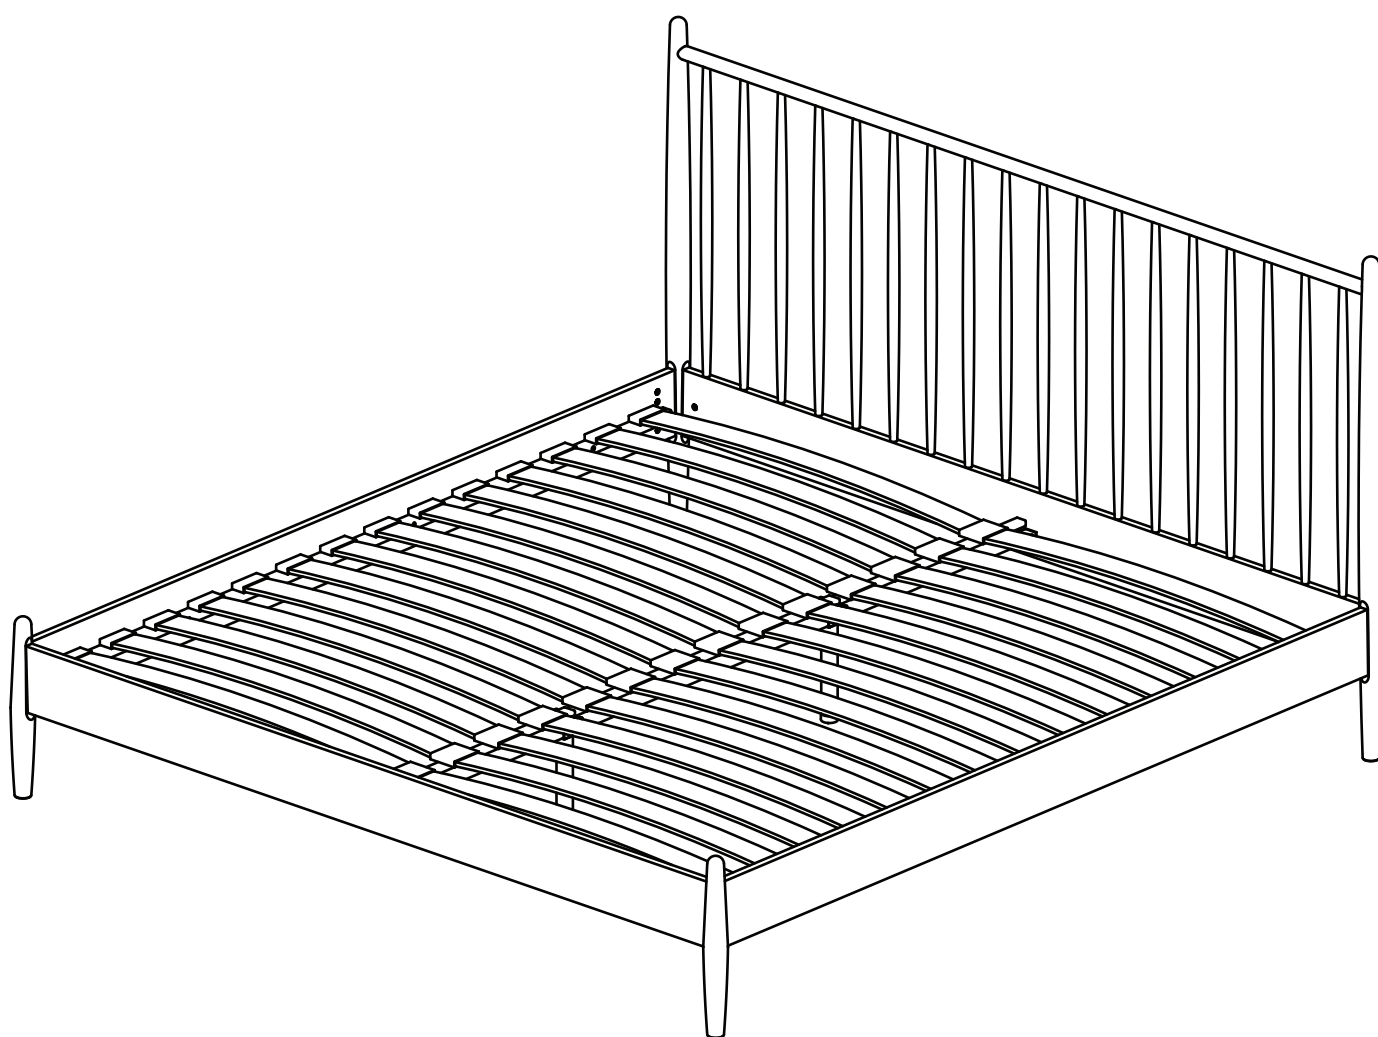

LENIA

Bed

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.




TIME






DIFFICULTY







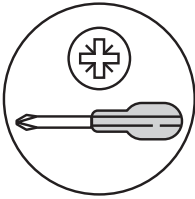


OF PEOPLE





REQUIRED TOOL
Pozidriv screwdriver


PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	HEADBOARD	1
B	FOOTBOARD	1
C	CENTER BEAM BRACKET 	2
D	LEFT SIDE RAIL	1
E	RIGHT SIDE RAIL	1
F	CENTER BEAM	1
G	CENTER LEG BRACKET (PRE-INSTALLED)	2
H	FLOATING CENTER LEG	2
I	SLAT CLIP 	28
J	SLAT	28
K	SLAT CENTER BRACKET 	14

PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
L	FELT PAD 	4
M	ALLEN KEY 	1
N	M6 × 12MM BOLT 	4
O	COMPRESSION FITTING ANCHOR 	10
P	M8 × 8.5MM SCREW 	4
Q	M7.5 × 7MM SCREW 	6
R	M6 × 20MM BOLT (PRE-INSTALLED) 	4



! Structural integrity is warranted only if all fasteners are properly installed & tightened, and the bed is moved only per instructions.

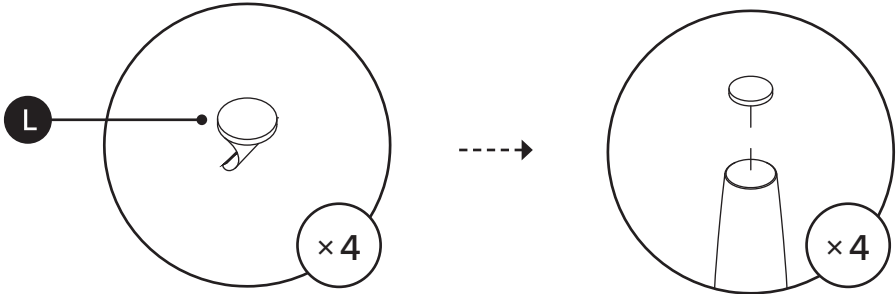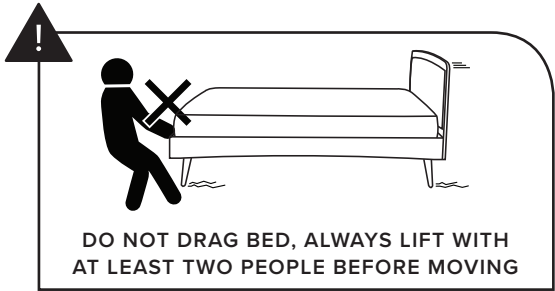





2

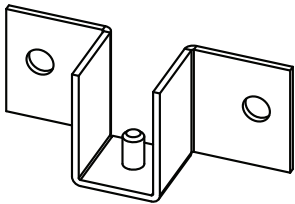

! Ensure center beam brackets (C) are level when installed.

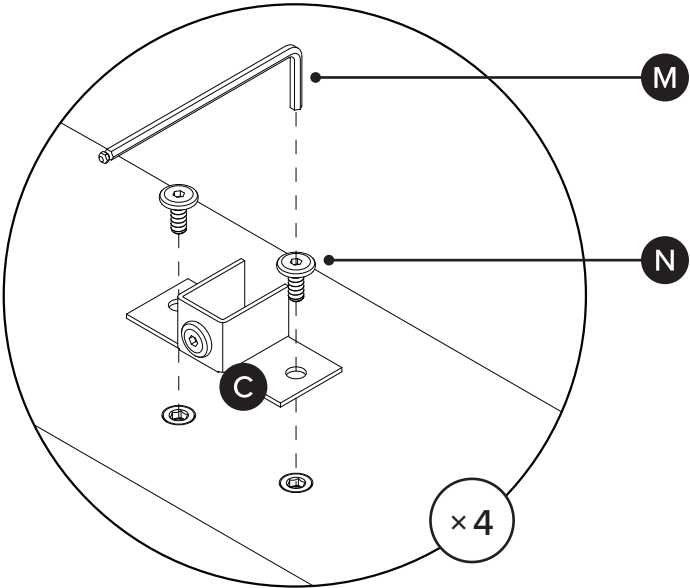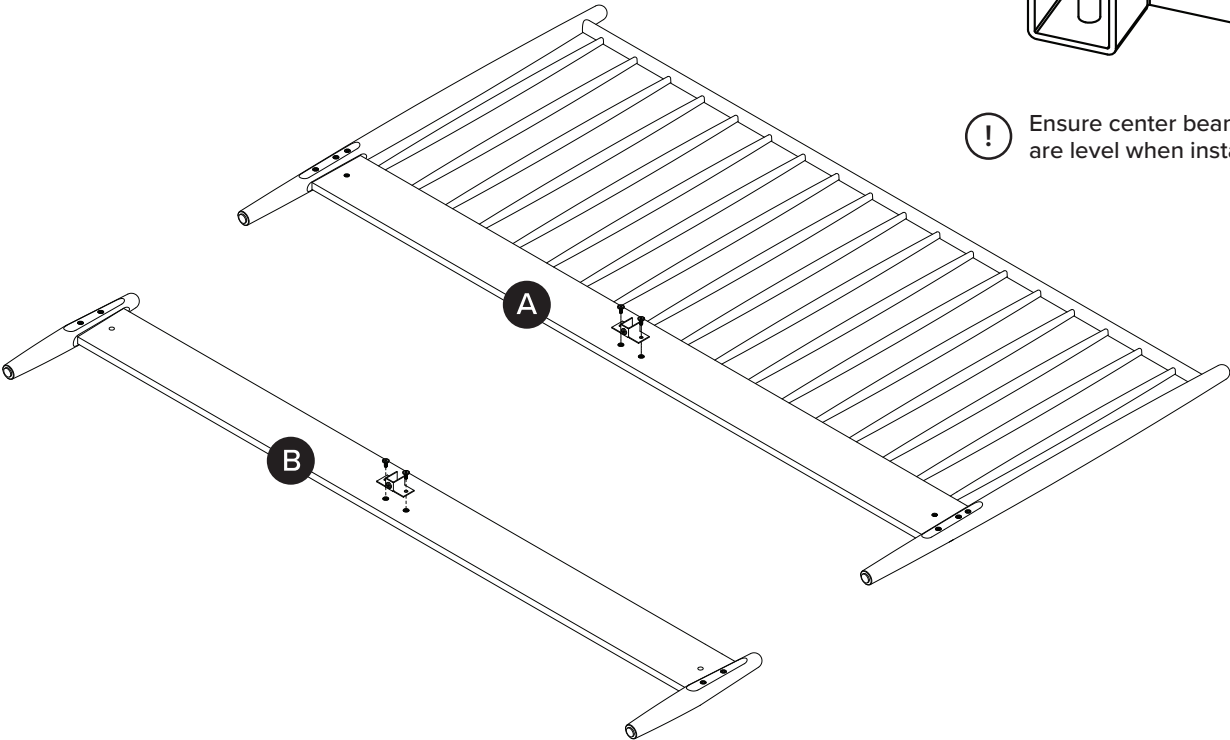


3

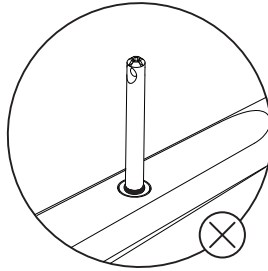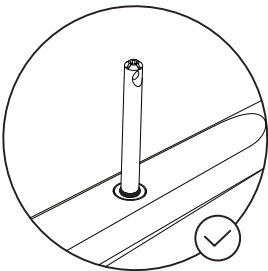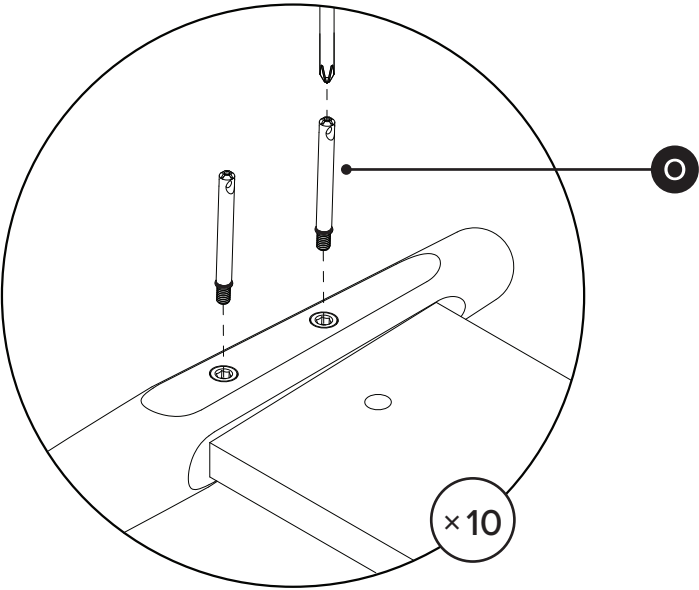
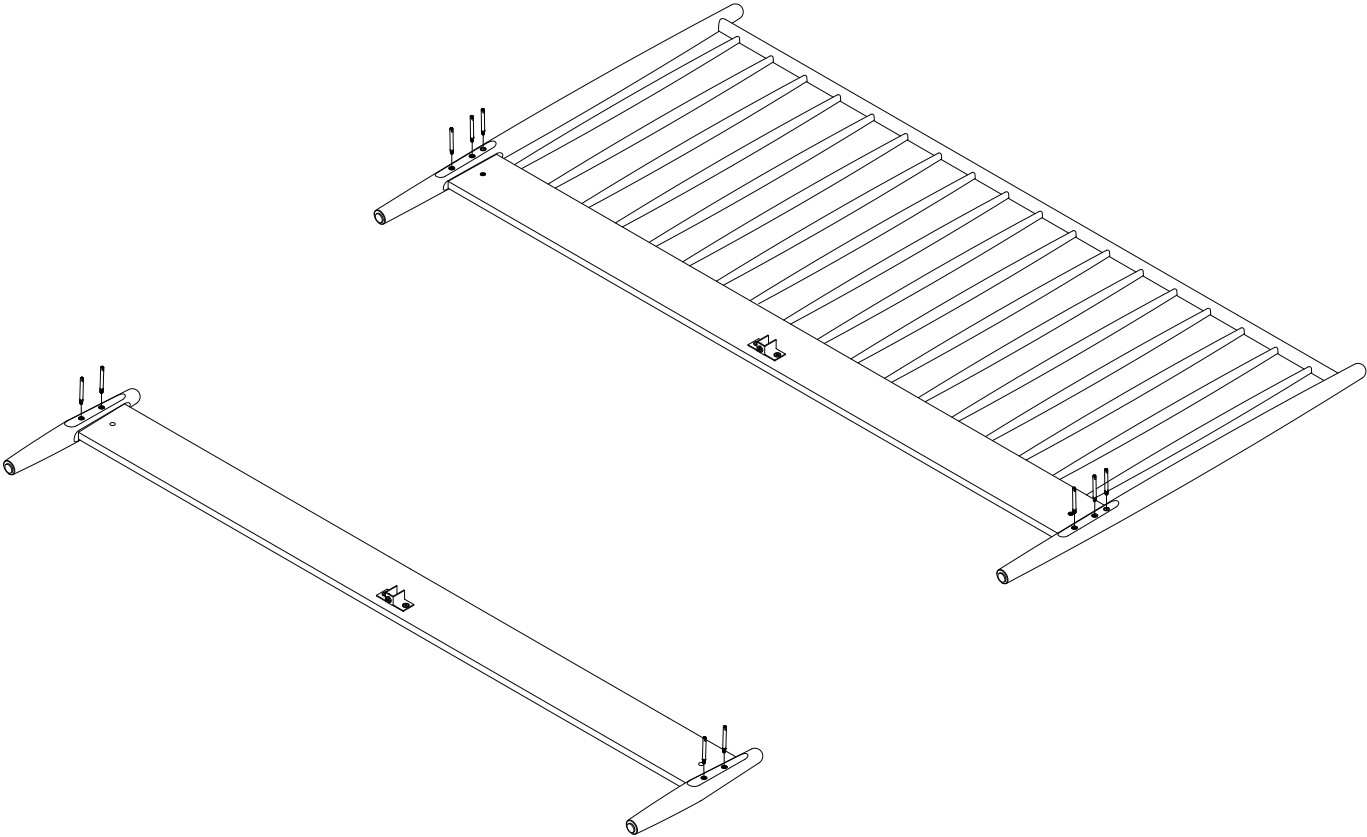


! Holes on compression fitting anchors (E) must be facing inwards on bed legs. Ensure rubber seal on anchors are tight.


4

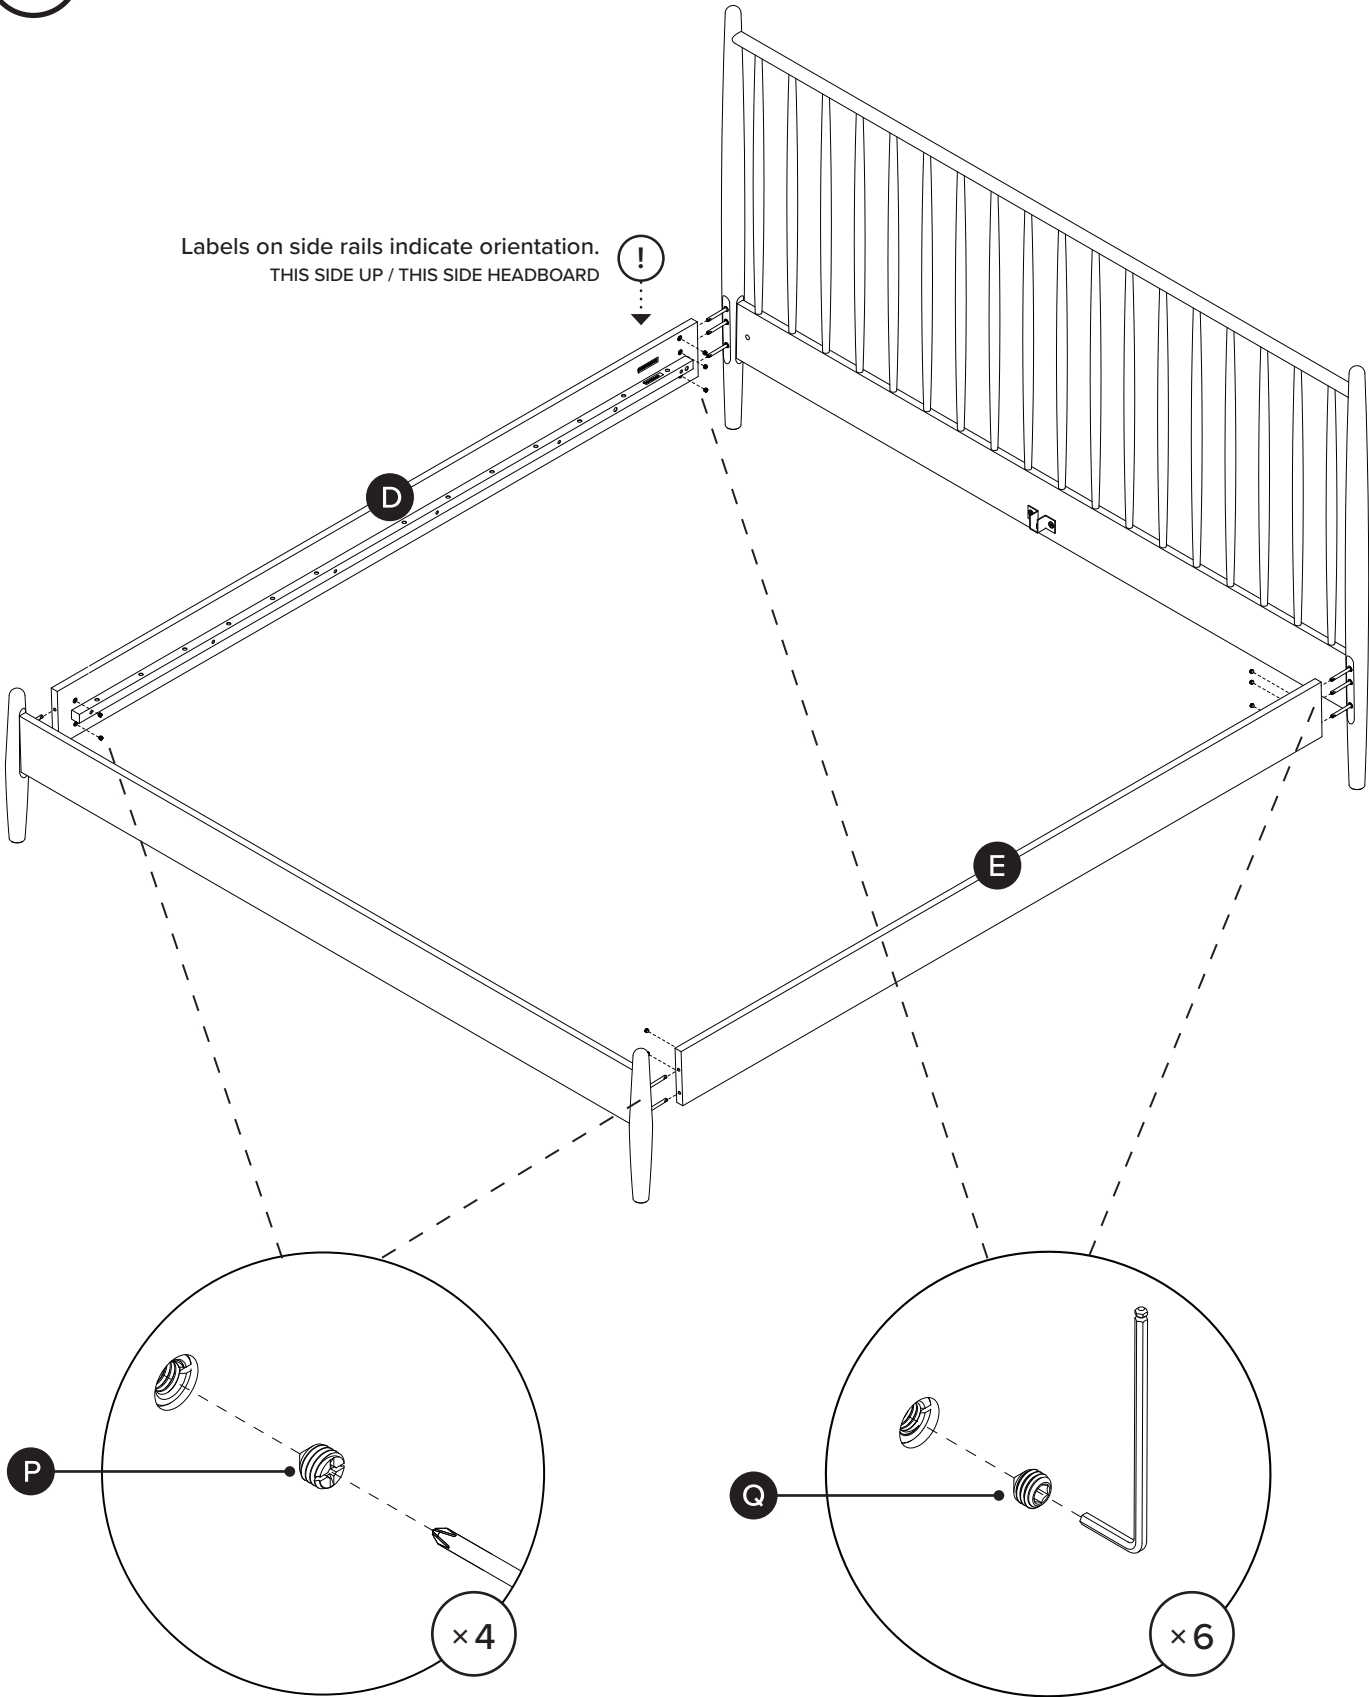

5

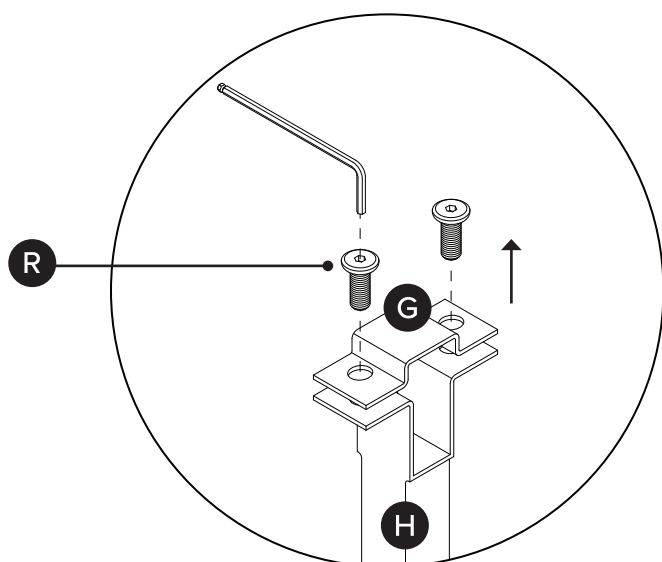
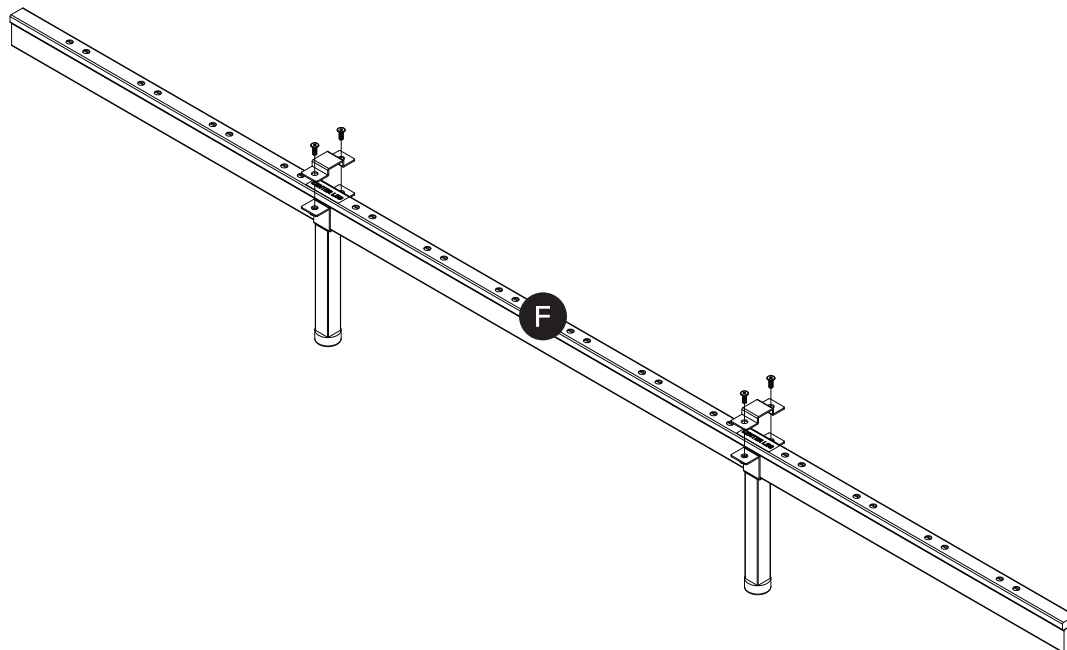


! Unscrew bolts (R) from center leg brackets (G) and floating center legs (H) before attaching to center beam (F).

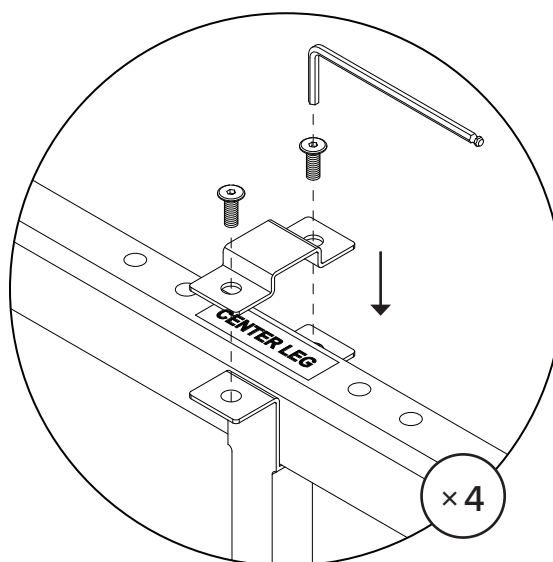


! Attach floating center legs (H) where labels are situated on center beam (F). Ensure that legs are straight, perpendicular to center beam.

6

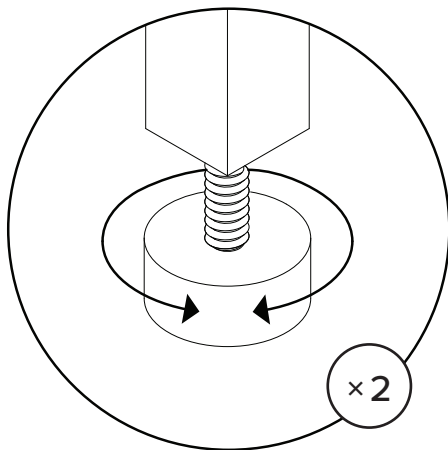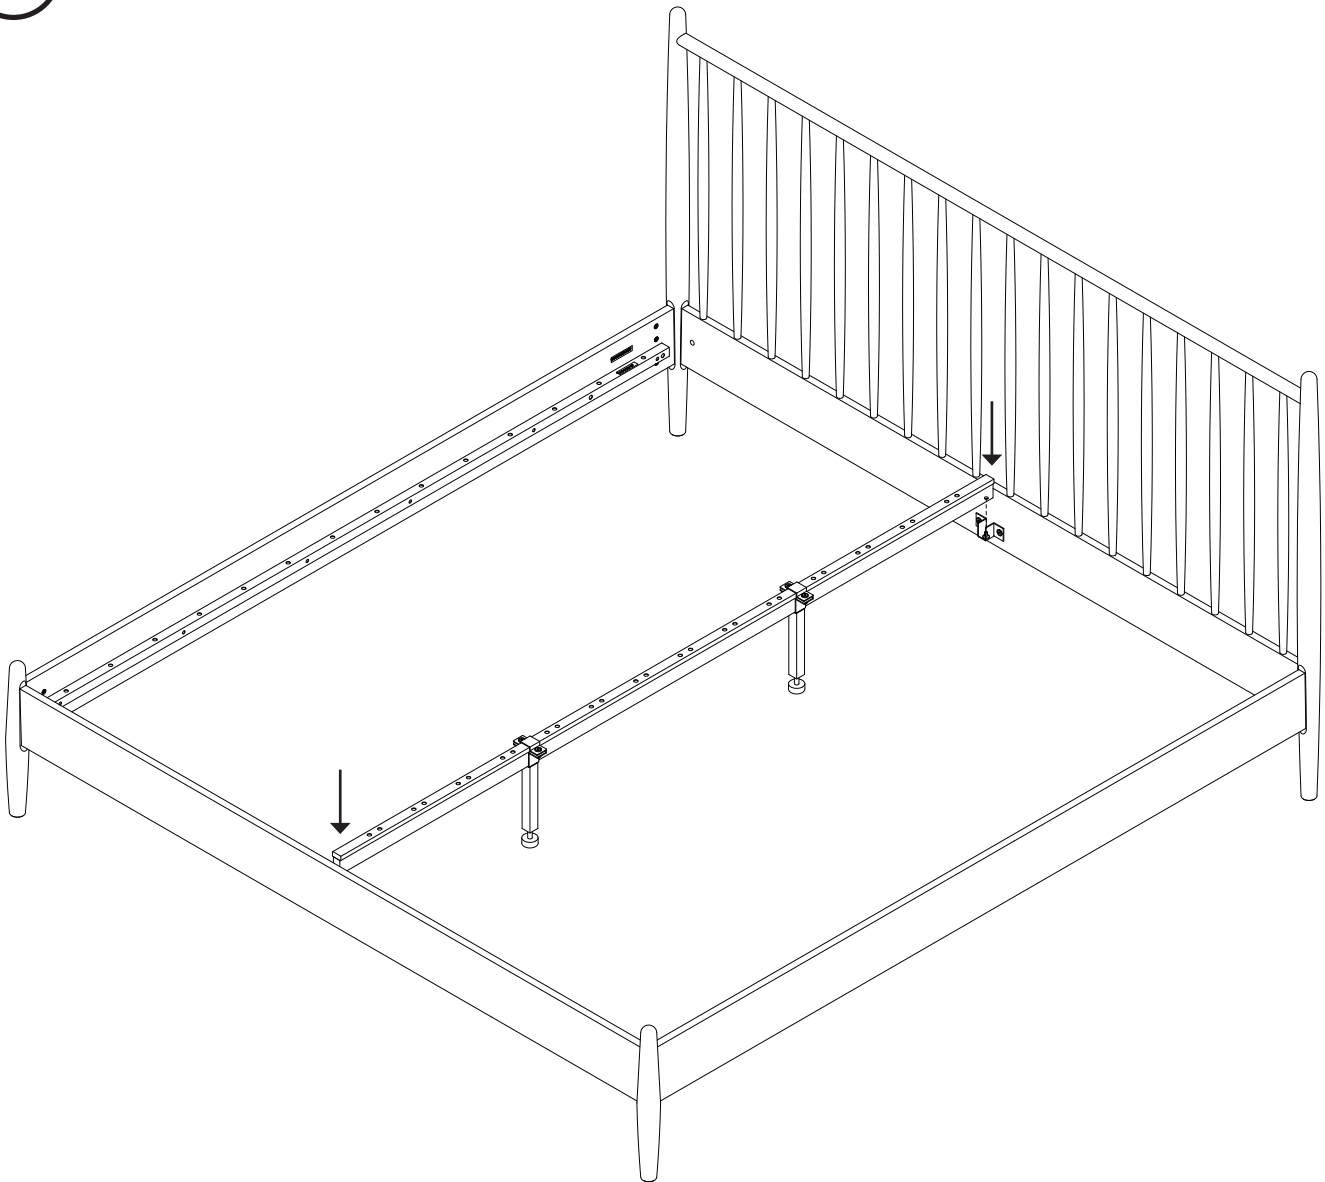


! Adjust levelers on floating center legs to allow for a 3-5mm clearance.

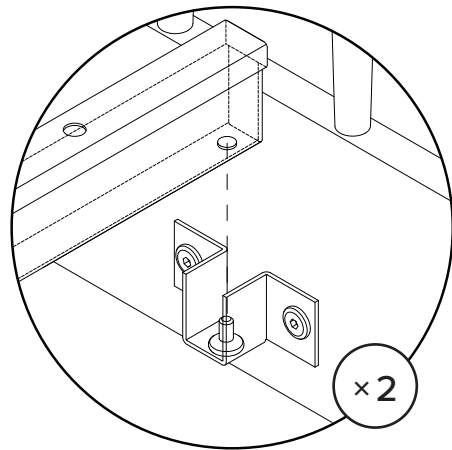


! Insert pins on center beam brackets into center beam when installing.


7A

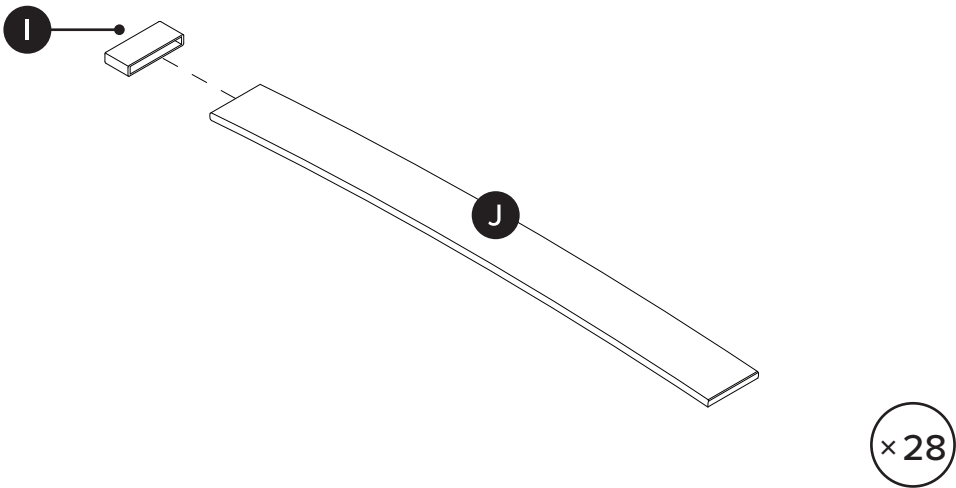


7B

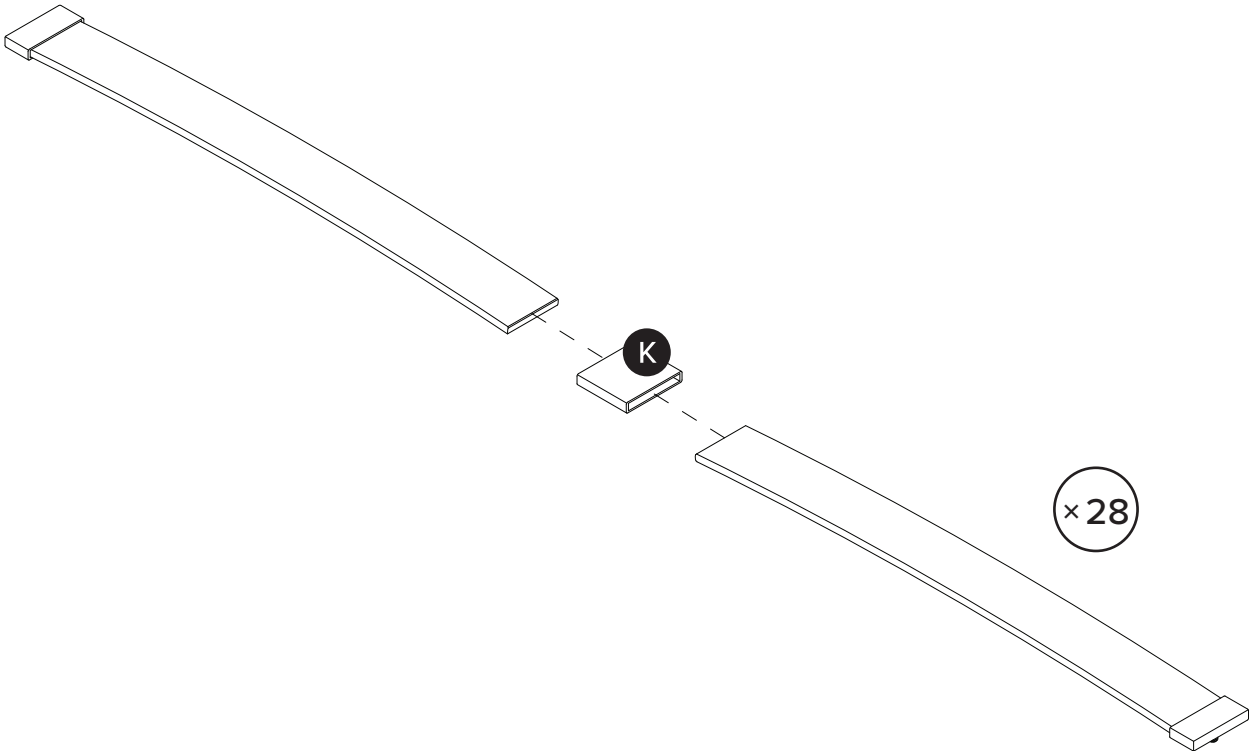

8

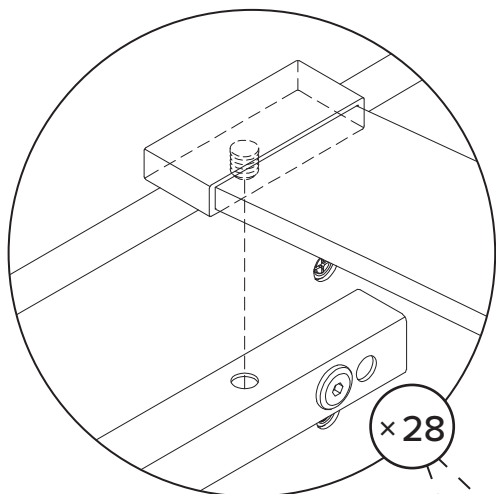

! First, firmly insert pins on
slat clips into side rails.

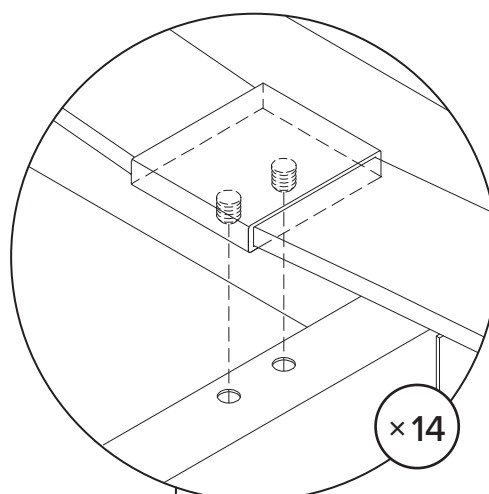

! Second, firmly insert pins on slat
center brackets into center beam.

